

**Honeywell**

---

**UDC 3000  
Universal Digital  
Controller  
Product Manual**

**51-52-25-07F**

**1/97**

**TotalPlant**

# Copyright, Notices, and Trademarks

---

Printed in U.S.A. – © Copyright 1997 by Honeywell Inc.

Rev. F

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customer.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

This document was prepared using Information Mapping® methodologies and formatting principles.

UDC 3000 is a trademark of Honeywell Inc.

Information Mapping is a trademark of Information Mapping Inc.

## Symbol Definitions

---



This CAUTION symbol on the equipment refers the user to the Product Manual for additional information. This symbol appears next to required information in the manual.



WARNING, risk of electric shock. This symbol warns the user of a potential shock hazard where HAZARDOUS LIVE voltages greater than 30 Vrms, 42.4 Vpeak, or 60 Vdc may be accessible.



Protective earth terminal. Provided for connection of the protective earth (green or green/yellow) supply system conductor.

Honeywell  
Industrial Automation and Control  
Automation College  
1100 Virginia Drive  
Fort Washington, Pa 19034

## About This Publication

---

### How this manual is organized

This Product Manual is divided into 12 sections numbered 1 through 12. These sections contain all the information you need to configure, operate, monitor, and troubleshoot your controller.

To find information quickly, use the comprehensive Table of Contents in the front of the manual and the Index located in the back of the manual.

---

### Warranty

The device described herein has been manufactured and tested for correct operation and is warranted as follows:

The UDC 3000 Universal Digital Controller carries a two year warranty.

This warranty includes immediate technical assistance via a toll free telephone number and complete replacement of the controller, if necessary.

---

### Technical Assistance

If you encounter a problem with your UDC 3000 controller, review all the configuration data under the Set-up groups to verify that your selections are consistent with your application; i.e. Inputs, Outputs, Alarms, Limits, etc. If the problem persists after checking the above, you can get **technical assistance** by dialing

1-800-423-9883 USA

1-800-461-0013 Canada

An engineer will discuss your problem with you. **Please have your complete model number, serial number, and Software version available.**

The model and serial numbers can be found on the chassis nameplate. The software version can be viewed under Setup Group "Status." See Table 9-2.

If it is determined that a hardware problem exists, a replacement controller or part will be shipped with instructions for returning the defective unit. Do not return your controller without authorization from Honeywell's Technical Assistance Center or until the replacement has been received.

For a list of frequently asked questions and their answers, dial Honeywell's **Faxback** 24 hour Service:

1-888-423-9883 USA

---





# Table of Contents

---

<b>SECTION 1 – OVERVIEW .....</b>	<b>1</b>
1.1 Introduction.....	1
1.2 Operator Interface.....	2
<b>SECTION 2 – INSTALLATION.....</b>	<b>5</b>
2.1 Overview.....	5
2.2 Model Number Interpretation .....	7
2.3 Mounting.....	8
2.4 Wiring.....	10
2.5 Wiring Diagrams .....	12
2.6 Control and Alarm Relay Contact Information.....	27
<b>SECTION 3 – CONFIGURATION .....</b>	<b>29</b>
3.1 Overview.....	29
3.2 Configuration Prompts .....	30
3.3 How To Get Started.....	32
3.4 Configuration Tips.....	33
3.5 Configuration Procedure.....	34
3.6 Timer Parameters Set Up Group.....	36
3.7 Tuning Parameters Set Up Group.....	37
3.8 SP Ramp/Program Set Up Group .....	39
3.9 Accutune Set Up Group .....	40
3.10 Algorithm Data Set Up Group .....	41
3.11 Input 1 Parameters Set Up Group.....	42
3.12 Input 2 Parameters Set Up Group.....	44
3.13 Control Parameters Set Up Group .....	45
3.14 Options Set Up Group.....	47
3.15 Communications Group.....	48
3.16 Alarms Set Up Group.....	49
3.17 Calib Group.....	51
3.18 Status Group .....	51
3.19 Configuration Record Sheet.....	52
<b>SECTION 4 – CONFIGURATION PROMPT DEFINITIONS .....</b>	<b>53</b>
4.1 Overview.....	53
4.2 Timer Parameters Set Up Group.....	54
4.3 Tuning Parameters Set Up Group.....	55
4.4 Setpoint Ramp/Program Set Up Group.....	58
4.5 Accutune Set Up Group .....	59
4.6 Algorithm Data Set Up Group .....	61
4.7 Input 1 Parameters Set Up Group.....	65
4.8 Input 2 Parameters Set Up Group .....	69
4.9 Control Parameters Set Up Group .....	71
4.10 Options Set Up Group.....	76
4.11 Communications Set Up Group .....	79
4.12 Alarms Set Up Group.....	81
4.13 Calibration Data.....	84
4.14 Status Test Data.....	84

*Continued on next page*

# Table of Contents

---

<b>SECTION 5 – OPERATION.....</b>	<b>85</b>
5.1 Overview.....	85
5.2 How to Power Up the Controller.....	86
5.3 Enter a Security Code.....	88
5.4 Monitoring Your Controller.....	89
5.5 Start-up.....	92
5.6 Operating Modes.....	93
5.7 Setpoints.....	96
5.8 Setpoint Rate.....	99
5.9 Single Setpoint Ramp.....	100
5.10 Using Two Set of Tuning Constants.....	103
5.11 Alarm Setpoints.....	106
5.12 Three Position Step Control Algorithm.....	107
5.13 Digital Input Option (Remote Switching).....	108
5.14 Auto/Manual Station.....	110
5.15 Fuzzy Overshoot Suppression.....	114
5.16 Accutune.....	115
<b>SECTION 6 – SETPOINT RAMP/SOAK PROGRAMMING OPTION.....</b>	<b>123</b>
6.1 Overview.....	123
6.2 Program Contents.....	124
6.3 Drawing a Ramp/Soak Profile.....	126
6.4 Entering the Setpoint Program Data.....	128
6.5 Run/Monitor the Program.....	131
<b>SECTION 7 – INPUT CALIBRATION.....</b>	<b>135</b>
7.1 Overview.....	135
7.2 Minimum and Maximum Range Values.....	136
7.3 Preliminary Information.....	137
7.4 Input #1 Set Up Wiring.....	139
7.5 Input #1 Calibration Procedure.....	145
7.6 Input #2 Set Up Wiring.....	147
<b>SECTION 8 – OUTPUT CALIBRATION.....</b>	<b>151</b>
8.1 Overview.....	151
8.2 Current Proportional Output Calibration.....	152
8.3 Position Proportional and Three Position Step Output Calibration.....	154
8.4 Auxiliary Output Calibration.....	158
<b>SECTION 9 – TROUBLESHOOTING / SERVICE.....</b>	<b>161</b>
9.1 Overview.....	161
9.2 Troubleshooting Aids.....	163
9.3 Power-up Tests.....	165
9.4 Status Tests.....	166
9.5 Background Tests.....	168
9.6 Controller Failure Symptoms.....	170
9.7 Troubleshooting Procedures.....	171
9.8 Parts Replacement Procedures.....	179
9.9 Maintenance.....	189
<b>SECTION 10 – PARTS LIST.....</b>	<b>191</b>
10.1 Exploded View.....	191

*Continued on next page*

# Table of Contents

---

<b>SECTION 11 – APPENDIX A – MANUAL TUNING.....</b>	<b>195</b>
11.1 Overview.....	195
11.2 Time, Position, or Current Proportional Simplex Control.....	196
11.3 Time Proportional Duplex or Current Proportional Duplex Control.....	198
11.4 Two Sets of Tuning Parameters .....	198
<b>SECTION 12 - APPENDIX B.....</b>	<b>199</b>
12.1 Overview.....	199
12.2 Potential Noise Sources.....	200
12.3 Prevention Methods .....	201
12.4 Recommended Wiring Practices .....	202
12.5 Power Source Considerations .....	204
12.6 Noise Suppression at the Source.....	205

# Figures

---

Figure 1-1	Operator Interface Displays and Indicators.....	2
Figure 2-1	Model Number Interpretation .....	7
Figure 2-2	Dimensions .....	8
Figure 2-3	Mounting Method .....	9
Figure 2-4	Composite Wiring Diagram.....	12
Figure 2-5	Line Voltage Wiring.....	13
Figure 2-6	Input #1 Connections.....	14
Figure 2-7	Input #2 Connections.....	15
Figure 2-8	Electromechanical Relay Output .....	16
Figure 2-9	Solid State Relay Output .....	17
Figure 2-10	Open Collector Output.....	18
Figure 2-11	Current Output.....	19
Figure 2-12	Position Proportional Output .....	20
Figure 2-13	Auxiliary Output Connections .....	21
Figure 2-14	Digital Inputs Connections.....	22
Figure 2-15	RS422/485 Communications Option Connections.....	23
Figure 2-16	DMCS Communications Option Connections.....	24
Figure 2-17	Transmitter Power for 4-20 mA 2-wire Transmitter Using Open Collector Alarm 2 Output.....	25
Figure 2-18	Transmitter Power for 4-20 mA 2-wire Transmitter Using Auxiliary Output.....	26
Figure 3-1	Overview of UDC 3000 Prompt Hierarchy.....	30
Figure 5-1	Operator Interface.....	89
Figure 5-2	Auto/Manual Station and Backup Control Feature .....	110
Figure 6-1	Ramp/Soak Profile Example.....	126
Figure 6-2	Program Record Sheet.....	127
Figure 7-1	Input #1 and #2 Wiring Terminals.....	137
Figure 7-2	Wiring Connections for Thermocouple Inputs Using an Ice Bath.....	139
Figure 7-3	Wiring Connections for Thermocouple Inputs Using a Precision Resistor.....	140
Figure 7-4	Wiring Connections for RTD (Resistance Thermometer Device) .....	141
Figure 7-5	Wiring Connections for Radiomatic, MVs, Volts (except 0 to 10 Volts) .....	142
Figure 7-6	Wiring Connections for 0 to 10 Volt inputs .....	143
Figure 7-7	Wiring Connections for 4 to 20 mA inputs .....	144
Figure 7-8	Wiring Connections for 4 to 20 mA input – Input #2 .....	147
Figure 7-9	Wiring Connections for 1 to 5 Volt input – Input 2 .....	148
Figure 8-1	Wiring Connections for Calibrating Current Proportional Output .....	152
Figure 8-2	Wiring Connections for Calibrating Auxiliary Output .....	158
Figure 9-1	Chassis Removal.....	180
Figure 9-2	Display/Keyboard Replacement.....	181
Figure 9-3	Removing the Printed Wiring Boards.....	182
Figure 9-4	Printed Wiring Board Identification.....	183
Figure 10-1	UDC 3000 Exploded View .....	191
Figure 12-1	Transformer for Digital Equipment .....	204
Figure 12-2	Transient Suppression in Inductive Coils .....	206
Figure 12-3	Contact Noise Suppression.....	207
Figure 12-4	DC Load Noise Suppression.....	208

# Tables

Table 1-1	Function of Keys.....	3
Table 2-1	Operating Limits.....	6
Table 2-2	Permissible Wiring Bundling .....	11
Table 2-3	Universal Output Wiring Functionality and Restrictions.....	19
Table 2-4	Control Relay Contact Information .....	27
Table 3-1	Configuration Tips.....	33
Table 3-2	Configuration Procedure .....	34
Table 3-3	Timer Group Function Prompts .....	36
Table 3-4	Tuning Group Function Prompts .....	38
Table 3-5	SP Ramp Group Function Prompts.....	39
Table 3-6	Accutune Group Function Prompts .....	40
Table 3-7	Algorithm Group Function Prompts .....	41
Table 3-8	Input 1 Group Function Prompts .....	42
Table 3-9	Input 2 Group Function Prompts .....	44
Table 3-10	Control Group Function Prompts.....	45
Table 3-11	Options Group Function Prompts.....	47
Table 3-12	Com Group Function Prompts.....	48
Table 3-13	Alarms Group Function Prompts.....	49
Table 4-1	Timer Group Prompt Definitions .....	54
Table 4-2	Tuning Group Prompt Definitions .....	55
Table 4-3	Setpoint Ramp/Rate/Program Group Definitions .....	58
Table 4-4	Accutune Group Definitions.....	59
Table 4-5	Algorithm Group Definitions .....	61
Table 4-6	Input 1 Group definitions .....	65
Table 4-7	Input 2 Group Definitions .....	69
Table 4-8	Control Group Definitions .....	71
Table 4-9	Option Group Definitions .....	76
Table 4-10	Communications Group Definitions .....	79
Table 4-11	Alarms Group Definitions .....	81
Table 5-1	Power Up Diagnostic Tests.....	86
Table 5-2	Procedure for Testing the Displays and Keys.....	87
Table 5-3	Procedure for Entering a Security Code .....	88
Table 5-4	Lower Display Key Parameter Prompts .....	90
Table 5-5	Error Messages.....	91
Table 5-6	Procedure for Starting Up the Controller.....	92
Table 5-7	Operating Mode Definitions.....	93
Table 5-8	Changing Operating Modes.....	93
Table 5-9	Procedure for Selecting Automatic or Manual Mode .....	94
Table 5-10	Procedure for Selecting the Local Setpoint Source.....	96
Table 5-11	Procedure for Changing the Local Setpoints .....	96
Table 5-12	Procedure for Enabling (or disabling) the Remote Setpoint.....	97
Table 5-13	Procedure for Switching Between Setpoints .....	97
Table 5-14	Setpoint Selection Indication.....	98
Table 5-15	Procedure for Configuring a Setpoint Ramp.....	100
Table 5-16	Procedure for Running a Setpoint Ramp .....	101
Table 5-17	Procedure for Selecting Two Set of Tuning Constants .....	103
Table 5-18	Procedure for Setting Switchover Values .....	104
Table 5-19	Procedure for Setting Tuning Constant Values.....	104
Table 5-20	Procedure for switching PID SETS from the Keyboard.....	105
Table 5-21	Procedure for Displaying or Changing the Alarm Setpoints .....	106
Table 5-22	Procedure for Displaying the 3PSTEP Motor Position .....	107
Table 5-23	Digital Input Option Action on Contact Closure.....	108
Table 5-24	Auto/Manual Station Mode Configuration Procedure.....	112
Table 5-25	Rules and Regulations for Accutune .....	115
Table 5-26	Procedure for Starting Demand Tuning .....	116
Table 5-27	Procedure for Using TUNE at Start-up for Duplex .....	117
Table 5-28	Procedure for Using SP Tuning at Start-up .....	118
Table 5-29	Procedure for Using SP Tuning at Start-up for Duplex .....	119
Table 5-30	Accutune Error Code Definitions.....	121

*Continued on next page*

# Tables

---

Table 6-1	Setpoint Program Data Entry Procedure .....	128
Table 6-2	Prompt Hierarchy and Available Selections .....	129
Table 6-3	Run/Monitor Functions.....	131
Table 7-1	Voltage and Resistance Equivalents for 0% and 100% Range Values	136
Table 7-2	Equipment Needed .....	138
Table 7-3	Set Up Wiring Procedure for Thermocouple Inputs Using An Ice Bath	139
Table 7-4	Set Up Wiring Procedure for Thermocouple Inputs Using a Precision Resistor.....	140
Table 7-5	Input #1 Calibration Procedure.....	145
Table 7-6	Input #2 Calibration Procedure.....	149
Table 8-1	Set Up Wiring Procedure Current Proportional Output.....	152
Table 8-2	Current Proportional Output Calibration Procedure .....	153
Table 8-3	Position Proportional and 3 Position Step Output Calibration Procedure .....	155
Table 8-4	Set Up Wiring Procedure for Auxiliary Output.....	158
Table 8-5	Auxiliary Output Calibration Procedure .....	159
Table 9-1	Error Message Prompts.....	163
Table 9-2	Procedure for Identifying the Software Version.....	164
Table 9-3	Power-up Tests .....	165
Table 9-4	Procedure for Displaying the Status Tests Results .....	166
Table 9-5	Status Tests .....	167
Table 9-6	Background Tests.....	168
Table 9-7	Controller Failure Symptoms.....	170
Table 9-8	Troubleshooting Power Failure Symptoms .....	171
Table 9-9	Troubleshooting Current Proportional Output Failure .....	172
Table 9-10	Troubleshooting Position Proportional Output Failure.....	173
Table 9-11	Troubleshooting Time Proportional Output Failure.....	174
Table 9-12	Troubleshooting Time/Current or Current/Time Proportional Output Failure.....	175
Table 9-13	Troubleshooting Alarm Relay Output Failure .....	176
Table 9-14	Troubleshooting a Keyboard Failure.....	177
Table 9-15	Troubleshooting a Communications Failure .....	178
Table 9-16	How to Remove the Chassis .....	180
Table 9-17	Display/Keyboard Assembly Replacement Procedure.....	181
Table 9-18	Printed Wiring Board Removal from Chassis .....	182
Table 9-19	Second Input Board Replacement Procedure.....	184
Table 9-20	Power Input Board Replacement Procedure .....	185
Table 9-21	Digital Input Board Replacement Procedure.....	186
Table 9-22	Aux.Out/Communications Board Replacement Procedure .....	187
Table 9-23	MCU/Output Board Replacement Procedure .....	188
Table 10-1	Parts Identification.....	192
Table 10-2	Parts Not Shown.....	193
Table 11-1	Manual Tuning Procedure for Simplex Control .....	196
Table 11-2	Manual Tuning Formulas.....	197
Table 12-1	External Wiring.....	202
Table 12-2	MOV Devices.....	205
Table 12-3	Coil Voltage vs Resistor Voltage Rating .....	206

## Acronyms

---

3PSTEP	3 Postion Step Control
DMCS	Distributed Manufacturing Control System
EMI	electromagnetic interference
HID	high intensity discharge
MOVs	Metal Oxide Varistors
NC	normally closed
NO	normally open
PID	Proportional, Integral, and Derivative
RC	resistance-capacitance
RFI	radio frequency interference
RH	Relative Humidity
RTD	Resistance Thermometer Device
SCRs	Silicon controlled rectifiers
UDC	Universal Digital Controller

## Parameters

---

2IN	Input 2
2SP	Local Setpoint 2
A1S1 EV	SP Programming Event Alarm State for Alarm 1, Setpoint 1
A1S1 VAL	Alarm 1, Setpoint 1
A1S1TYPE	Alarm 1, Setpoint 1 Type
A1S2 EV	SP Programming Event Alarm State for Alarm 1, Setpoint 2
A1S2 HL	Alarm 1, Setpoint 2 State
A1S2 VAL	Alarm 1, Setpoint 2
A1S2TYPE	Alarm 1, Setpoint 2 Type
A2S1 EV	SP Programming Event Alarm State for Alarm 2, Setpoint 1
A2S1 HL	Alarm 2, Setpoint 1 State
A2S1 VAL	Alarm 2, Setpoint 1
A2S1TYPE	Alarm 2, Setpoint 1
A2S2 EV	SP Programming Event Alarm State for Alarm 2, Setpoint 2
A2S2 HL	Alarm 2, Setpoint 2 State
A2S2 VAL	Alarm 2, Setpoint 2
A2S2TYPE	Alarm 2, Setpoint 2 Type
ACTION	Control Output Direction
ACCUTUNE	Accutune Tuning
AL HYST	Alarm Hysteresis
AM STA	Auto Manual Station mode
AT ERROR	Adaptive Tune Error codes
AUTO	Lower display automatically displays setpoint value in engineering units
AUTO MAN	Manual/Auto Key Lockout
AUX OUT	Auxiliary Output Representation
BAUD	Baud Rate
BIA	Output Bias/Manual Reset value
BIAS IN1	Input 1 Bias
CAL MTR	suggests that the controller be calibrated
CAL TEST	Calibration test failure
Com ADDR	Communications Station Address
ComSTATE	Communications Option State
CONF ERR	configuration error
CONFTEST	Configuration test failure
CONT ALG	Control Algorithm
CRITERIA	Tuning Criteria

## Parameters, continued

---

CSP.....	Computer Setpoint Override
CYC SEC.....	Cycle Time
CYC2 SEC.....	Cycle Time 2 (Cool)
DEADBAND.....	Output Relay Deadband
DEV.....	Deviation
DIG 1 COM.....	Digital Input 1 Combinations
DIG 2 COM.....	Digital Input 2 Combinations
DIG IN 1.....	Digital Input 1 selections
DIG IN 2.....	Digital Input 2 selections
DROPOFF.....	Controller Dropoff Value
DUPLEX.....	Duplex Operation
E E FAIL.....	Unable to write to non-volatile memory
EMSSIV.....	Emissivity
END SEG.....	End Segment Number
ET.....	Elapsed time
EU/HR DN.....	Rate Down Value
EU/HR UP.....	Rate Up Value
FACT CRC.....	Factory Calibration Cyclic Redundancy test
FAILSAFE.....	Controller in Failsafe
FAILSAFE.....	Failsafe Output Value
FILTER 1.....	Input 1 Filter
FILTER2.....	Input 2 Filter
FINAL SP.....	Single Setpoint Final Setpoint
FUZZY.....	Fuzzy Overshoot Supression
GAIN.....	Gain
GAIN2.....	Gain 2
IN1 HI.....	Input 1 High Range Value
IN1 LO.....	Input 1 Low Range Value
IN1 TYPE.....	Input 1 Actuation Type
IN2HI.....	Input 2 High Range Value
IN2LO.....	Input 2 Low Range Value
INP1 RNG.....	Input 1 Out of Range
INP1FAIL.....	Two consecutive failures of Input 1 integration
INP2 RNG.....	Input 2 Out of Range
INP2FAIL.....	Two consecutive failures of Input 2 integration
KPG.....	Process Gain
L DISP.....	Lower Display Selection
LOCKOUT.....	Configuration Lockout
LOOPBACK.....	Local Loop Back
MAN.....	Lower display automatically indicates output in %
MAN RSET.....	Manual Reset
MINorRPM.....	Reset Units
OUT ALG.....	Output Algorithm
OUT HYST.....	Output Relay Hysteresis
OUT.....	Output value
OUT RATE.....	Output Change Rate
OUTHILIM.....	High Output Limit
OUTLOLIM.....	Low Output Limit
PARITY.....	Parity
PBorGAIN.....	Proportional Band or Gain Units
PCT/MIN.....	Output Rate
PERIOD.....	Timeout Period
PID SETS.....	Tuning Parameter Sets
PIDSETX.....	Tuning Parameter Set
POS.....	Motor Position
PROG END.....	Program Termination State
PROP BD.....	Proportional Band
PROP BD2.....	Proportional Band 2



## Parameters, continued

---

PV LIMIT	PV Out of Range
PWR FREQ	Power Line Frequency
RAM TEST	RAM test failed
RAMPUNIT	Engineering units for ramp segments
RAMPXXOM	Minutes remaining in Setpoint Ramp
RATE MIN	Rate in Minutes
RATE2MIN	Rate 2 in Minutes
RECYCLES	Number of Program Recycles
RLY TYPE	Output Relay Type
RSET MIN	Reset in minutes/repeat
RSET RPM	Reset in repeats/minute
RSET2MIN	Reset 2 in minutes/repeat
RSET2RPM	Reset 2 in repeats/minute
RSP	Remote Setpoint
RSP SRC	Remote Setpoint Source
RUN HOLD	Run/Hold key
RV LIMIT	Remote Variable Out of Range
SECURITY	Security Code
SEG 1 RATE	Segment #1 Ramp Rate
SEG 1 RAMP	Segment #1 Ramp Time
SHED SP	Shed Setpoint Recall
SHEDMODE	Shed Controller Mode and Output Level
SHEDTIME	Shed Time
SOAK DEV	Guaranteed Soak Deviation Value
SP CHANG	Setpoint Change
SP HILIM	Setpoint High Limit
SP	Local Setpoint 1
SP LOLIM	Setpoint Low Limit
SP PROG	Setpoint Programming
SP PROG	Setpoint Ramp/Soak Programming
SP RAMP	Setpoint Ramp selection
SP RAMP	Single Setpoint Ramp
SP RATE	Setpoint Rate
SP SEL	Setpoint Select
SP SOURC	Local Setpoint Source
SP TRACK	Local Setpoint Tracking
SPn	Setpoint Now
STATE	Program state at program end
STRT SEG	Start Segment Number
SW FAIL	Auto Calibration never performed
SW FAIL	Position Proportional slidewire input failure
SW VALUE	Automatic Switchover Value
TIME MIN	Single Setpoint Ramp Time
TIMER	Timer Enable/Disable
TR	Time remaining
TX DELAY	Transmission Delay
UNITS	Communication Units
XMITTER	Transmitter Characterization
XMITTER2	Transmitter Characterization Input 2

# References

---

<b>Publication Title</b>	<b>Publication Number</b>
<i>UDC 3000 Limit Controller</i>	51-52-25-09
<i>UDC 3000/UDC5000/UDC6000 RS422/485 Communications Option Manual</i>	51-51-25-35
<i>UDC 3000 DMCS Communications Option Section of the Gateway Manual</i>	82-50-10-23
<i>UDC3000 Controller Specification Sheet</i>	51-52-03-07 Dial 1-888-423-9883

# Section 1 – Overview

## 1.1 Introduction

---

<b>Function</b>	<p>The UDC 3000 Universal Digital Controller is a microprocessor-based stand alone controller. It combines the highest degree of functionality and operating simplicity offered in a 1/4 DIN size controller.</p> <p>With a typical accuracy of <math>\pm 0.20\%</math> of span, the UDC 3000 is an ideal controller for regulating temperature and other process variables in numerous heating and cooling applications, in metal working, food, and pharmaceuticals, and testing and environmental work.</p>
<b>Easy to read displays</b>	<p>The dedicated vacuum fluorescent displays with English prompts make the operator interface easy to read, understand and operate.</p> <p>Programmed sequences of displays assure quick and accurate entry of all configurable parameters.</p>
<b>Easy to operate</b>	<p>Simple keystrokes let you select input and range configuration, set the operating parameters that meet your process control needs now, and change them later to meet new ones.</p> <p>The tactile keyboard provides positive operator feedback. Self diagnostics, fault tolerant design and keyboard security provide maximum assurance of trouble-free operation.</p>
<b>Mount anywhere</b>	<p>The UDC is industrial control equipment that must be panel mounted. The wiring terminals must be enclosed within the panel. The UDC is environmentally hardened and, when suitably enclosed, can be mounted virtually anywhere in plant or factory; on the wall, in a panel, or even on the process machine. It withstands ambient temperatures up to <math>55^{\circ}\text{C}</math> (<math>133^{\circ}\text{F}</math>) and resists the effects of vibration and mechanical shock.</p>
<b>CE Conformity (Europe)</b>	<p>This product is in conformity with the protection requirements of the following European Council Directives: <b>73/23/EEC</b>, the Low Voltage Directive, and <b>89/336/EEC</b>, the EMC Directive. Conformity of this product with any other “CE Mark” Directive(s) shall not be assumed.</p> <p>Deviation from the installation conditions specified in this manual, and the special conditions for CE conformity in Section 2.1, may invalidate this product’s conformity with the Low Voltage and EMC Directives.</p>

---


### ATTENTION

The emission limits of EN 50081-2 are designed to provide reasonable protection against harmful interference when this equipment is operated in an industrial environment. Operation of this equipment in a residential area may cause harmful interference. This equipment generates, uses, and can radiate radio frequency energy and may cause interference to radio and television reception when the equipment is used closer than 30 meters (98 feet) to the antenna(e). In special cases, when highly susceptible apparatus is used in close proximity, the user may have to employ additional mitigating measures to further reduce the electromagnetic emissions of this equipment.

# 1.2 Operator Interface

**Displays and Indicators** Figure 1-1 shows the operator interface and defines the displays and indicators. The function of the keys is shown in Table 1-1.

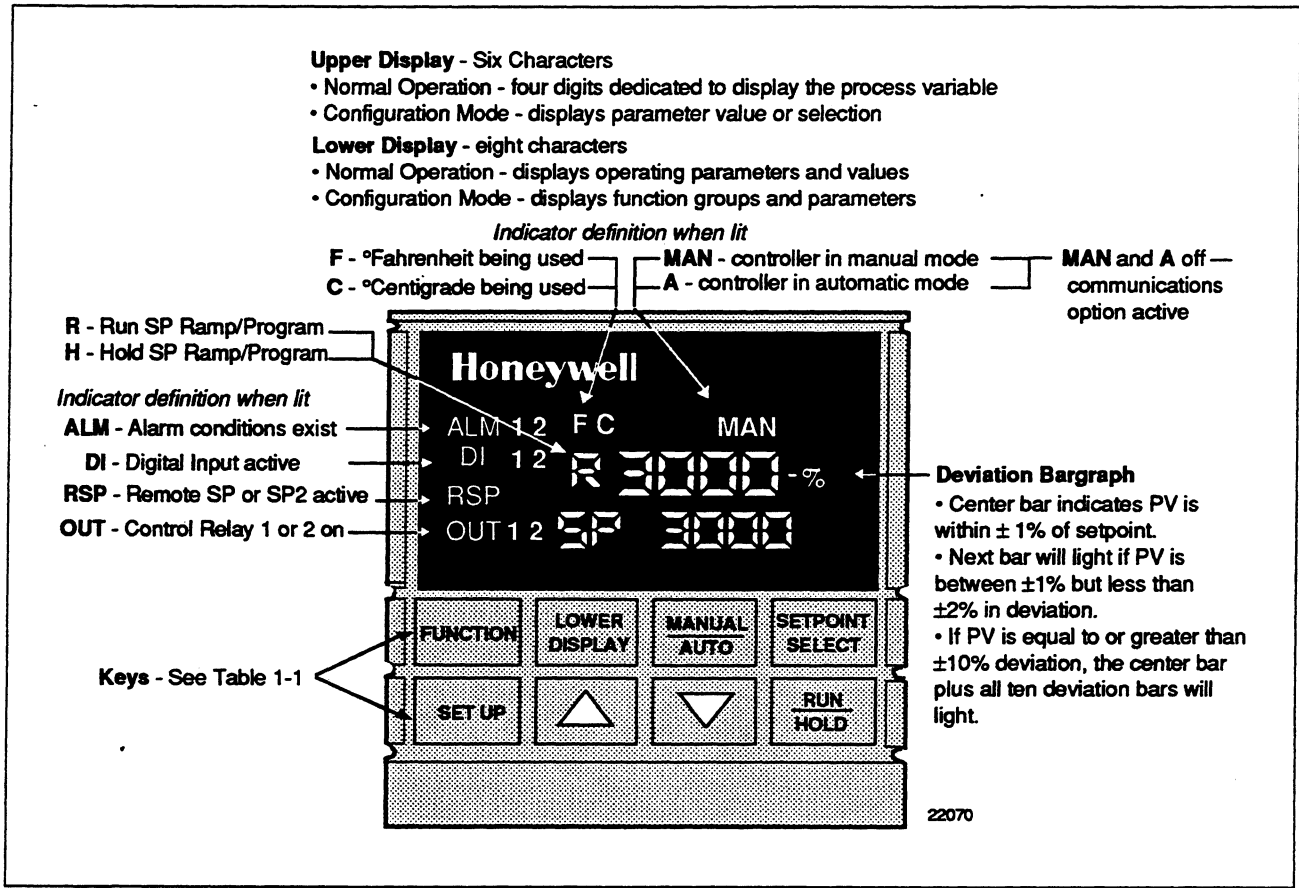Figure 1-1 Operator Interface Displays and Indicators



Continued on next page

## 1.2 Operator Interface, Continued

### Function of keys

Table 1-1 shows each key on the operator interface and defines its function.  
 Table 1-1 Function of Keys




Key	Function
<div style="border: 1px solid black; padding: 5px; text-align: center;">SET UP</div>	<ul style="list-style-type: none"> <li>Places the controller in the Configuration Set Up group select mode. Sequentially displays Set Up groups and allows the <b>FUNCTION</b> key to display individual functions in each Set Up group.</li> </ul>
<div style="border: 1px solid black; padding: 5px; text-align: center;">FUNCTION</div>	<ul style="list-style-type: none"> <li>Used in conjunction with the <b>SET UP</b> key to select the individual functions of a selected Configuration Set Up group.</li> <li>Used during field calibration procedure.</li> </ul>
<div style="border: 1px solid black; padding: 5px; text-align: center;">LOWER DISPLAY</div>	<ul style="list-style-type: none"> <li>Selects an operating parameter to be shown in the lower display:           <ul style="list-style-type: none"> <li>SP = Local Setpoint 1</li> <li>2SP = Local Setpoint 2</li> <li>RSP = Remote Setpoint</li> <li>2IN = Input 2</li> <li>DEV = Deviation</li> <li>RAMPXXOM = Minutes remaining in Setpoint Ramp</li> <li>PIDSETX = Tuning Parameter Set X=1 or 2</li> <li>OUT = Output value*</li> <li>CSP = Computer Setpoint Override</li> <li>SPn = Setpoint Now (for setpoint rate)</li> <li>POS = 3 Position Step motor position when slidewire is connected</li> <li>BIA = Output Bias/Manual Reset value</li> <li>ET_XX.XX = Elapsed time</li> <li>TR_XX.XX = Time remaining</li> <li>TUNE OFF = Appears when Accutune is disabled</li> <li>TUNE RUN = Press ▲ to initiate Accutune Display will read TUNE RUN</li> </ul> </li> <li>* or estimated 3 Position Step motor position when no slidewire exists.</li> </ul>
<div style="border: 1px solid black; padding: 5px; text-align: center;">MANUAL AUTO</div>	<ul style="list-style-type: none"> <li>Alternately selects:           <ul style="list-style-type: none"> <li>AUTO Lower display automatically displays setpoint value in engineering units.</li> <li>MAN Lower display automatically indicates output in %.</li> </ul> </li> </ul>
<div style="border: 1px solid black; padding: 5px; text-align: center;">SETPOINT SELECT</div>	<ul style="list-style-type: none"> <li>Alternately selects Local Setpoint 1 and Remote Setpoint or between the two local setpoints.</li> </ul>

*Continued on next page*

## 1.2 Operator Interface, Continued

### Function of keys (continued)

Table 1-1 Function of Keys, Continued

Key	Function
	<ul style="list-style-type: none"><li>• Alternate action switch initiates or holds the Setpoint Ramp or Setpoint Program.</li><li>• Restores the original value or selection if you do not want to enter a change you are making to a parameter.</li></ul>
	<ul style="list-style-type: none"><li>• Increases the setpoint, output, or configuration values displayed.</li></ul>
	<ul style="list-style-type: none"><li>• Decreases the setpoint, output, or configuration values displayed.</li></ul>

## Section 2 – Installation

### 2.1 Overview

#### Introduction

Installation of the UDC 3000 Controller consists of mounting and wiring the controller according to the instructions given in this section. Read the pre-installation information, check the model number interpretation and become familiar with your model selections, then proceed with installation.

#### What's in this section?

This section contains the following information:

	Topic	See Page
2.1	Overview	5
	Pre-installation information	6
	CE Conformity	6
	Operating Limits	6
	Accuracy	6
2.2	Model Number Interpretation	7
2.3	Mounting	8
	Physical Considerations	8
	Overall Dimensions	8
	Mounting Procedure	9
2.4	Wiring	10
	Electrical Considerations	10
	Controller Grounding	10
	Control/Alarm Circuit Wiring	10
	Taking Electrical Noise Precautions	10
	Permissible Wire Bundling	11
	Identify Your Wiring Requirements	11
	Wiring the Controller	11
2.5	Wiring Diagrams	12
	Composite Wiring Diagram	12
	AC Line Voltage	13
	Input #1	14
	Input #2	15
	Relay Output	16
	Electromechanical	16
	Solid State	17
	Open Collector	18
	Current Output/Universal Output	19
	Position Proportional Output	20
	Auxiliary Output	21
	Digital Inputs	22
	Communications	23
	RS422/485	23
DMCS	24	
Transmitter Power for 4-20 mA 2-wire Transmitter		
Using Open Collector Alarm 2 Output	25	
Using Auxiliary Output	26	
2.6	Control and Alarm Relay Contact Information	27

*Continued on next page*

## 2.1 Overview, Continued

### Pre-Installation Information

If the controller has not been removed from its shipping carton, inspect the carton for damage and remove the controller. Inspect the unit for any obvious shipping damage and report any damage due to transit to the carrier.

Make sure a bag containing mounting hardware is included in the carton with the controller.

Check that the model number shown on the inside of the case agrees with what you have ordered.

### CE Conformity special conditions (Europe)

Shielded twisted pair cables are required for all Analog I/O, Process Variable, RTD, Thermocouple, dc millivolt, low level signal, 4-20 mA, Digital I/O, and computer interface circuits. Refer to the Severe Electrical Noise Environments Appendix for additional information.

### Operating limits

We recommend that you review and adhere to the operating limits listed in Table 2-1 when you install your controller.

Table 2-1 Operating Limits

Condition	Specifications
Ambient Temperature	32 to 131°F (0 to 55°C)
Relative Humidity	5 to 90% RH at 40°C (104°F)
Vibration Frequency Acceleration	0 to 200 Hz 0.2g
Mechanical Shock Acceleration Duration	5g 30 ms
Power 90 to 264Vac	90 to 264 Vac 50/60 Hz (CSA models rated to 250V Maximum)
24Vac/dc	20 to 27Vac 50/60 Hz 20 to 27Vdc 0 Hz
Power Consumption	18VA Maximum

### Accuracy

± 0.20% of span typical (± 1 digit for display)  
15 bit resolution typical




## 2.2 Model Number Interpretation

### Model number

The model number interpretation is shown in Figure 2-1. Write the model number into the spaces provided and compare it to the model number interpretation. This information will also be useful when you wire your controller.

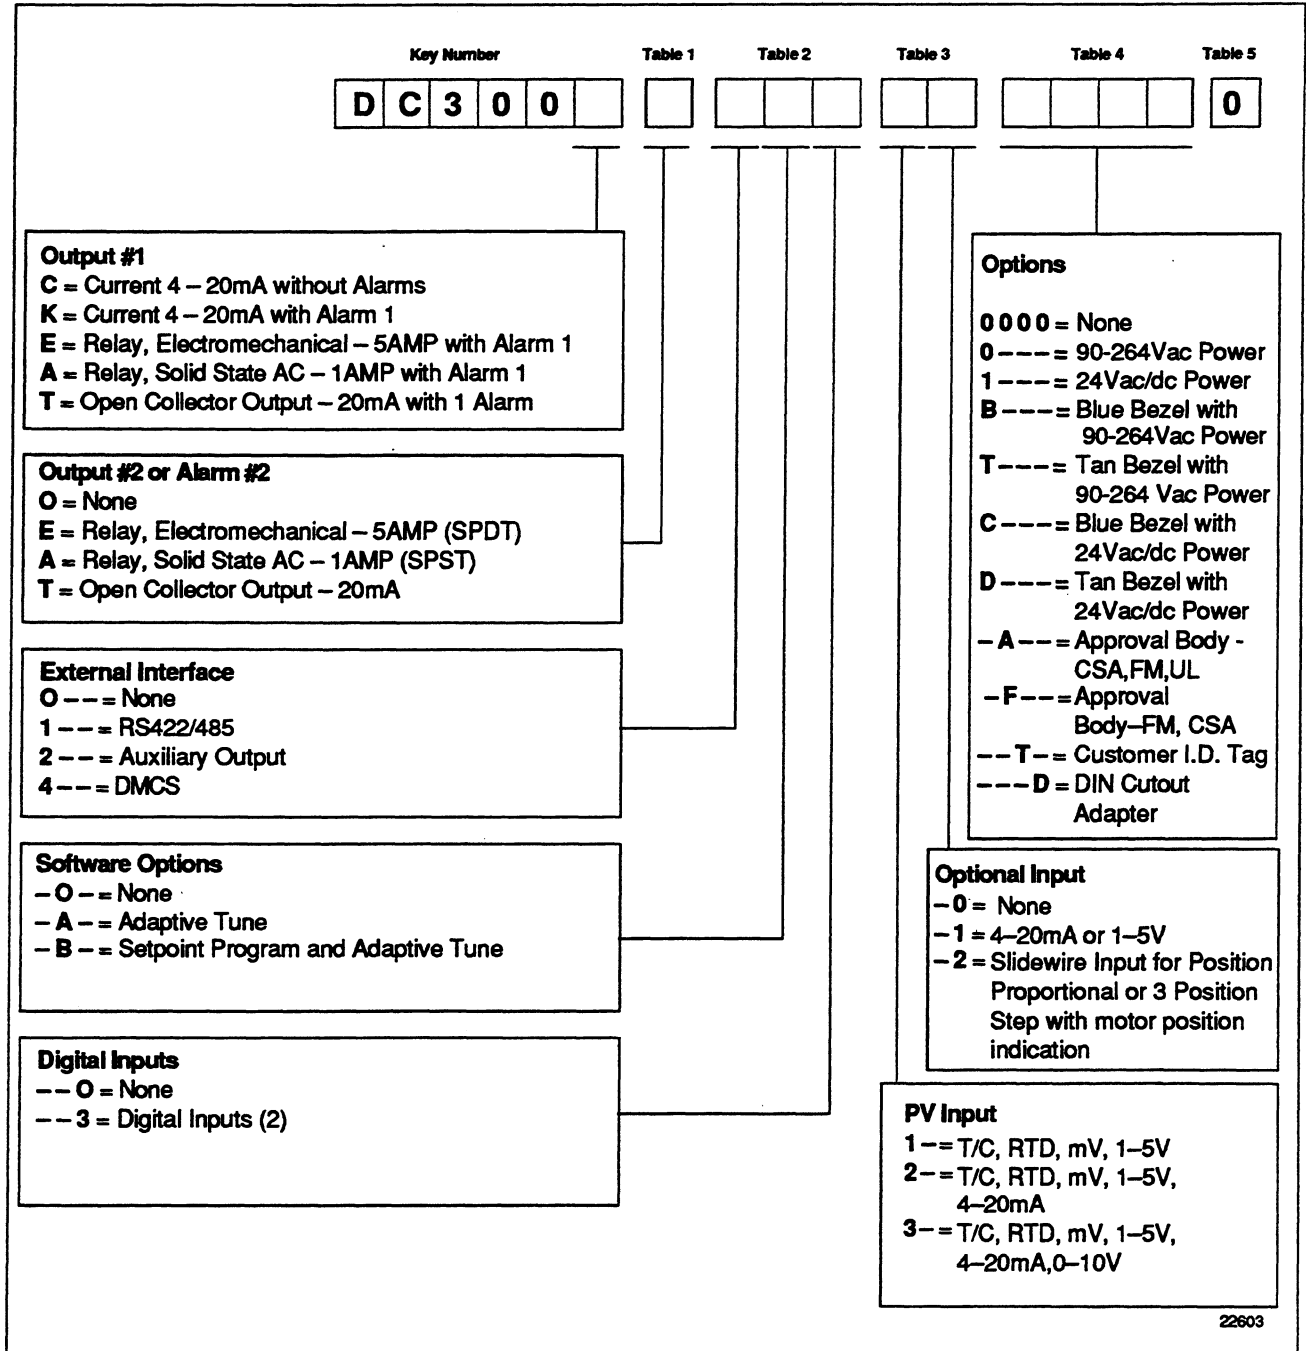Figure 2-1 Model Number Interpretation




## 2.3 Mounting

**Physical considerations** The controller can be mounted on either a vertical or tilted panel using the mounting kit supplied. Adequate access space must be available at the back of the panel for installation and servicing activities. The overall dimensions and panel cutout requirements for mounting the controller are shown in Figure 2-2.

**Overall dimensions** Figure 2-2 shows the overall dimensions for mounting the controller.

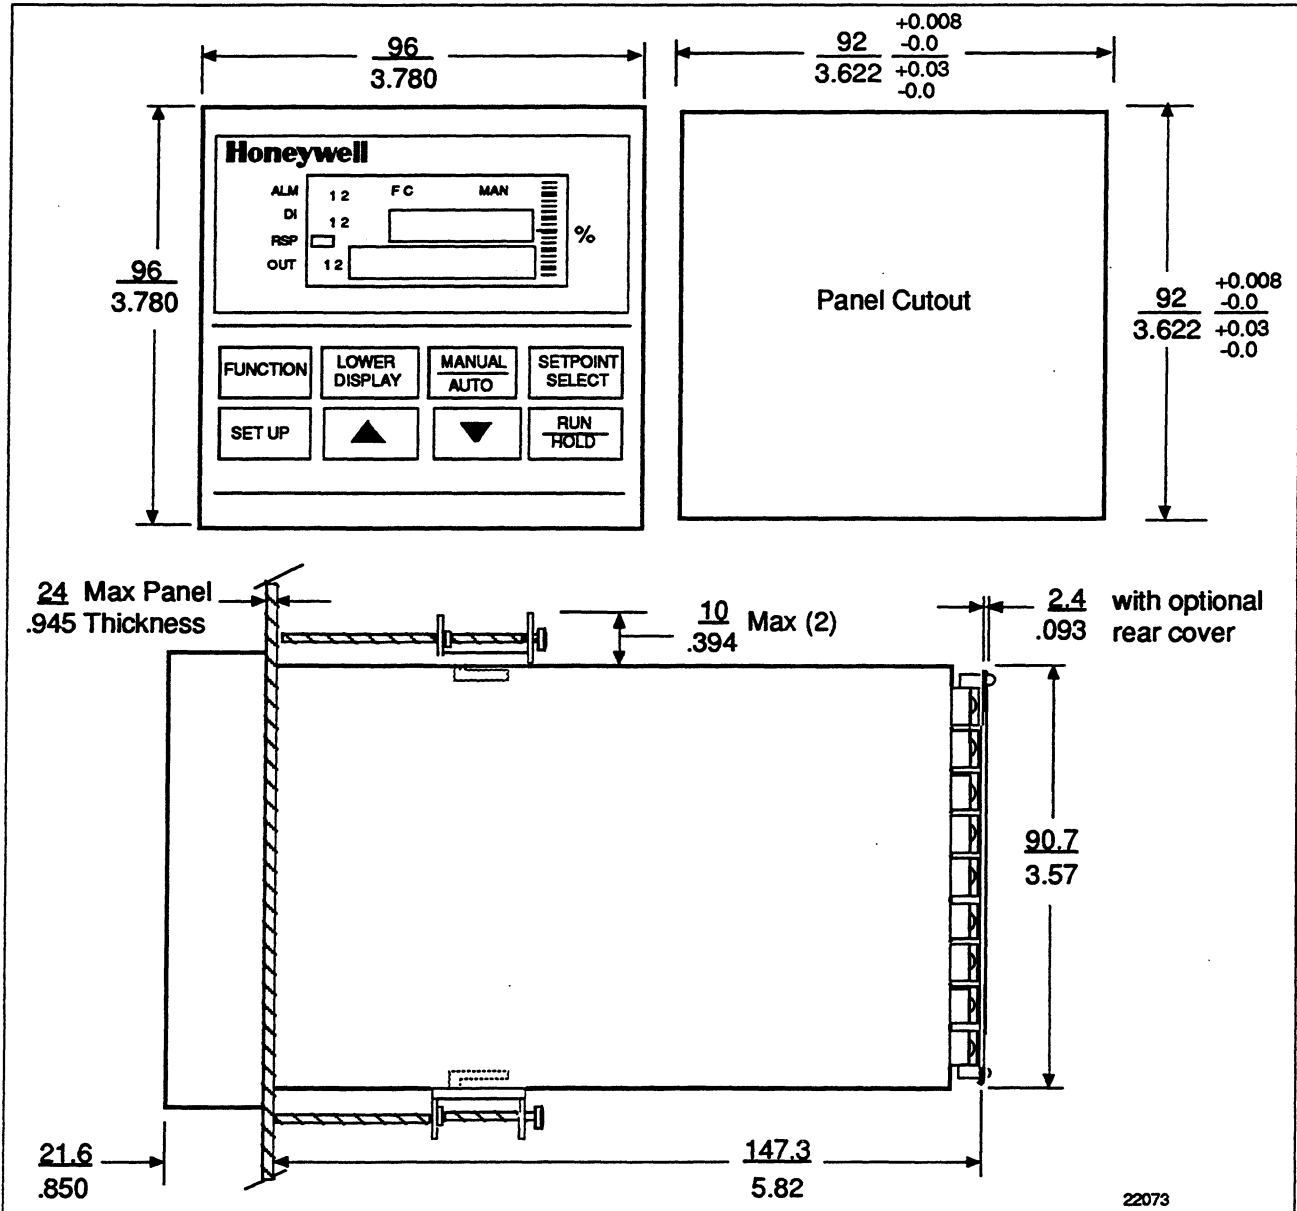Figure 2-2 Dimensions



*Continued on next page*


## 2.3 Mounting, Continued

### Mounting method

Before mounting the controller, refer to the nameplate on the inside of the case and make a note of the model number. It will help later when selecting the proper wiring configuration.

Figure 2-3 shows you the mounting method for the UDC 3000 controller.

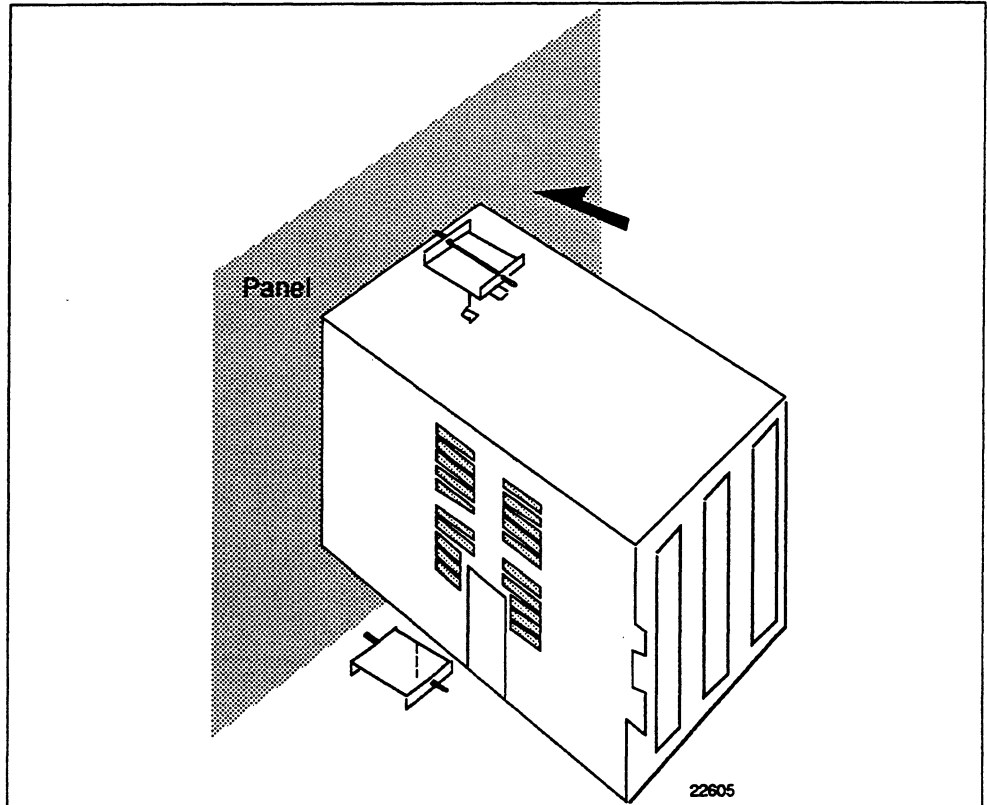Figure 2-3 Mounting Method



### Mounting procedure

Refer to Figure 2-3 and follow the procedure below to mount the controller.

Step	Action
1	Mark and cut out the controller hole in the panel according to the dimension information in Figure 2-2.
2	Remove the screw cover and loosen the screw on the front of the controller. Pull the chassis out of the case.
3	Orient the case properly and slide it through the panel hole from the front.
4	Remove the mounting kit from the shipping container, and install the kit as follows: <ul style="list-style-type: none"><li>• Install the screws into the threaded holes of the clips.</li><li>• Insert the prongs of the clips into the two holes in the top and bottom of the case.</li><li>• Tighten both screws to secure the case against the panel.</li><li>• Carefully slide the chassis assembly into the case, press to close and tighten the screw. Replace the screw cover.</li></ul>

## 2.4 Wiring

### Electrical considerations



---

The controller is considered “rack and panel mounted equipment” per EN 61010-1, Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use, Part 1: General Requirements. Conformity with 72/23/EEC, the Low Voltage Directive requires the user to provide adequate protection against a shock hazard. The user shall install this controller in an enclosure that limits OPERATOR access to the rear terminals.

---

### Controller grounding

PROTECTIVE BONDING (grounding) of this controller and the enclosure in which it is installed shall be in accordance with National and local electrical codes. To minimize electrical noise and transients that may adversely affect the system, supplementary bonding of the controller enclosure to a local ground, using a No. 12 (4 mm<sup>2</sup>) copper conductor, is recommended.

---

### Control/Alarm circuit wiring

The insulation of wires connected to the Control/Alarm terminals shall be rated for the highest voltage involved. Extra Low Voltage (ELV) wiring (input, current output, and low voltage Control/Alarm circuits) shall be separated from HAZARDOUS LIVE (>30 Vac, 42.4 V<sub>peak</sub>, or 60 Vdc) wiring per Table 2-2.

---

### Taking electrical noise precautions

Electrical noise is composed of unabated electrical signals which produce undesirable effects in measurements and control circuits.

Digital equipment is especially sensitive to the effects of electrical noise. Your controller has built-in circuits to reduce the effect of electrical noise from various sources. If there is a need to further reduce these effects:

- Separate External Wiring - separate connecting wires into bundles (see Table 2-2) and route the individual bundles through separate conduits or metal trays.
- Use Suppression Devices - for additional noise protection, you may want to add suppression devices at the external source. Appropriate suppression devices are commercially available.

**NOTE**

For additional noise information, refer to *Section 12* .

---

*Continued on next page*

## 2.4 Wiring, Continued

### Permissible wire bundling

Table 2-2 shows which wire functions should be bundled together.

**NOTE**

*For installation where high EMI/RFI noise cannot be avoided, we recommend you use shielded twisted pair wires for the signals in bundle 2.*

Table 2-2 Permissible Wiring Bundling

Bundle No.	Wire Functions
1	<ul style="list-style-type: none"> <li>• Line power wiring</li> <li>• Earth ground wiring</li> <li>• Control relay output wiring</li> <li>• Line voltage alarm wiring</li> </ul>
2	Analog signal wire, such as: <ul style="list-style-type: none"> <li>• Input signal wire (thermocouple, 4 to 20 mA, etc.)</li> <li>• 4-20 mA output signal wiring</li> <li>• Slidewire feedback circuit wiring</li> <li>• Digital input signals</li> <li>• Communications</li> </ul>
3	<ul style="list-style-type: none"> <li>• Low voltage alarm relay output wiring</li> <li>• Low voltage wiring to solid state type control circuits</li> </ul>

### Identify your wiring requirements

To determine the appropriate diagrams for wiring your controller, refer to the model number interpretation in this section. The model number of the controller can be found on the inside of the case.

### Wiring the controller

Using the information contained in the model number, select the appropriate wiring diagrams from the figures listed below and wire the controller accordingly.


Wiring Requirements	Figure
Composite Wiring Diagram	2-4
Line Power 90–264 Vac or 24Vac/dc	2-5
Input #1 Wiring	2-6
Input #2 Wiring	2-7
Relay Output <ul style="list-style-type: none"> <li>• Electromechanical Relay Output</li> <li>• Solid State Relay Output</li> <li>• Open Collector Output</li> </ul>	2-8 2-9 2-10
Current Output/Universal Output	2-11
Position Proportional Output	2-12
Auxiliary Output Wiring	2-13
Digital Inputs Wiring	2-14
Communications Wiring <ul style="list-style-type: none"> <li>• RS422</li> <li>• DMCS</li> </ul>	2-15 2-16
Transmitter Power for 4-20 mA 2-wire Transmitters <ul style="list-style-type: none"> <li>• Open Collector Alarm 2 Output</li> <li>• Auxiliary Output</li> </ul>	2-17 2-18

## 2.5 Wiring Diagrams

**Composite wiring diagram**

Figure 2-4 is a composite wiring diagram of the UDC 3000 controller. It identifies the terminal designations and their functions. Refer to the individual diagrams listed to wire the controller according to your requirements.

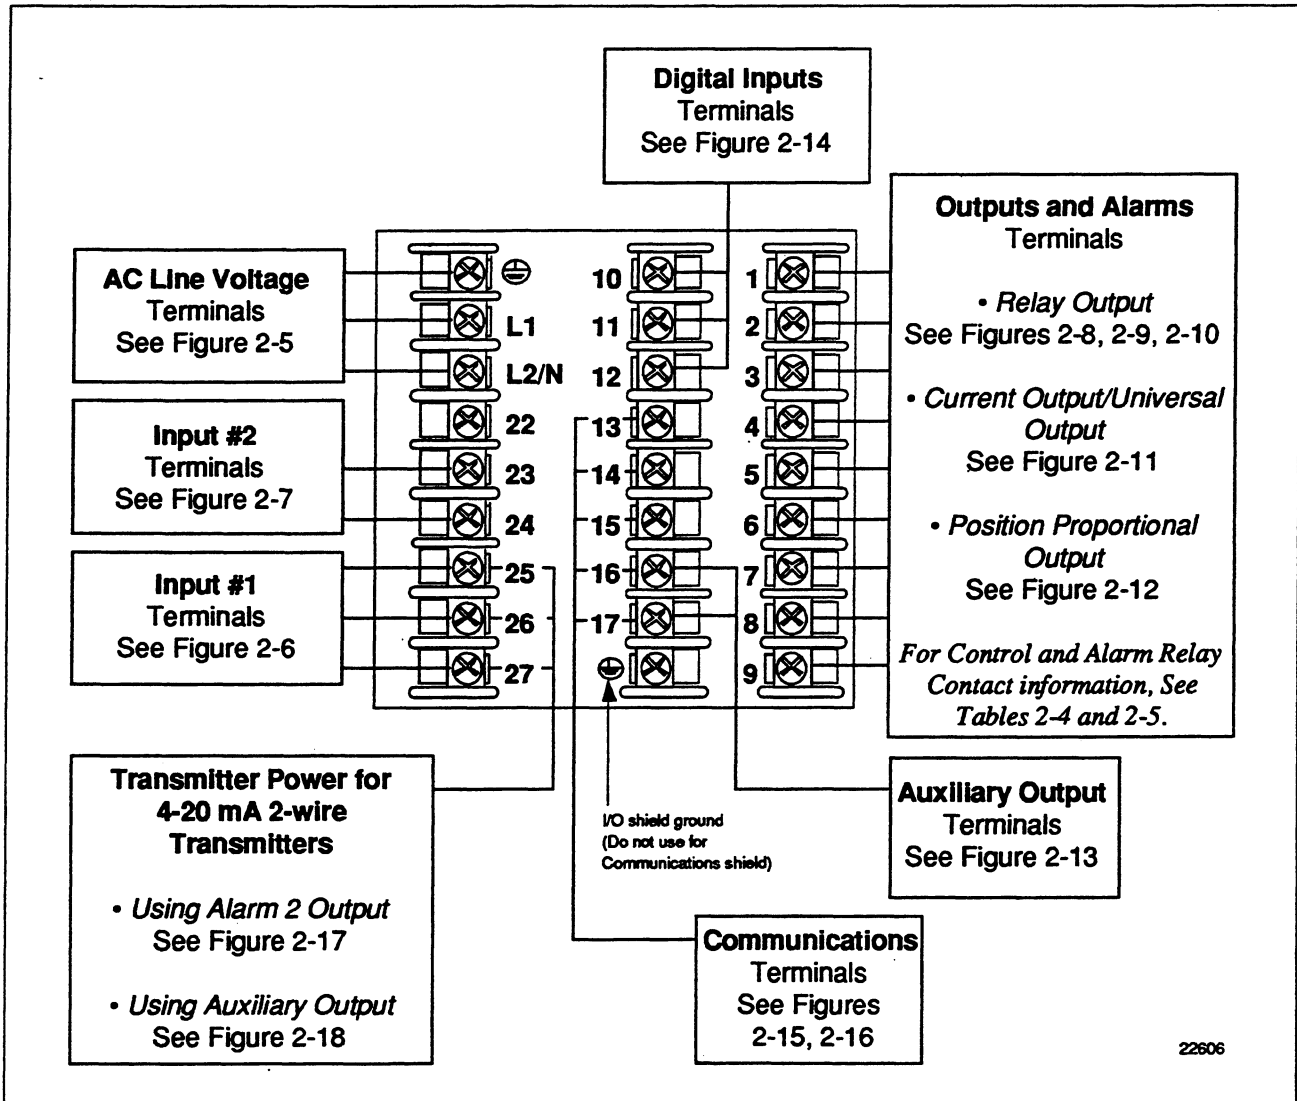Figure 2-4 Composite Wiring Diagram



*Continued on next page*

## 2.5 Wiring Diagrams, Continued


### Line voltage wiring

This equipment is suitable for connection to 90-264 Vac or 24Vac/dc, 50/60 Hz, power supply mains. It is the user's responsibility to provide a switch and non-time delay (North America), quick-acting, high breaking capacity, Type F, (Europe) 1/2 A, 250 V fuse(s) or circuit-breaker for 90-264V; or 1A, 125V fuse or circuit breaker for 24Vac/dc operation, as part of the installation. The switch or circuit-breaker shall be located in close proximity to the controller, within easy reach of the OPERATOR. The switch or circuit-breaker shall be marked as the disconnecting device for the controller. (4mm<sup>2</sup>).

**CAUTION** Applying 90-264Vac to a controller rated for 24Vac/dc will severely damage the controller and is a fire and smoke hazard.

Figure 2-5 shows the wiring connections for line voltage.

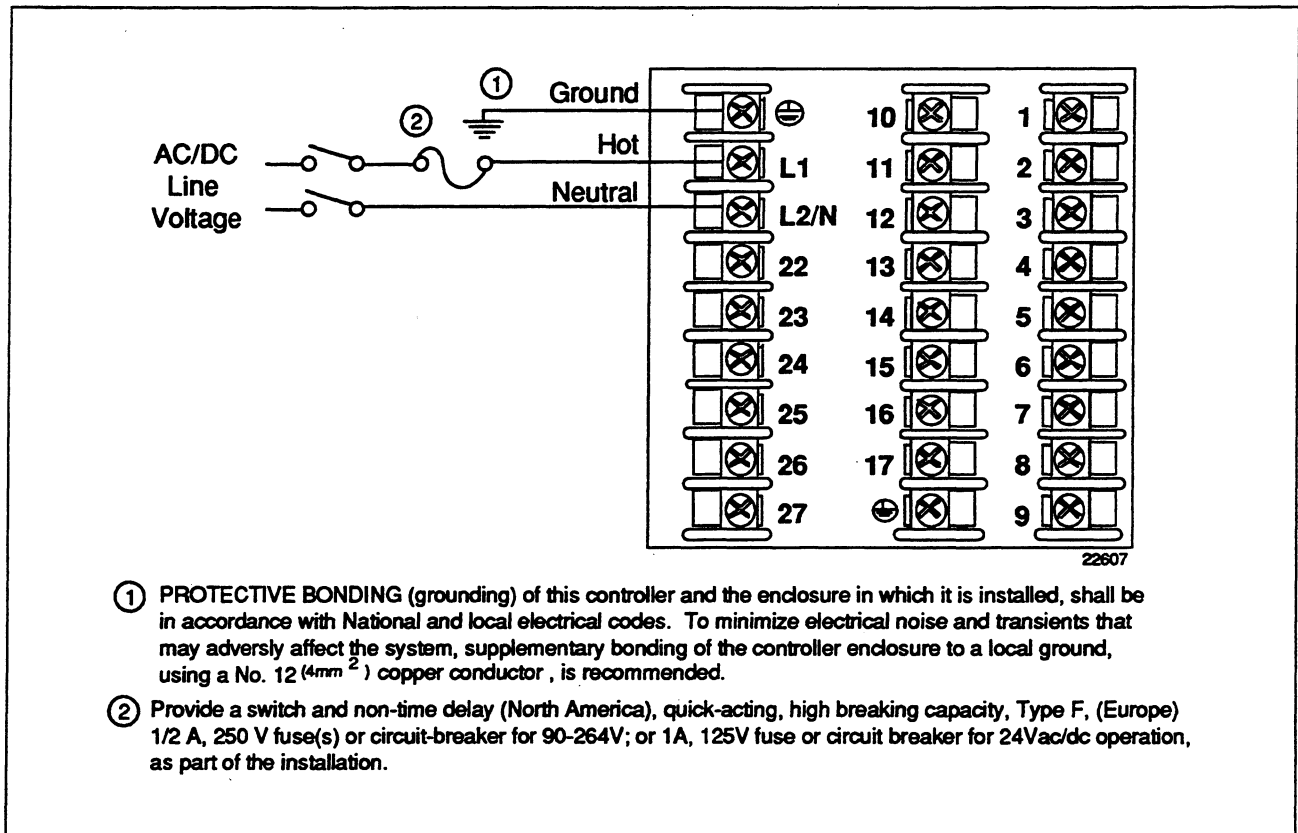Figure 2-5 Line Voltage Wiring




Continued on next page

## 2.5 Wiring Diagrams, Continued

Input #1 connections Figure 2-6 shows the wiring connections for Input #1.

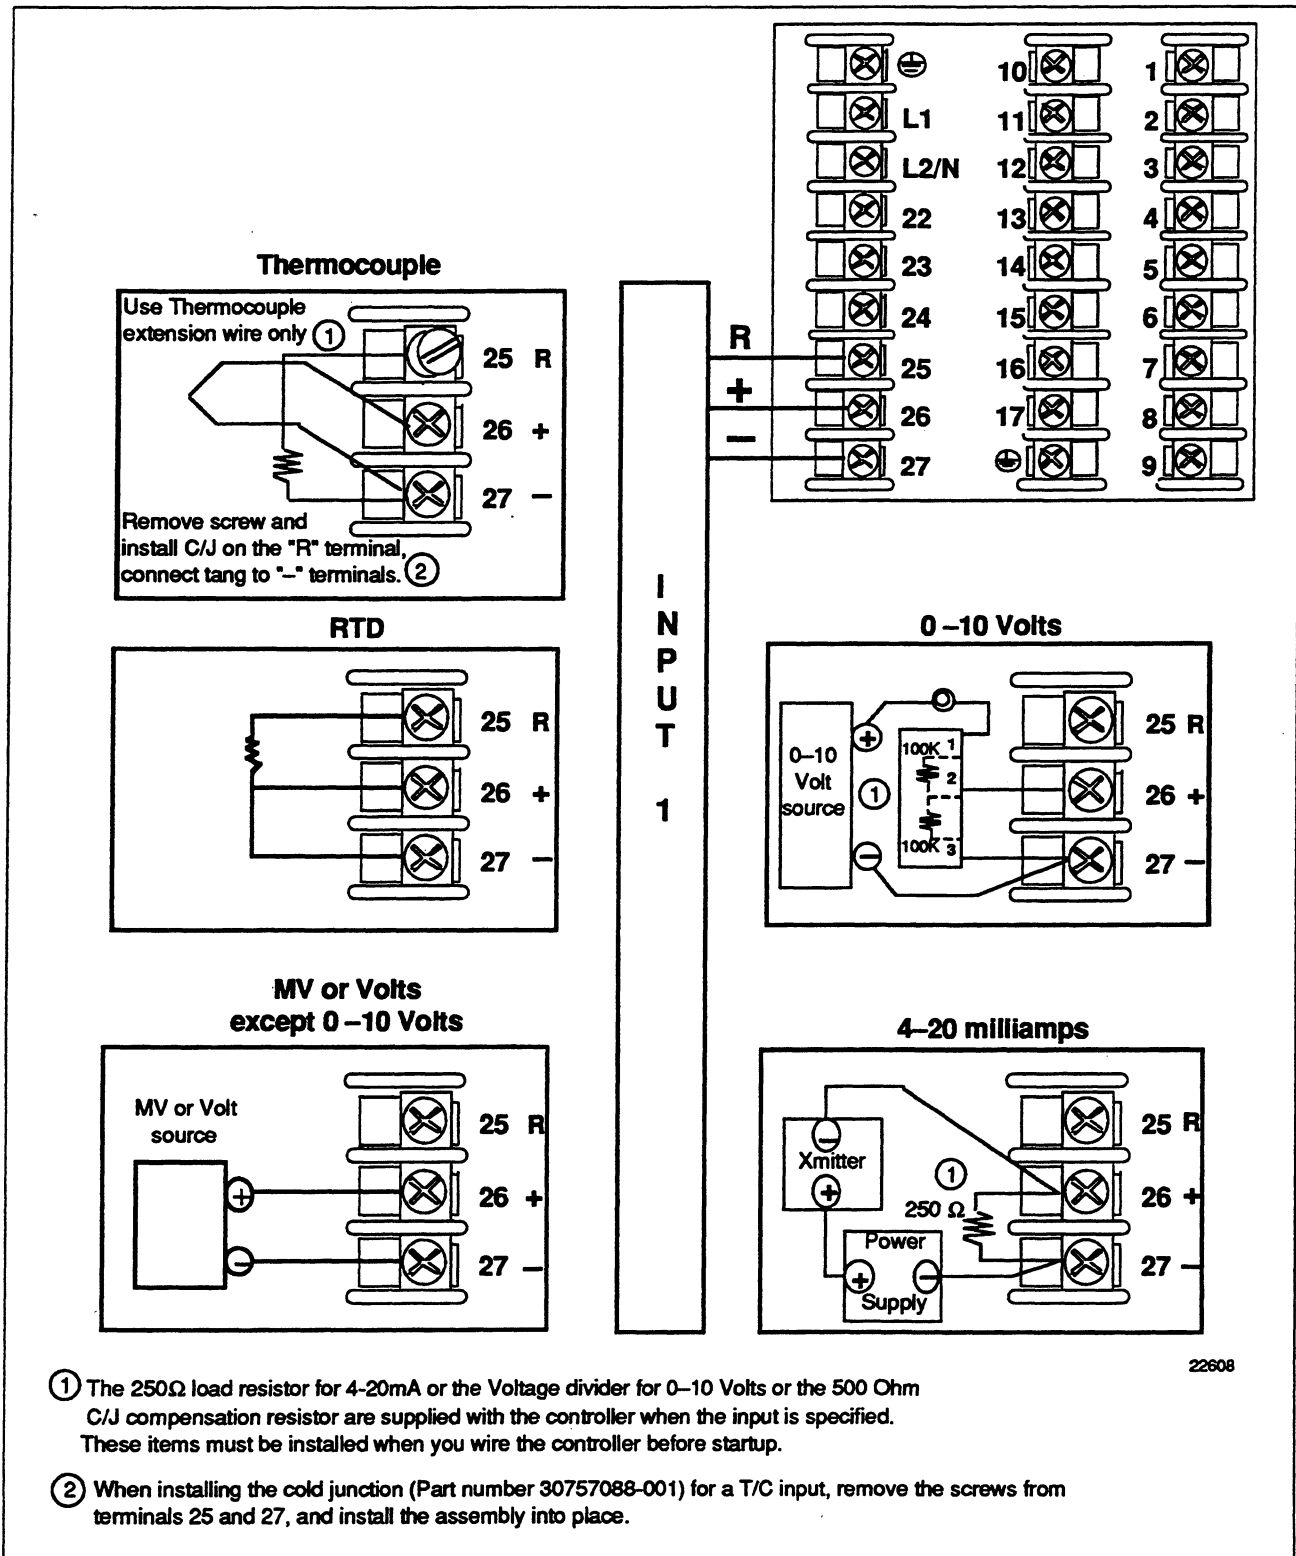Figure 2-6 Input #1 Connections



22608

- ① The 250Ω load resistor for 4-20mA or the Voltage divider for 0-10 Volts or the 500 Ohm C/J compensation resistor are supplied with the controller when the input is specified. These items must be installed when you wire the controller before startup.
- ② When installing the cold junction (Part number 30757088-001) for a T/C input, remove the screws from terminals 25 and 27, and install the assembly into place.


Continued on next page



## 2.5 Wiring Diagrams, Continued

**Input #2 connections** Figure 2-7 shows the wiring connections for Input #2.

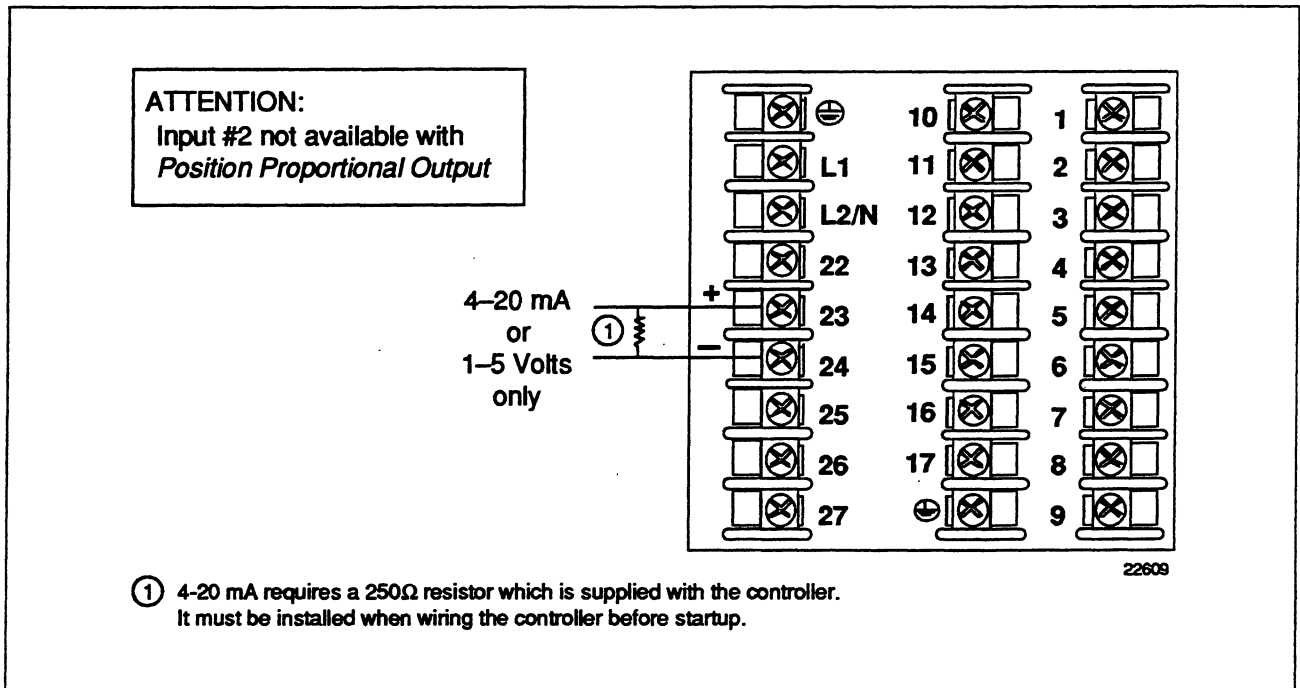Figure 2-7 Input #2 Connections



*Continued on next page*

## 2.5 Wiring Diagrams, Continued

### Relay output

There are three types of relay outputs available on the UDC 3000.


- Electromechanical Relay Output (Model DC300E-E-XXX)– Figure 2-8
- Solid State Relay Output (Model DC300A-A-XXX) – Figure 2-9
- Open Collector Output (Model DC300T-T-XXX)– Figure 2-10

The Alarm wiring connections are the same for all three outputs.

For Control and Alarm Relay Contact information, see Tables 2-4 and 2-5

Figure 2-8 shows the Output and Alarm wiring connections for models with Electromechanical Relay Output.

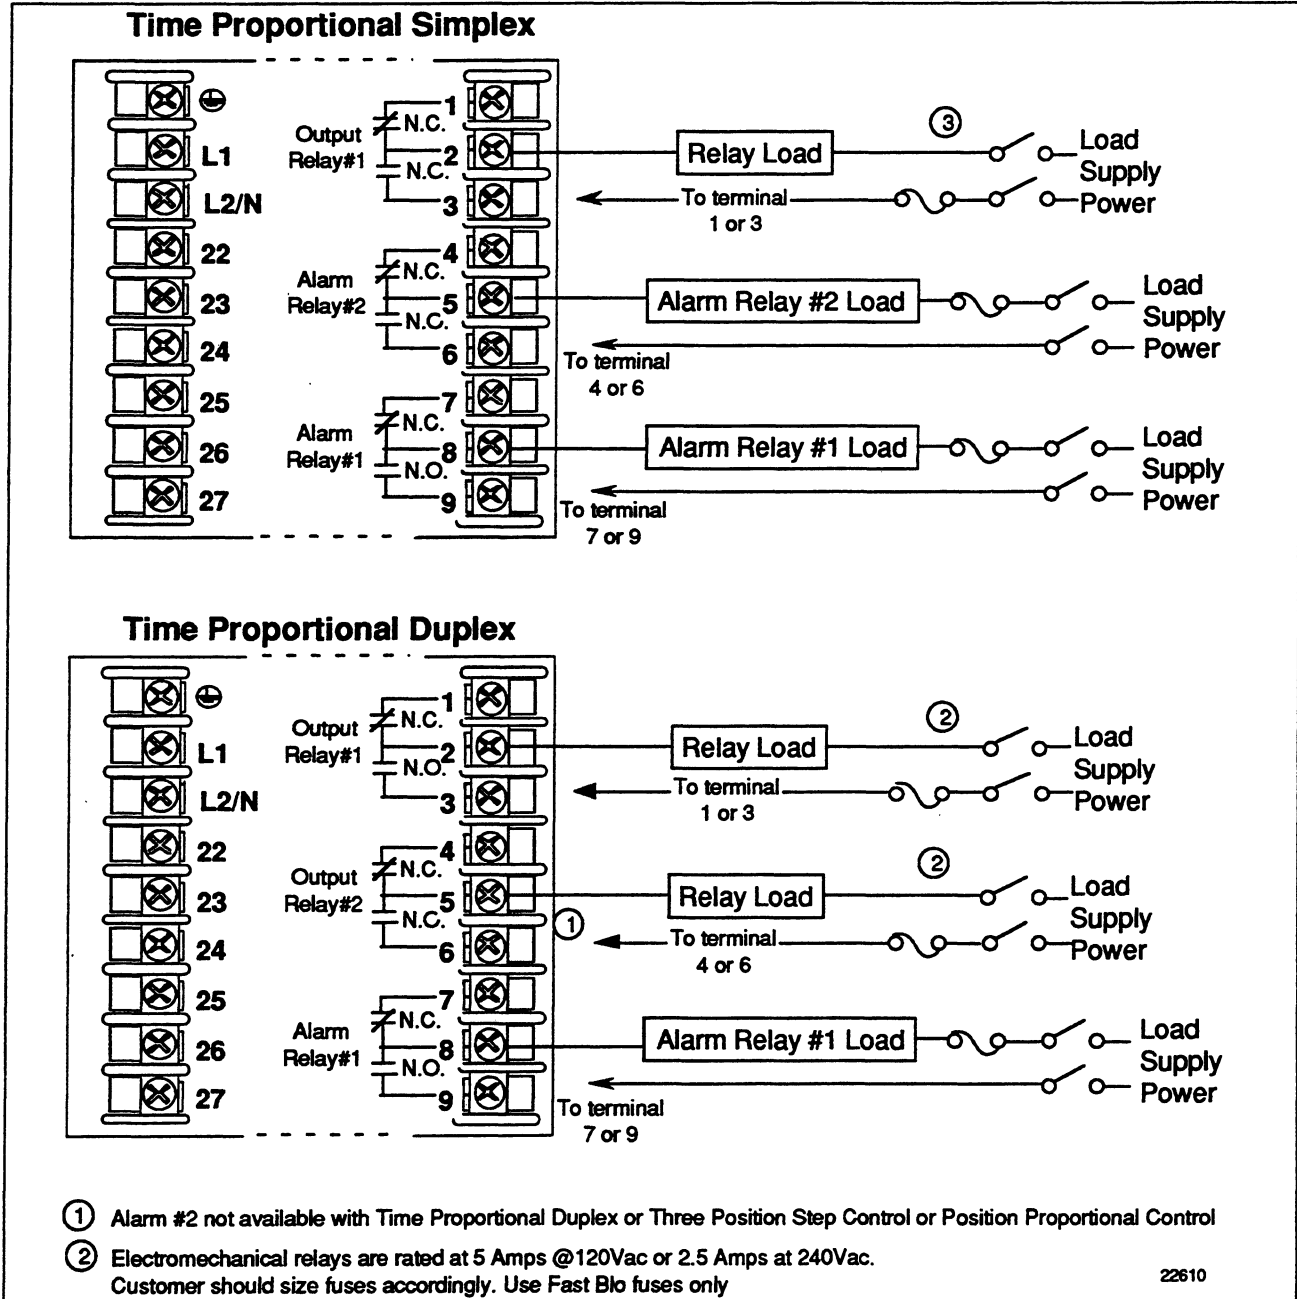Figure 2-8 Electromechanical Relay Output - Model DC300E-E-XXX



Continued on next page


## 2.5 Wiring Diagrams, Continued

Relay output  
(continued)

Figure 2-9 shows the Output and Alarm wiring connections for models with Solid State Relay Output. (Model DC300A-A-XXX)

For Control and Alarm Relay Contact information, see Tables 2-4 and 2-5.

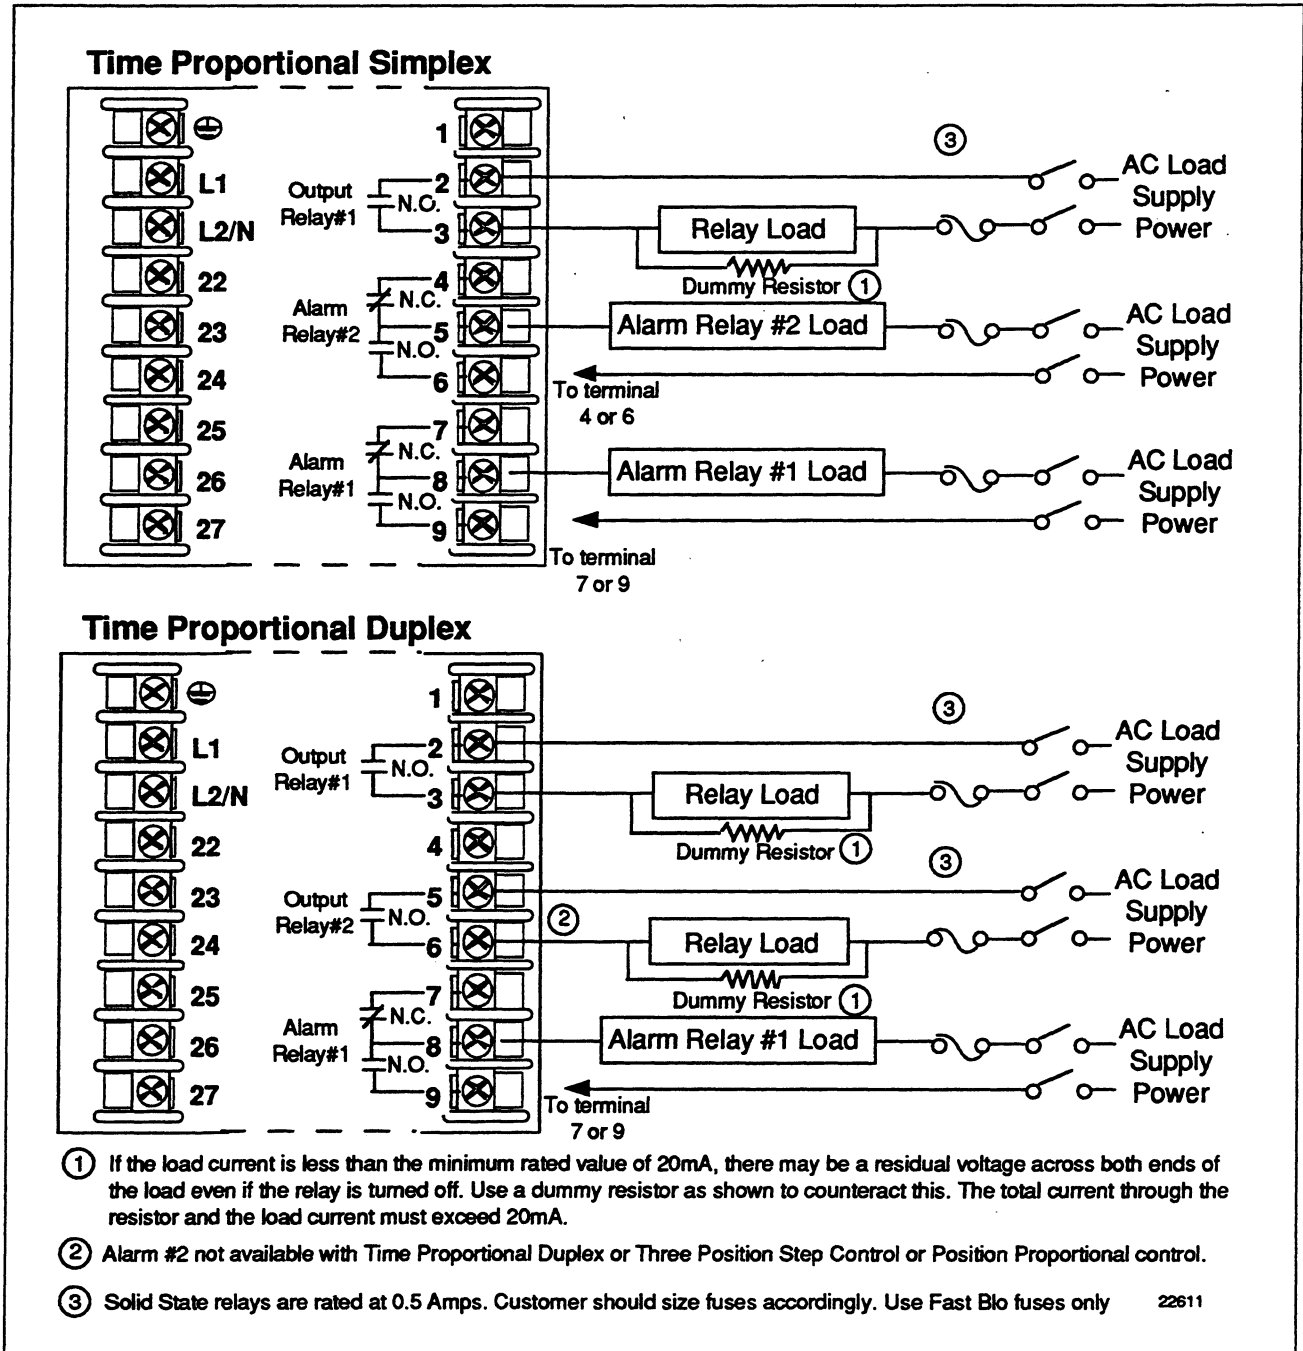Figure 2-9 Solid State Relay Output - Model DC300A-A-XXX



Continued on next page


## 2.5 Wiring Diagrams, Continued

### Relay Output (continued)

Figure 2-10 shows the Output and Alarm wiring connections for models with Open Collector Output.(DC300T-T-XXX)

For Control and Alarm Relay Contact information, see Tables 2-4 and 2-5.

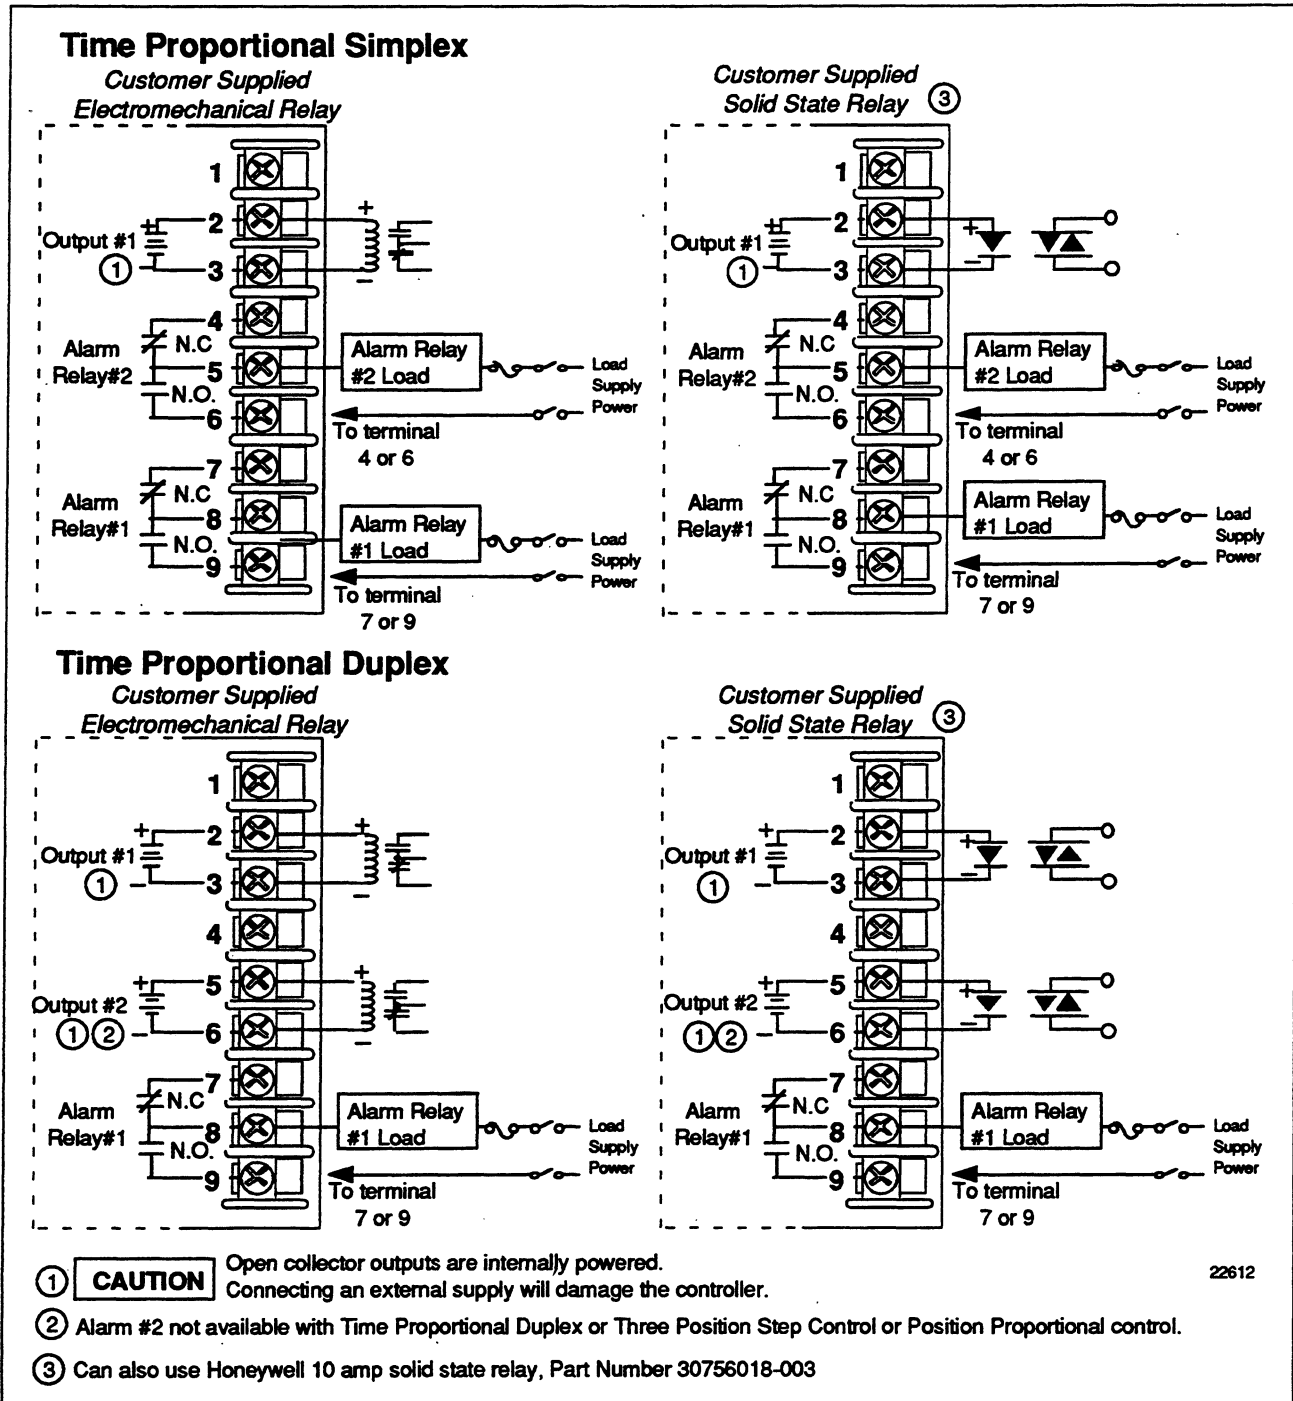Figure 2-10 Open Collector Output - Model DC300T-T-XXX



Continued on next page

## 2.5 Wiring Diagrams, Continued

### Current output /Universal output connections

Figure 2-11 shows the Output and Alarm wiring connections for models with Current Output. (Model DC300K-E-XXX)

For Control and Alarm Relay Contact information, see Tables 2-4 and 2-5.

Figure 2-11 Current Output, Current /Time Duplex, Time/Current Duplex, Position Proportional, or Three Position Step Control

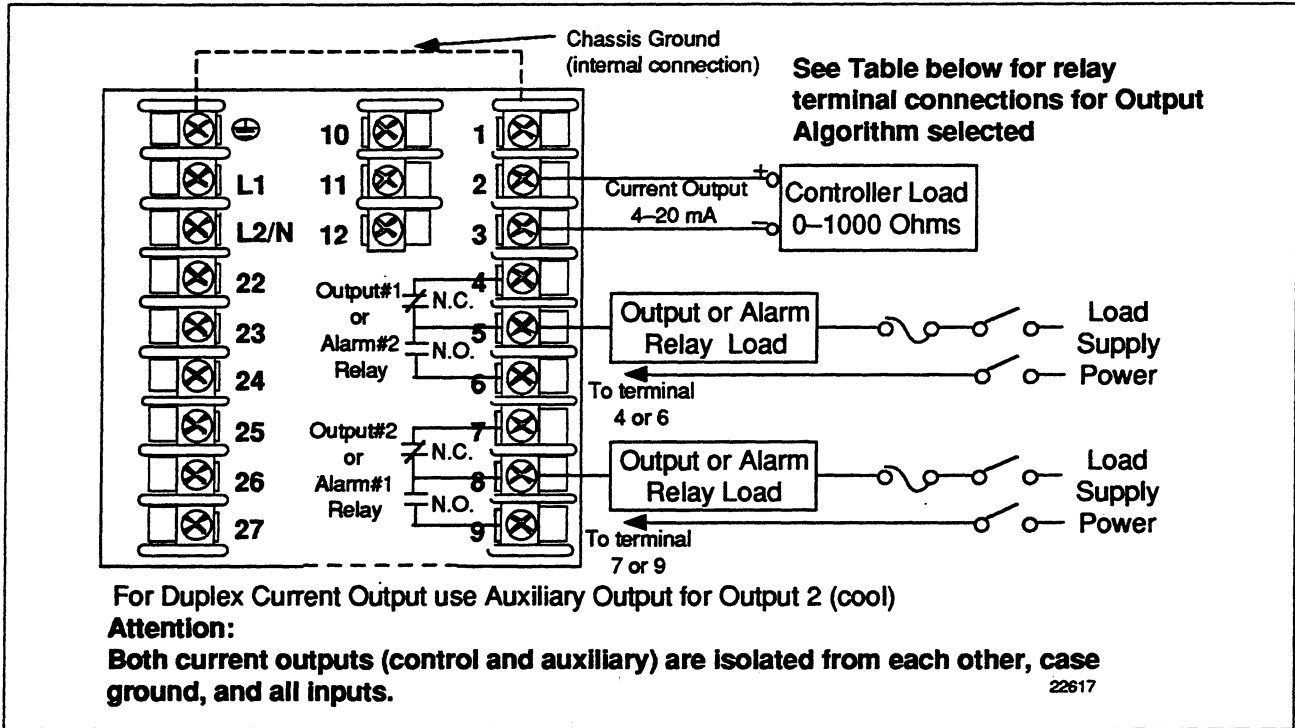


Table 2-3 Universal Output Wiring Functionality and Restrictions

Output Algorithm Selected	Terminal #2, #3	Relay Terminals #4,#5,#6	Relay Terminals #7, #8, #9
TIME	None	Output #1	Alarm #1
CURRENT	Current Output	Alarm #2	Alarm #1
POSITION	None	Output #1	Output #2
TIME DUPLEX	None	Output #1	Output #2
CURRENT DUPLEX	Current Output #1	Alarm #2	Alarm #1
CURRENT TIME or TIME CURRENT	Current Output	Output #1 or #2	Alarm #1

Continued on next page

## 2.5 Wiring Diagrams, Continued

### Position proportional output connections


Figure 2-12 shows the Output and Alarm wiring connections for models with Position Proportional Output or Three Position Step Control. For Control and Alarm Relay Contact information, see Tables 2-4 and 2-5.

### Calibration

Position Proportional Output or *Three Position Step* models must have the output calibrated after installation (see Section 8—*Position Proportional Output Calibration*) to ensure that the displayed output (slidewire position) agrees with the actual final control element position.

Three Position Step models only require that the motor time be entered. Full calibration is not required.

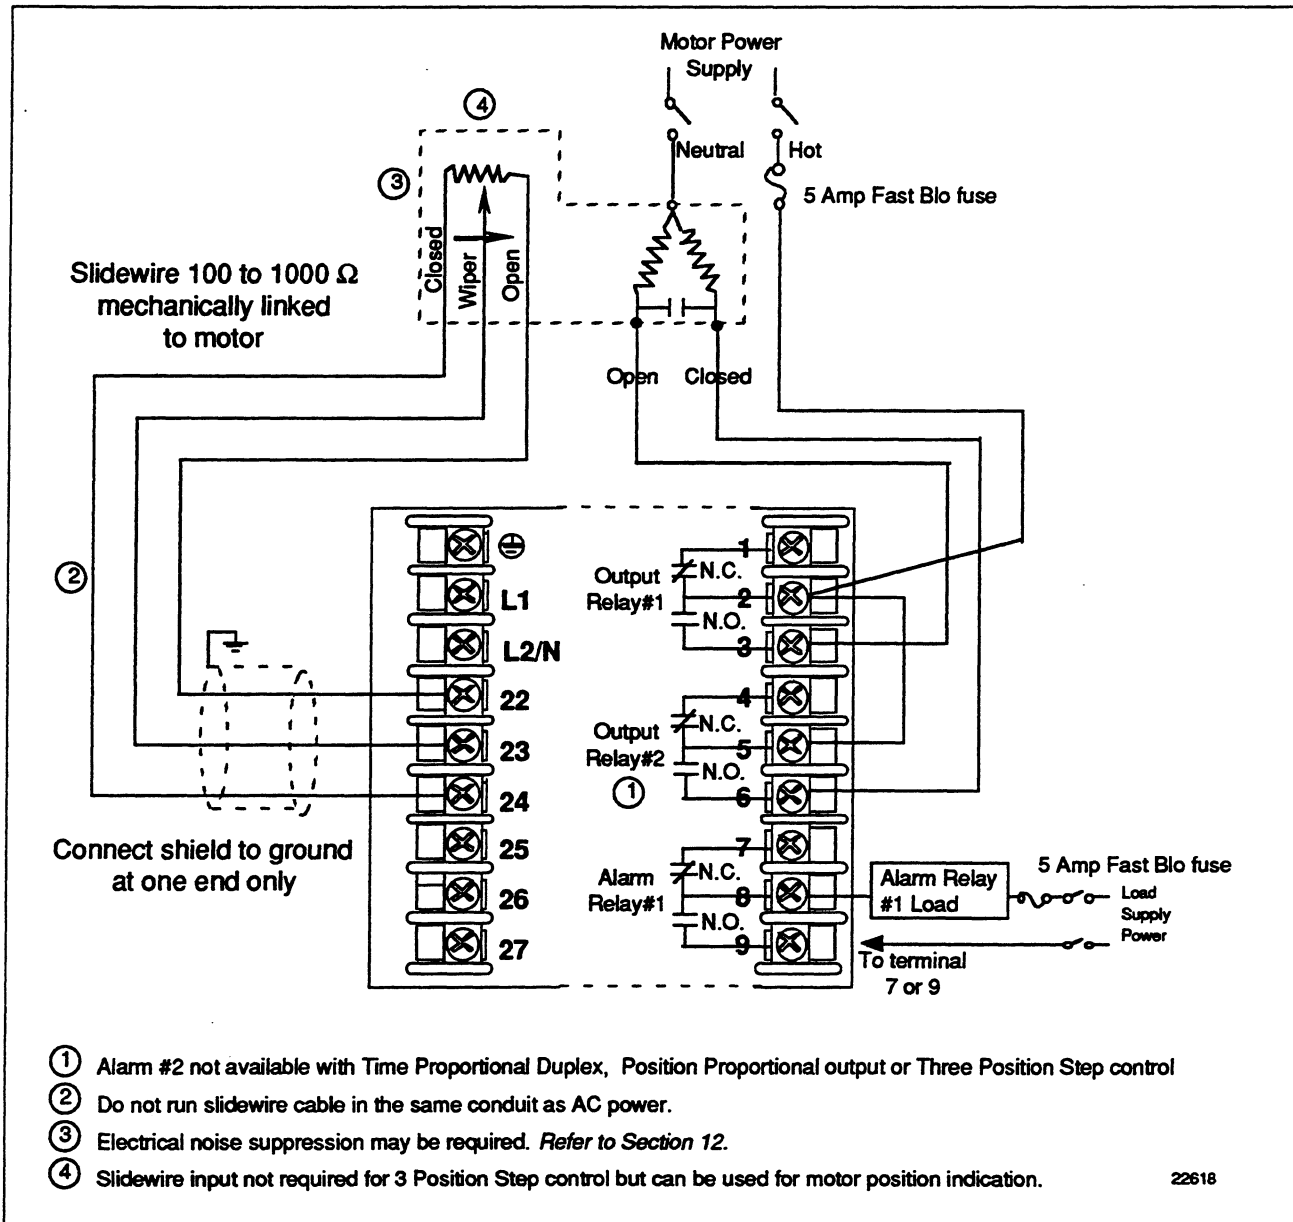Figure 2-12 Position Proportional Output or Three Position Step-Models DC300E-E, DC300A-A




Continued on next page

## 2.5 Wiring Diagrams, Continued

### Auxiliary output connections

Figure 2-13 shows the wiring connections for the Auxiliary Output option.

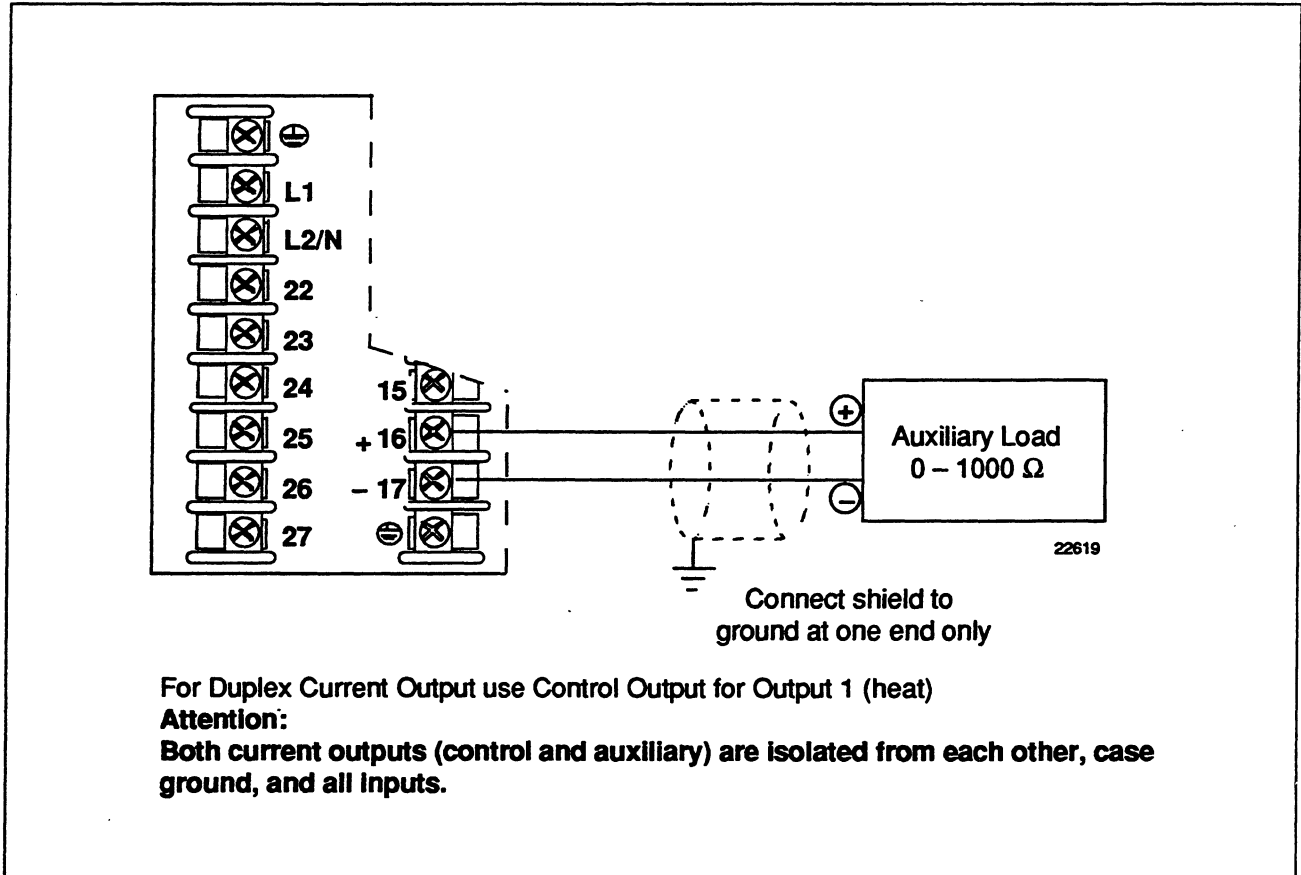Figure 2-13 Auxiliary Output Connections




*Continued on next page*

## 2.5 Wiring Diagrams, Continued

### Digital Inputs connections

Figure 2-14 shows the wiring connections for the Digital Inputs option.

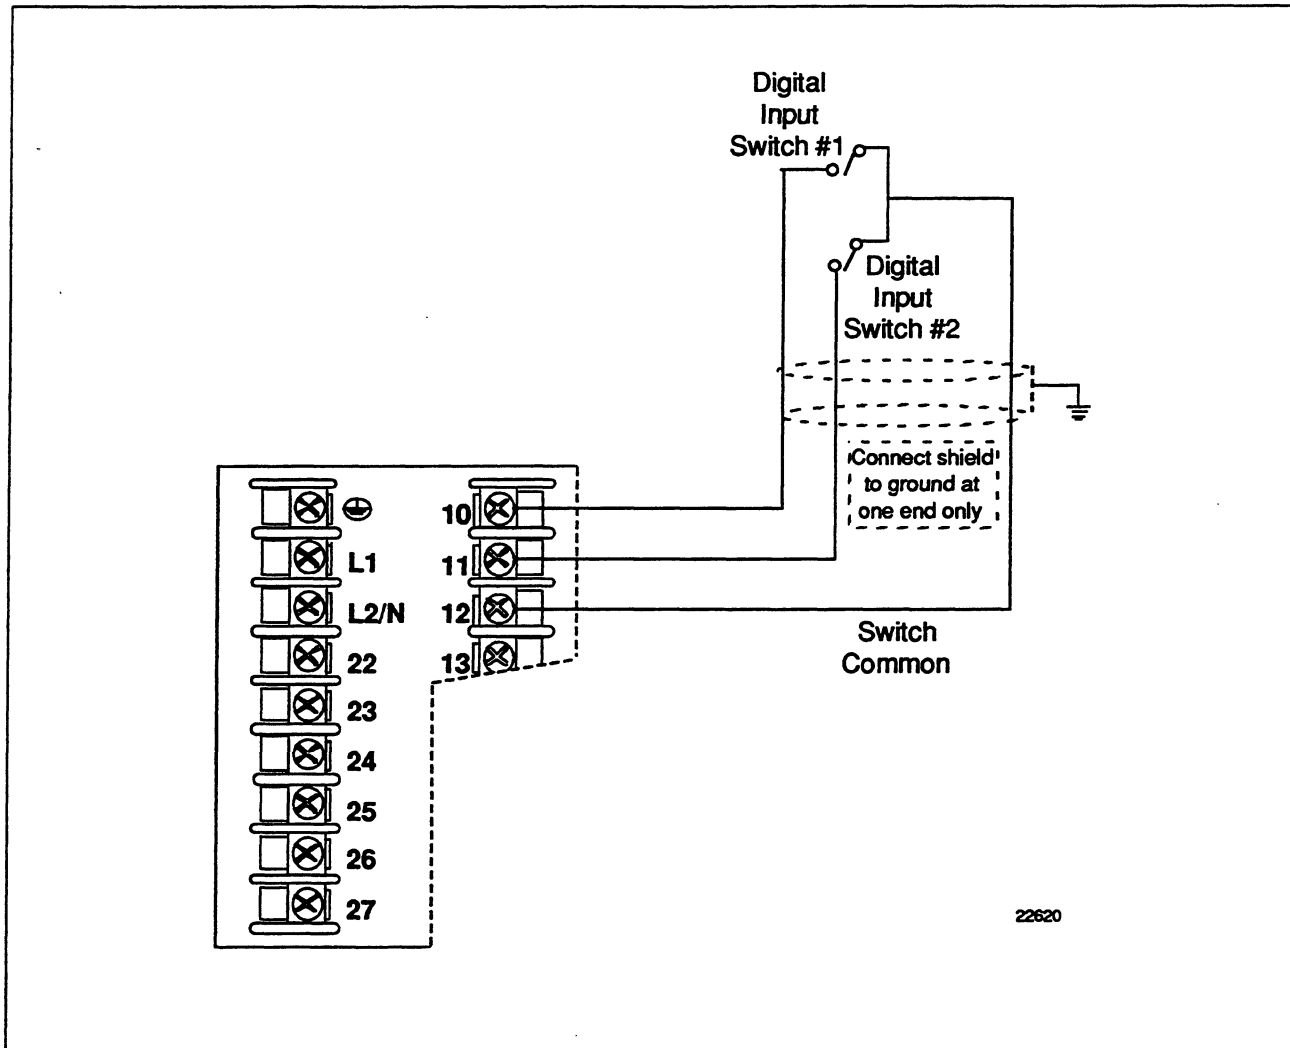Figure 2-14 Digital Inputs Connections




*Continued on next page*



## 2.5 Wiring Diagrams, Continued

- Communications option connections** There are two types of Communications option available:
- RS422/485 - Figure 2-15 (also refer to Document # 51-51-25-35)
  - DMCS - Figure 2-16 (also refer to Document # 82-50-10-23)

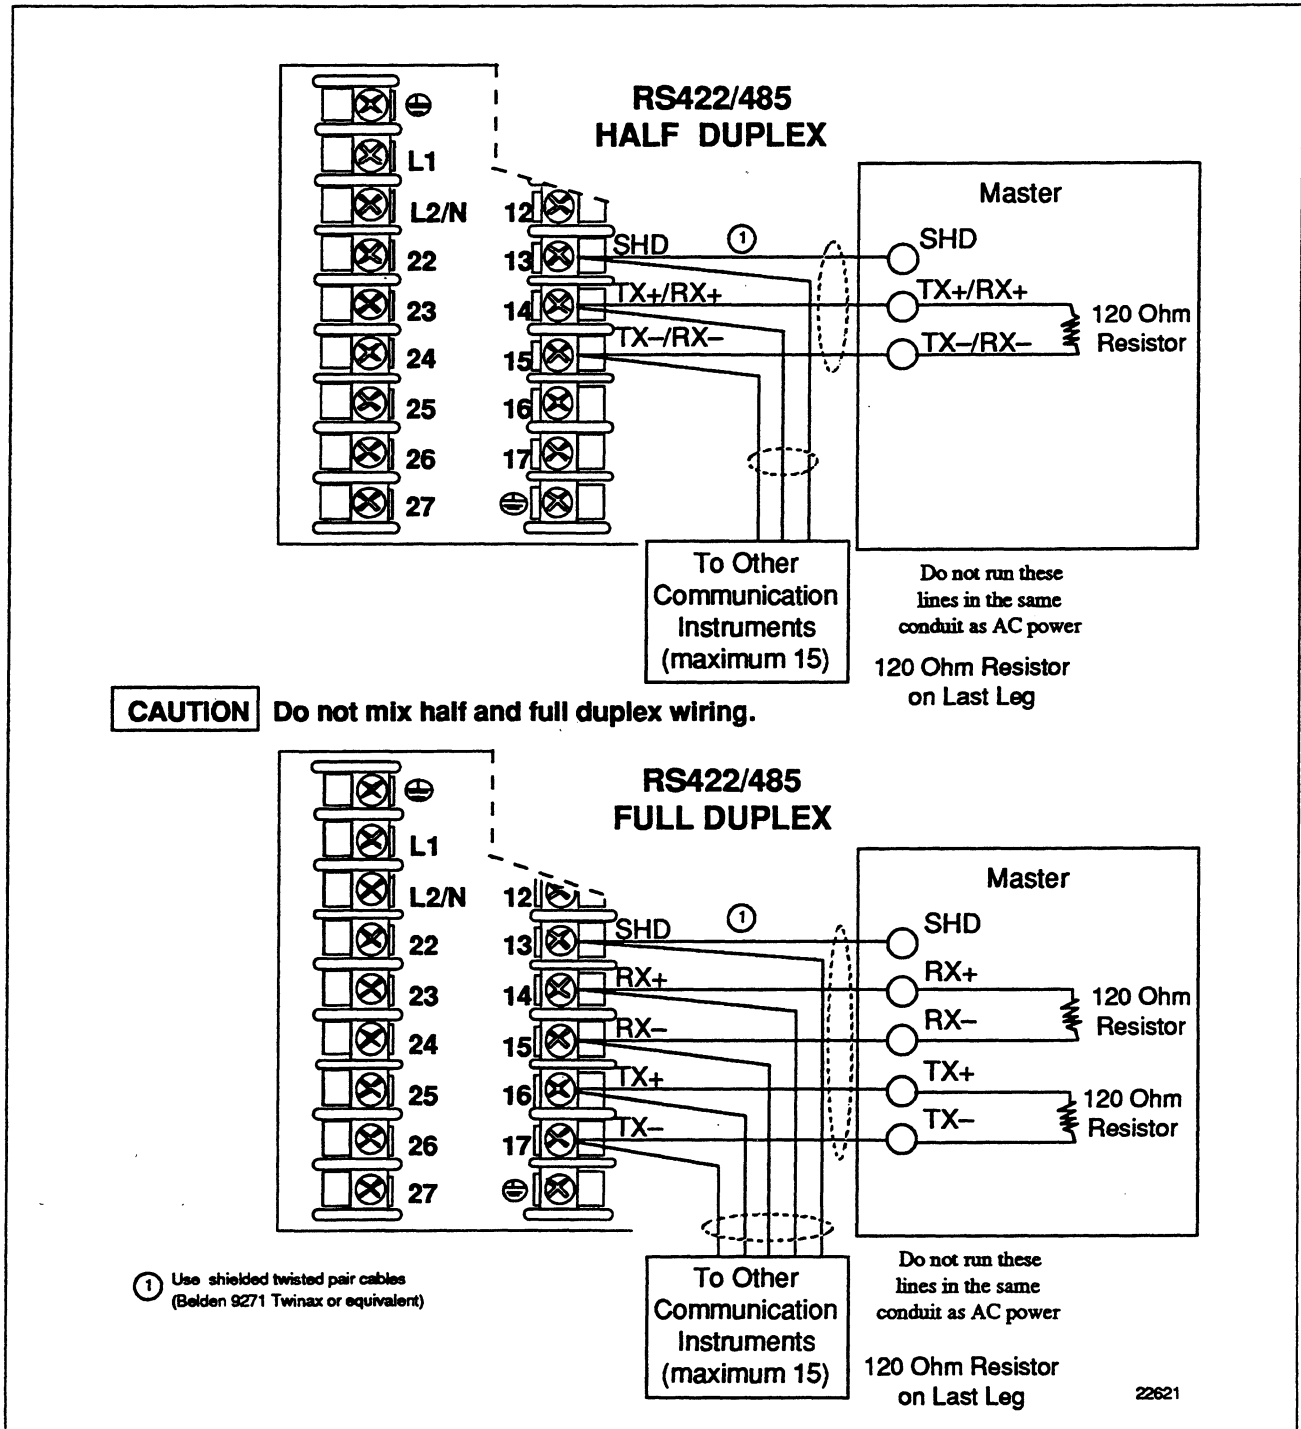Figure 2-15 RS422/485 Communications Option Connections




Continued on next page

## 2.5 Wiring Diagrams, Continued

**Communications option connections (continued)** Figure 2-16 shows the wiring connections for the DMCS Communications Option. (also refer to Document # 82-50-10-23)

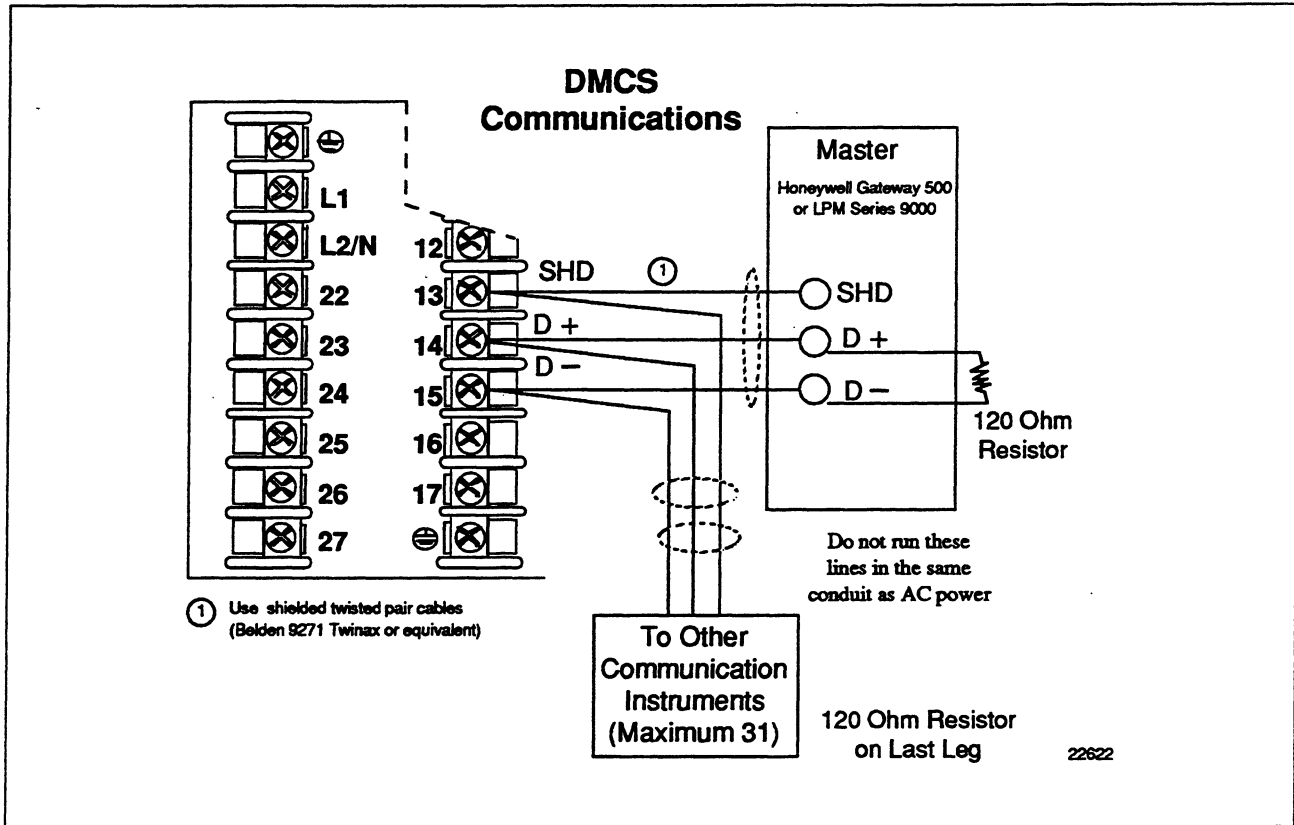Figure 2-16 DMCS Communications Option Connections



*Continued on next page*

## 2.5 Wiring Diagrams, Continued

**Transmitter power for  
4-20 mA 2-wire  
transmitter—open  
collector alarm 2 output**

The wiring diagram example shown in Figure 2-17 provides 30 Vdc at terminals 5 and 6 with the capability of driving up to 22 mA, as required by the transmitter which is wired in series.


If the transmitter terminal voltage must be limited to less than 30 volts, you can insert a zener diode between the positive transmitter terminal and terminal no. 5. For example, an IN4733A zener diode will limit the voltage at the transmitter to 25 Vdc.

*Configure:*

A2S1TYPE = NONE

A2S2TYPE = NONE

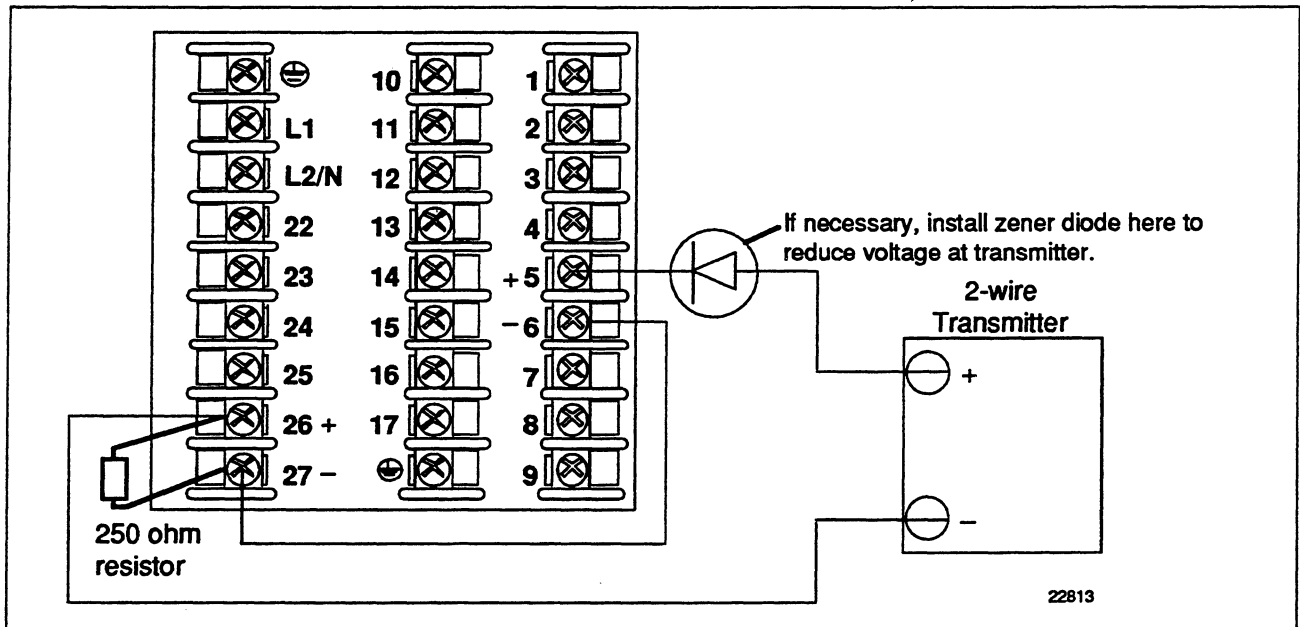Figure 2-17 Transmitter Power for 4-20 mA 2-wire Transmitter Using Open Collector Alarm 2 Output



*Continued on next page*

## 2.5 Wiring Diagrams, Continued

### Transmitter power for 4-20 mA 2-wire transmitter—auxiliary output

The wiring diagram example shown in Figure 2-18 provides 34 Vdc at terminal no. 16 with the capability of driving up to 22 mA, as required by the transmitter which is wired in series.

If the transmitter terminal voltage must be limited to less than 34 volts, you can insert a zener diode between the positive transmitter terminal and terminal no. 16. For example, an IN4739A zener diode will limit the voltage at the transmitter to 25 Vdc.

*Configure:*


AUX OUT = OUTPUT

*Calibrate the Auxiliary Output using the procedure given in Section 8.4 – Auxiliary Output Calibration.*

ZERO VAL = 4095

SPAN VAL = 4095

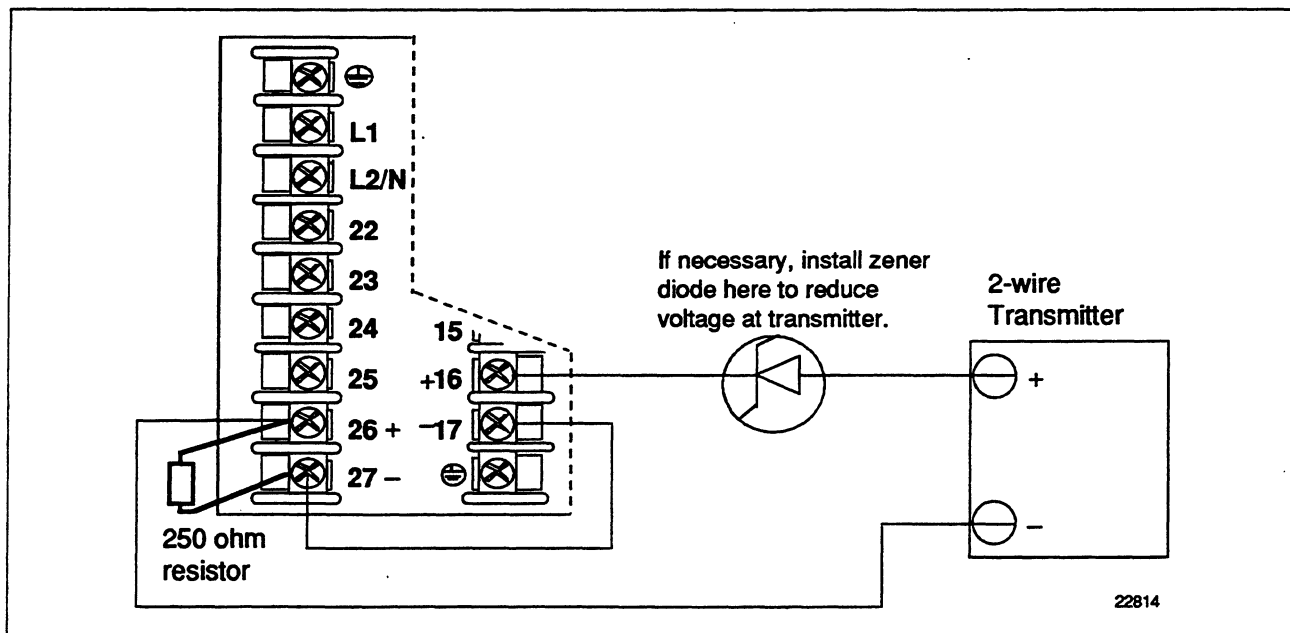Figure 2-18 Transmitter Power for 4-20 mA 2-wire Transmitter Using Auxiliary Output



## 2.6 Control and Alarm Relay Contact Information

### Control Relays

Table 2-4 lists the Control Relay Contact information.

**ATTENTION** Control relays operate in the standard control mode. i.e. Energized when output state is on.

Table 2-4 Control Relay Contact Information

Unit Power	Control Relay Wiring	Control Relay Contact	#1 or #2 Output Indicator Status
Off	N.O.	Open	Off
	N.C.	Closed	
On	N.O.	Open Closed	Off On
	N.C.	Closed Open	Off On

### Alarm Relays

Table 2-5 lists the Alarm Relay Contact information.

**ATTENTION** Alarm relays are designed to operate in a failsafe mode. i.e. De-energized during alarm state. This results in alarm actuation when power is OFF or when initially applied, until the unit completes self diagnostics. If power is lost to the unit, the alarms will function.

Table 2-5 Alarm Relay Contact Information

Unit Power	Alarm Relay Wiring	Variable NOT in Alarm State		Variable in Alarm State	
		Relay Contact	Indicators	Relay Contact	Indicators
Off	N.O.	Open	Off	Open	Off
	N.C.	Closed		Closed	
On	N.O.	Closed	Off	Open	On
	N.C.	Open		Closed	



## Section 3 – Configuration

### 3.1 Overview

#### Introduction

Configuration is a dedicated operation where you use straightforward keystroke sequences to select and establish (configure) pertinent control data best suited for your application.

#### What's in this section?

The table below lists the topics that are covered in this section.

	Topic	See Page
3.1	Overview	29
3.2	Configuration Prompts	30 & 31
3.3	How to Get Started	32
3.4	Configuration Tips	33
3.5	Configuration Procedure	34
3.6	Timer Group	36
3.7	Tuning Parameters Setup Group	37
3.8	Setpoint Ramp/Program Setup Group	39
3.9	Accutune Setup Group	40
3.10	Algorithm Data Setup Group	41
3.11	Input 1 Parameters Setup Group	42
3.12	Input 2 Parameters Setup Group	44
3.13	Control Parameters Setup Group	45
3.14	Options Parameters Setup Group	47
3.15	Communications Parameters Setup Group	48
3.16	Alarms Parameters Setup Group	49
3.17	Calib Group	51
3.18	Status Group	51
3.19	Configuration Record Sheet	52

#### Prompts

To assist you in the configuration process, there are prompts that appear in the upper and lower displays. These prompts let you know what group of configuration data (Set Up prompts) you are working with and also, the specific parameters (Function prompts) associated with each group.

Figure 3-1 shows you an overview of the prompt hierarchy.

As you will see, the configuration data is divided into 11 main Set Up groups plus prompts for calibration and prompts that show the status of the continuous background tests that are being performed.


*Continued on next page*

## 3.2 Configuration Prompts

Diagram: prompt hierarchy

Figure 3-1 shows an overview of the UDC 3000 Set Up prompts and their associated Function prompts. - Read from left to right.

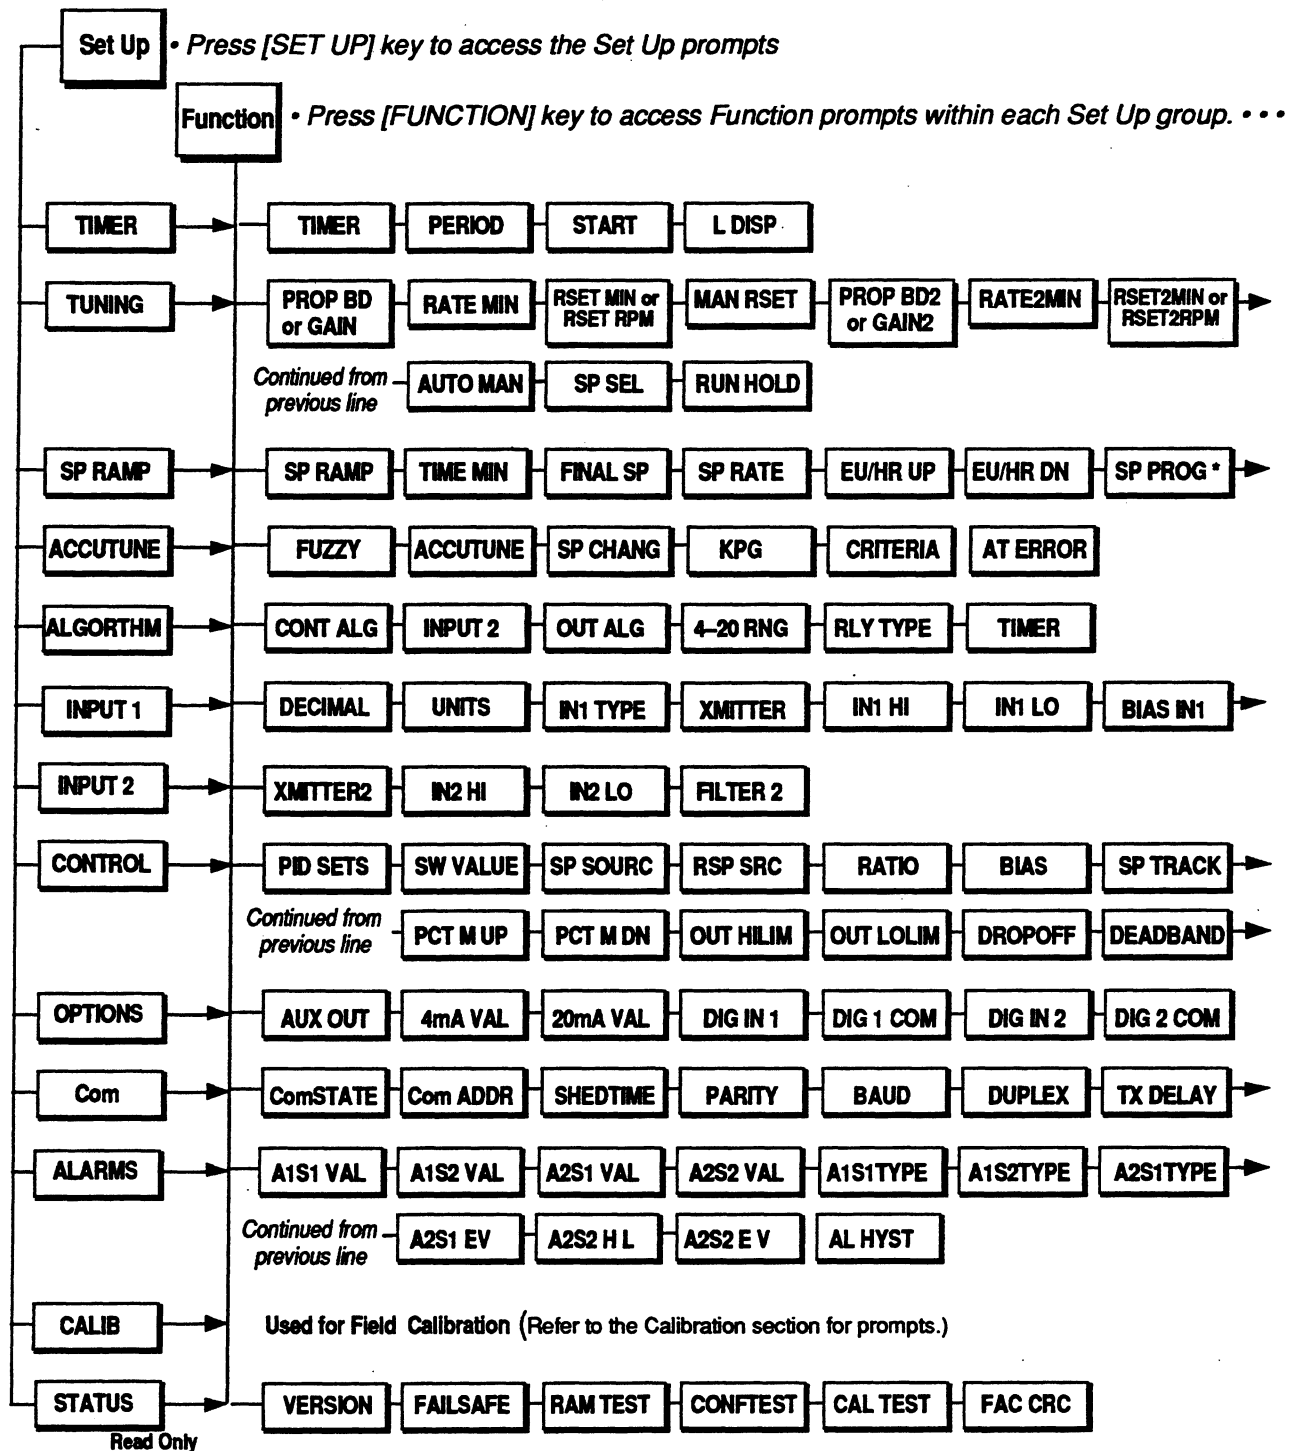Figure 3-1 Overview of UDC 3000 Prompt Hierarchy



Continued on next page



## 3.2 Configuration Prompts, Continued

---

... Press [▲] or [▼] to change the value or selection of the Function prompt.



→ \* Refer to the operation section for Setpoint programming prompts.



22623

## 3.3 How To Get Started

---

<b>Read the configuration tips</b>	Read “ <i>Configuration Tips</i> ” shown on the next page. These tips will help you to easily and quickly accomplish the tasks at which you will be working when you configure your controller.
<b>Read configuration procedure</b>	Read “ <i>Configuration Procedure</i> ”. This procedure tells you how to access the Set Up groups, and the Function parameters within each of these groups that are shown in the Prompt Hierarchy in Figure 3-1.
<b>Set Up groups</b>	The Set Up groups and Function parameters are listed in the order of their appearance. The list includes the name of the prompt, the range of setting or selections available, and the factory setting.
<b>Parameter explanations or definitions</b>	If you need a detailed explanation of any prompt listed, refer to <i>Section 4 – Configuration Parameter Definitions</i> . This section lists the Set Up and Function prompts, the selections or range of settings that you can make for each, plus a detailed explanation or definition of each parameter
<b>Configuration record sheet</b>	Located on the last page of this section is a “ <i>Configuration Record Sheet</i> ”. When you make your configuration selections, record them on this sheet. Then you will have a record of how the controller was configured.

---

## 3.4 Configuration Tips

### Introduction

Listed below in Table 3-1 are a few tips that will help you enter the configuration data more quickly.

Table 3-1 Configuration Tips

Function	Tip
<b>Displaying Groups</b>	Use the <b>Set Up</b> key to display the Set Up groups. The group titles are listed in this section in the order that they appear in the controller.
<b>Displaying Functions</b>	Use the <b>Function</b> key to display the individual parameters under each group. The prompts are listed in the order of their appearance in each group.
<b>Scrolling</b>	<p>To get to a Set Up group prompt more quickly, hold the <b>Set Up</b> key in. To get to a Function prompt more quickly, hold the <b>Function</b> key in. The display will scroll through the parameters.</p> <p><b>ATTENTION</b> The prompting scrolls at a rate of 2/3 seconds when the <b>Set Up</b> or <b>Function</b> key is held in. Also, <b>▲</b> <b>▼</b> keys will move group prompts forward or backward at a rate twice as fast.</p>
<b>Changing values quickly</b>	<p>When Changing the value of a parameter, you can adjust a more significant digit in the upper display by holding in one key <b>▲</b> or <b>▼</b>, and pressing the other <b>▲</b> or <b>▼</b> at the same time.</p> <p>The adjustment will move one digit to the left. Press the key again and you will move one more digit to the left.</p>
<b>Restoring to the original value</b>	When you change the value or selection of a parameter while in Set Up mode and decide not to enter it, press <b>Run/Hold</b> once, the original value or selection will be recalled.
<b>Exiting SET UP mode</b>	To exit Set Up mode, press the <b>Lower Display</b> key. This returns the display to the same state it was in immediately preceding entry into the Set Up mode.
<b>Timing out from Set Up mode</b>	If you are in Set Up mode and do not press any keys for one minute, the controller will time out and revert to the mode and display that was being used prior to entry into Set Up mode.
<b>Key Error</b>	<p>When a key is pressed and the prompt "KEY ERROR" appears in the lower display, it will be for one of the following reasons:</p> <ul style="list-style-type: none"> <li>• parameter not available</li> <li>• not in Set Up mode, press <b>Set Up</b> key first</li> <li>• key malfunction, do keyboard test (operation)</li> <li>• Individual key locked out</li> </ul>

## 3.5 Configuration Procedure

### Introduction

Each of the Set Up groups and their functions are pre-configured at the factory.

The factory settings are shown in the Set Up group tables that follow this procedure.

If you want to change any of these selections or values, follow the procedure in Table 3-2. This procedure tells you the keys to press to get to any Set Up group and any associated Function parameter prompt.

**If you need a detailed explanation of any prompt, refer to Section 4 – Configuration Parameter Definitions.**

### Procedure

Follow the procedure listed in Table 3-2 to access the Set Up groups and Function prompts.

**ATTENTION** The prompting scrolls at a rate of 2/3 seconds when the **Set Up** or **Function** key is held in. Also, [**▲**] [**▼**] keys will move group prompts forward or backward at a rate twice as fast.

Table 3-2 Configuration Procedure







Step	Operation	Press	Result
1	Select Set Up mode	<b>SET UP</b>	<p>Upper Display  <b>SET UP</b> Lets you know you are in the configuration mode and a Set Up group title is being displayed in the lower display.</p> <p>Lower Display  <b>TUNING *</b> This is the first Set Up group title.                      **Timer* will appear if enabled.</p>
2	Select any Set Up group	<b>SET UP</b>	<p>Successive presses of the <b>Set Up</b> key will sequentially display the other Set Up group titles shown in the prompt hierarchy in figure 3-1. You can also use the [<b>▲</b>] [<b>▼</b>] keys to scan the Set Up groups in both directions. Stop at the Set Up group title which describes the group of parameters you want to configure. Then proceed to the next step.</p>
3	Select a Function Parameter	<b>FUNCTION</b>	<p>Upper Display  <b>1.0</b> Shows you the current value or selection for the first function prompt of the particular Set Up group that you have selected.</p> <p>Lower Display  <b>GAIN</b> Shows the first Function prompt within that Set Up group.</p> <p>Example displays show Set Up group "Tuning", Function prompt "Gain" and the value selected.</p>

*Continued on next page*

### 3.5 Configuration Procedure, Continued

Procedure (continued)

Table 3-2 Configuration Procedure, continued

Step	Operation	Press	Result
4	Select other Function Parameters		<p>Successive presses of the <b>Function</b> Key will sequentially display the other function prompts of the Set Up group you have selected.</p> <p>Stop at the function prompt that you want to change, then proceed to the next step.</p>
5	Change the value or selection	 or 	<p>These keys will increment or decrement the value or selection that appears for the function prompt you have selected.</p> <p>See "Configuration Tips" for instructions to increase or decrease value quickly.</p> <p>Change the value or selection to meet your needs.</p> <p>If the display flashes, you are trying to make an unacceptable entry.</p>
6	Enter the value or selection	 or 	<p>This key selects another function prompt.</p> <p>This key selects another Set Up group.</p> <p>The value or selection you have made will be entered into memory after another key is pressed.</p>
7	Exit Configuration		<p>This exits configuration mode and returns the controller to the same state it was in immediately preceding entry into the Set Up mode. It stores any changes you have made.</p>

## 3.6 Timer Parameters Set Up Group

### Introduction

The Timer Set Up group, when enabled, allows you to

- set a timeout period configurable from 0 to 99 hrs:59 minutes,
- select the start of the timer as either the **RUN/HOLD** key or alarm 2,
- select the lower display to indicate time remaining or elapsed time.

This group appears only if enabled in Set Up group “ALGORTHM”.

### Function prompts

Table 3-3 lists all the function prompts in the Timer Set Up group.

Table 3-3 Timer Group Function Prompts

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
<b>TIMER</b>	Timer Enable/Disable	ENABLE DISABL	DISABLE
<b>PERIOD</b>	Timeout Period	0:00 to 99:59	0.01
<b>START</b>	Start Initiation	KEY ALARM 2	KEY
<b>L DISP</b>	Lower Display Selection	TI REM (time remaining) E TIME (elapsed time)	TI REM

## 3.7 Tuning Parameters Set Up Group

---

### **Introduction**

The Tuning Set Up group contains the Function parameters that will allow your controller to respond correctly to changes in process variable or setpoint.

You can start with predetermined values but you will have to watch your process to determine how to modify them.

If you have the Accutune option, this will automatically select Gain, Rate, and Reset values.

---

### **Set this group last**

Because this group contains functions that have to do with Security and Lockout, it is best to configure this group last, after all the other configuration data has been loaded.

---

*Continued on next page*

### 3.7 Tuning Parameters Set Up Group, Continued

**Function prompts**

Table 3-4 lists all the function prompts in the Tuning Set Up group. How the “Algorithm” and “Control” Set Up groups are configured determines which prompts will appear.

Table 3-4 Tuning Group Function Prompts

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
<b>PROP BD</b> or <b>GAIN</b>	Proportional Band, or Gain	0.1 to 999.9% 0.1 to 999.9	1.0
<b>RATE MIN</b>	Rate in Minutes	0.08 to 10.00 minutes	0.00
<b>RSET MIN</b>	Reset in minutes/repeat	0.02 to 50.00	1.0
<b>RSET RPM</b>	Reset in repeats/minute	0.02 to 50.00	1.0
<b>MAN RSET</b>	Manual Reset	-100 to 100% Output	0.0
<b>PROP BD2</b> or <b>GAIN 2</b>	Proportional Band 2, or Gain 2	0.1 to 999.9% 0.1 to 999.9	5.0
<b>RATE2MIN</b>	Rate 2 in Minutes	0.08 to 10.00 minutes	0.00
<b>RSET2MIN</b>	Reset 2 in minutes/repeat	0.02 to 50.00	0.2
<b>RSET2RPM</b>	Reset 2 in repeats/minute	0.02 to 50.00	0.2
<b>CYC SEC</b>	Cycle Time (Heat) Electromechanical Relays	1 to 120 seconds	20.0
<b>CYC2 SEC</b>	Cycle Time 2 (Cool) Electromechanical Relays	1 to 120 seconds	20.0
<b>CYC SX3</b>	Cycle Time(Heat) Solid State Relays	1 to 120 (1/3 second increments) 1 = .33 Sec. 120 = 40 Sec	20.0
<b>CYC2SX3</b>	Cycle Time(Cool) Solid State Relays	1 to 120 (1/3 second increments) 1 = .33 Sec. 120 = 40 Sec	20.0
<b>SECURITY</b>	Security Code	0 to 4095	
<b>LOCKOUT</b>	Configuration Lockout	NONE CALIB +CONF +VIEW MAX	CALIB
<b>AUTO MAN *</b>	Manual/Auto Key Lockout	DISABL ENABLE	ENAB
<b>SP SEL *</b>	Setpoint Select Key Lockout	DISABL ENABLE	ENAB
<b>RUN HOLD *</b>	Run/Hold key Lockout	DISABL ENABLE	ENAB

\*Only appears if LOCKOUT = NONE.



## 3.8 SP Ramp/Program Set Up Group

---

**Single Setpoint Ramp**      The Setpoint Ramp Set Up group contains the Function parameters that let you to configure a single set point ramp to occur between the current local setpoint and a final setpoint over a time interval (SP RAMP).

---

**Setpoint rate**              The Setpoint Ramp Set Up group also contains the function parameters that let you configure a specific rate of change for any Local Setpoint change (SP RATE). It includes selections for Rate Up and Rate Down.

---

**Setpoint Program**        Also included under this group are prompts for configuring a Setpoint program (SP PROG). The prompts and instructions for Setpoint programming are in the *Operation* section.

---

**Function prompts**        Table 3-5 lists all the function prompts in the SP RAMP Set Up group.

Table 3-5      SP Ramp Group Function Prompts

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
SP RAMP	Single Setpoint Ramp Selection	DISABL ENABLE	DISABL
TIME MIN	Single Setpoint Ramp Time	0 to 255 minutes	3
FINAL SP	Single Setpoint Final Setpoint	Enter a value within the setpoint limits	
SP RATE	Setpoint Rate	DISABL ENABLE	DISABL
EU/HR UP	Rate Up Value (SP Rate Enabled)	0 to 9999 in Units per Hour	
EU/HR DN	Rate Down Value (SP Rate Enabled)	0 to 9999 in Units per Hour	
SP PROG	Setpoint Programming	DISABL ENABLE	DISABL

---

## 3.9 Accutune Set Up Group

### Introduction

The Accutune Set Up group offers these selections:

- **(FUZZY) Fuzzy Overshoot Suppression** - uses fuzzy logic to suppress or eliminate any overshoot that may occur when the PV approaches setpoint.
- **(TUNE) Demand Tuning** - The tuning process is initiated through the operator interface keys or via a digital input (if configured). The algorithm then calculates new tuning parameters and enters them in the tuning group.
- **(SP) SP Tuning** -SP Tune continuously adjusts the PID parameters in response to setpoint changes. You can select tuning on minimum setpoint changes of 5% up to 15% span. Perform SP tuning after you have configured the controller.  
SP Tuning does not work with 3 Position Step Control algorithm.

### Function prompts

Table 3-6 lists all the function prompts in the “ACCUTUNE” Set Up group.

Table 3-6 Accutune Group Function Prompts

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
<b>FUZZY</b>	Fuzzy Overshoot Suppression	DISABLE ENABLE	Disabl
<b>ACCUTUNE</b>	Accutune	DISABLE TUNE (Demand Tuning) SP (SP Tuning)	Disabl
<b>SP CHANG*</b>	Setpoint Change	5 to 15% Input Span	10
<b>KPG*</b>	Process Gain	0.10 to 10.00 (Normally Read Only)	1.0
<b>CRITERIA*</b>	Tuning Criteria	NORMAL FAST	FAST
<b>AT ERROR</b>	Accutune Error codes	Read Only NONE OUT LIM* * ID FAIL ABORT LOW PV RUNING	

\* APPLIES TO SP ACCUTUNE ONLY

## 3.10 Algorithm Data Set Up Group

### Introduction

This data deals with various algorithms residing in the controller: Control Algorithm and Output algorithms, enabling the Second Input or the Current Duplex range, and selecting the type of relay.

### Function prompts

Table 3-7 lists all the function prompts in the "ALGORITHM" Set Up group.

Table 3-7 Algorithm Group Function Prompts

Function Prompt Lower Display	Function Name	Selections or Range of Setting Upper Display	Factory Setting
CONT ALG	Control Algorithm	ON-OFF* PID A PID B PD+MR 3PSTEP*	PID A
INPUT 2	Input 2	ENABLE DISABL	DISABL
OUT ALG**	Output Algorithm	TIME CURRNT POSITN TIME D CUR D CUR TI TI CUR	Depends on model
4-20RNG	Current Duplex Range (CUR D)	100PCT (FULL) 50 PCT (SPLIT)	50PCT
RLY TYPE*	Output Relay Type	MECHAN SOL ST	MECHAN
TIMER	Timer Group Enable/Disable	ENABLE DISABL	DISABL

\* For Time Proportional only. Prompt appears only if LOCKOUT=NONE

\*\* Selections are model dependent. For example, current output models cannot be configured for Time Proportioning Simplex Output.

### 3.11 Input 1 Parameters Set Up Group

**Introduction**

This data deals with various parameters required to configure Input 1.

**Function prompts**

Table 3-8 lists all the function prompts in the "INPUT 1" Set Up group.

Table 3-8 Input 1 Group Function Prompts

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
<b>DECIMAL</b>	Decimal Point Location	XXXX None XXXX One XXXX Two	XXXX
<b>UNITS</b>	Temperature Units	DEG F DEG C NONE	NONE
<b>IN1 TYPE</b>	Input 1 Actuation Type	BTC      T TCH ETCH     T TCL ETCL     WTCH JTCH     WTCL JTCL     100 PT KTCH     100 LO KTCL     500 PT NNM TCH    RADIAM NNM TCL    4-20mA NIC TC     0-10mV RTC        10-50m STC        1-5 V      0-10V	0-10mV
<b>XMITTER</b>	Transmitter Characterization	BTC      T TCH ETCH     T TCL ETCL     WTCH JTCH     WTCL JTCL     100 PT KTCH     100 LO KTCL     500 PT NNM TCH    RADIAM NNM TCL    LINEAR NIC TC     SQROOT RTC STC	LINEAR
<b>IN1 HI</b>	Input 1 High Range Value (Linear Inputs only)	-999.0 to 9999. in engineering units	1000
<b>IN1 LO</b>	Input 1 Low Range Value (Linear Inputs only)	-999.0 to 9999. in engineering units	0

*Continued on next page*

### 3.11 Input 1 Parameters Set Up Group, Continued

Function prompts,  
continued

Table 3-8 lists all the function prompts in the "INPUT 1" Set Up group.

Table 3-8 Input 1 Group Function Prompts, continued

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
<b>BIAS IN1</b>	Input 1 Bias	-999.0 to 9999.	0
<b>FILTER 1</b>	Input 1 Filter	0 to 120 seconds	0
<b>BURNOUT</b>	Burnout Protection	NONE UP DOWN	NONE
<b>EMISSIV</b>	Emissivity	0.01 to 1.00	0
<b>PWR FREQ</b>	Power Line Frequency	60 Hz 50 Hz	60 Hz
<b>LANGUAGE</b>	Prompt Language	ENGLIS FRENCH GERMAN SPANIS ITALAN	ENGLIS

## 3.12 Input 2 Parameters Set Up Group

### Introduction

This data deals with various parameters required to configure Input 2. This only appears when input 2 in the "Algorithm" Group is enabled.

### Function prompts

Table 3-9 lists all the function prompts in the INPUT 2 Set Up group.

Table 3-9 Input 2 Group Function Prompts

Function Prompt Lower Display	Function Name	Selections or Range of Setting Upper Display	Factory Setting
<b>XMITTER2</b>	Transmitter Characterization	B TC      T TC H E TC H    T TC L E TC L    W TC H J TC H    W TC L J TC L    100 PT K TC H    100 LO K TC L    500 PT NNM TC H    RADIAM NNM TC L    LINEAR NIC TC      SQROOT R TC S TC	LINEAR
<b>IN2 HI</b>	Input 2 High Range Value	-999.0 to 9999. in engineering units (Adjustable for linear inputs only)	1000
<b>IN2 LO</b>	Input 2 Low Range Value	-999.0 to 9999. in engineering units (Adjustable for linear inputs only)	0
<b>FILTER 2</b>	Input 2 Filter	0 to 120 seconds 0 = No Filter	0

### 3.13 Control Parameters Set Up Group

**Introduction**

This data deals with various parameters required to effectively control your process.

**Function prompts**

Table 3-10 lists all the function prompts in the "CONTROL" Set Up group.

Table 3-10 Control Group Function Prompts

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
PID SETS	Tuning Parameter Sets	1 ONLY 2KEYBD 2PV SW 2SP SW	1 ONLY
SW VALUE	Automatic Switchover Value	Value in Engineering Units	0.00
SP SOURC	Local Setpoint Source	1 LOCAL 2 LOCAL	1 LOCAL
RSP SRC	Remote Setpoint Source	NONE IN 2	NONE
RATIO	Ratio	-20.00 to 20.00	1.0
BIAS	Bias	-999.0 to 9999 in engineering units	0
SP TRACK	Local Setpoint Tracking	NONE PV RSP	NONE
POWER UP	Power Up Recall	MANUAL A LSP A RSP AM SP AM LSP	MANUAL
PWR OUT	Power Up Output	LAST F'SAFE <b>ATTENTION</b> This prompt will appear only if "3PSTEP" is selected at Set Up group "ALGORITHM", function prompt "CONT ALG".	LAST
SP HILIM	Setpoint High Limit	0 to 100% of span input in engineering units with decimal place.	1000
SP LOLIM	Setpoint Low Limit	0 to 100% of span input in engineering units with decimal place.	0
ACTION	Control Output Direction	DIRECT REVERSE	REVERSE

*Table continued on next page*

### 3.13 Control Parameters Set Up Group, *Continued*

Function prompts,  
continued

Table 3-10 lists all the function prompts in the "CONTROL" Set Up group.

Table 3-10 Control Group Function Prompts, continued

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
OUT RATE	Output Change Rate  <b>ATTENTION</b> Does not apply to 3 Position Step Control algorithm.	ENABLE DISABL	DISABL
PCT/M UP	Output Rate Up Value	0 to 9999% / minute	0
PCT/M DN	Output Rate Down Value	0 to 9999% / minute	0
OUTHILIM	High Output Limit	-5.0 to 105.0% of output	100.0
OUTLOLIM	Low Output Limit	-5.0 to 105.0% of output	0
DROPOFF	Controller Dropoff Value	-5.0 to 105.0% of output	0.0
DEADBAND	Output Relay Deadband	<i>Current Proportional Duplex or Time Proportional Duplex:</i> -5.0 to 25.0%  <i>Position Proportional or Three Position Step:</i> 0.5 to 5.0%	2.0
OUT HYST	Output Relay Hysteresis	0.0 to 5.0%	0.5
FAILSAFE	Failsafe Output Value  <i>For 3Pos. Step Control:</i> 100PCT  0PCT	Set within the range of the output limits. <i>For 3Pos. Step Control:</i> <b>100PCT</b> - Set motor position to 100% output position  <b>0PCT</b> - Set motor position to 0% output position	0.0
MAN OUT	Power-up Manual Mode Output Preset Value	0.0 to 100.0%	0.0
AUTO OUT	Power-up Automatic Mode Output Preset Value	0.0 to 100.0%	0.0
PBoRGAIN	Proportional Band or Gain Units	PB PCT GAIN	GAIN
MINorRPM	Reset Units	R P M MIN	MIN



## 3.14 Options Set Up Group

### Introduction

This data deals with various options that are available with your controller. If your controller does not have any of these options the prompts will not appear.

### Function prompts

Table 3-11 lists all the function prompts in the "Options" Set Up group.

Table 3-11 Options Group Function Prompts

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
<b>AUX OUT</b>	Auxiliary Output Representation	DISABL IN 1 IN 2 PV DEV OUTPUT SP LSP1	DISABL
<b>4mA VAL</b>	Auxiliary Output Low Scaling Factor	Low scale value to represent 4 mA. Value in % for output. All other in Engineering units.	0
<b>20mA VAL</b>	Auxiliary Output High Scaling Factor	High scale value to represent 20 mA. Value in % for output. All other in Engineering units.	0
<b>DIG IN 1</b>	Digital Input 1 selections	NONE To MAN To LSP To 2SP To DIR To HOLD ToPID2 PV 2IN To RUN To BEGN STOP I MAN FS To LOCK To A OUT TIMER AM STA ToTUNE	NONE
<b>DIG1 COM</b>	Digital Input 1 Combinations	DISABL +PID2 +TO DIR +TO SP2 +DISAT	DISABL
<b>DIG IN 2</b>	Digital Input 2 selections	Same as DIG IN 1	NONE
<b>DIG 2 COM</b>	Digital Input 2 Combinations	Same as DIG1 COM	DISABL

## 3.15 Communications Group

### Introduction

This data deals with the Communications option that is available with your controller. This option allows the controller to be connected to a host computer via a RS422 or DMCS bus.

If your controller does not have this option the prompts will not appear.

### Function prompts

Table 3-12 lists all the function prompts in the “Com” Set Up group.

Table 3-12 Com Group Function Prompts

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
<b>ComSTATE</b>	Communications Option State	DISABL DMCS RS422	DISABL
<b>Com ADDR</b>	Communications Station Address	1 to 99	0
<b>SHEDTIME</b>	Shed Time	1 to 255 sample periods	0
<b>PARITY</b> (RS422/485 Only)	Parity	ODD EVEN	ODD
<b>BAUD</b> (RS422/485 Only)	Baud Rate	300      4800 600      9600 1200     19200 2400	300
<b>DUPLEX</b> (RS422/485 Only)	Duplex Operation	HALF FULL	HALF
<b>TX DELAY</b> (RS422/485 Only)	Transmission Delay	1 to 500 milliseconds	1
<b>SHEDMODE</b>	Shed Controller Mode and Output Level	LAST TO MAN FSAFE ToAUTO	LAST
<b>SHED SP</b> (DMCS Only)	Shed Setpoint Recall	TO LSP TO CSP	TO LSP
<b>UNITS</b>	Communication Units	PERCNT ENG	PERCNT
<b>LOOPBACK</b>	Local Loop Back	DISABL ENABLE	DISABL

## 3.16 Alarms Set Up Group

### Introduction

This data deals with the Alarms function that is available with your controller.

There are two alarms available. Each alarm has two setpoints.

You can configure each of these two setpoints to alarm on one of nine events and you can configure each setpoint to alarm High or Low.

You can also configure the two setpoints to alarm on the same event and to alarm both high and low, if desired.

### Function prompts

Table 3-13 lists all the function prompts in the “Alarms” Set Up group.

Table 3-13 Alarms Group Function Prompts

Function Prompt <small>Lower Display</small>	Function Name	Selections or Range of Setting <small>Upper Display</small>	Factory Setting
<b>A1S1 VAL</b>	Alarm 1, Setpoint 1 Value	Value in Engineering Units	90
<b>A1S2 VAL</b>	Alarm 1, Setpoint 2 Value	Value in Engineering Units	10
<b>A2S1 VAL</b>	Alarm 2, Setpoint 1 Value	Value in Engineering Units	95
<b>A2S2 VAL</b>	Alarm 2, Setpoint 2 Value	Value in Engineering Units	5
<b>A1S1TYPE</b>	Alarm 1, Setpoint 1 Type	NONE IN 1 (Input 1) IN 2 (Input 2) PV (Process Variable) DEV (Deviation) OUTPUT SHED (Communications) EVON (SP Programming) EVOFF (SP Programming) MANUAL (Manual Mode)	NONE
<b>A1S2TYPE</b>	Alarm 1, Setpoint 2 Type	Same as A1S1TYPE	NONE
<b>A2S1TYPE</b>	Alarm 2, Setpoint 1 Type	Same as A1S1TYPE	NONE
<b>A2S2TYPE</b>	Alarm 2, Setpoint 2 Type	Same as A1S1TYPE	NONE
<b>A1S1 H L</b>	Alarm 1, Setpoint 1 State	LO HI	HI
<b>A1S1 EV</b>	SP Programming Event Alarm State for Alarm 1, Setpoint 1	BEGIN END	

*Table continued on next page*

### 3.16 Alarms Set Up Group, Continued

Function prompts,  
continued

Table 3-13 lists all the function prompts in the “Alarms” Set Up group.

Table 3-13 Alarms Group Function Prompts, continued

<b>Function Prompt</b> <small>Lower Display</small>	<b>Function Name</b>	<b>Selections or Range of Setting</b> <small>Upper Display</small>	<b>Factory Setting</b>
<b>A1S2 H L</b>	Alarm 1, Setpoint 2 State	LO HI	LO
<b>A1S2 EV</b>	SP Programming Event Alarm State for Alarm 1, Setpoint 2	BEGIN END	
<b>A2S1 H L</b>	Alarm 2, Setpoint 1 State	LO HI	HI
<b>A2S1 EV</b>	SP Programming Event Alarm State for Alarm 2, Setpoint 1	BEGIN END	
<b>A2S2 H L</b>	Alarm 2, Setpoint 2 State	LO HI	LO
<b>A2S2 EV</b>	SP Programming Event Alarm State for Alarm 2, Setpoint 2	BEGIN END	
<b>AL HYST</b>	Alarm Hysteresis	0.0 to 100 % of Output or Span as appropriate	0.1

## 3.17 Calib Group

---

### Calibration data

The prompts used here are for field calibration purposes.  
Refer to *Section 7 – Calibration* in this manual for complete information and instructions.

---

## 3.18 Status Group

---

### Status Test Data

The prompts used here are read only.  
They are used to determine the reason for a controller failure.  
Refer to *Section 9 – Troubleshooting* in this manual for complete information.

---

# 3.19 Configuration Record Sheet

Keep a record

Enter the value or selection for each prompt on this sheet so you will have a record of how your controller was configured.

Group Prompt	Function Prompt	Value or Selection	Factory Setting	Group Prompt	Function Prompt	Value or Selection	Factory Setting	
TIMER	TIMER	_____	DISABL	CONTROL	PID SETS	_____	1 ONLY	
	PERIOD	_____	0.01		SW VALUE	_____	0.00	
	START	_____	KEY		SP SOURC	_____	1 LOCAL	
	L DISP	_____	TI REM		RSP SRC	_____	NONE	
TUNING	PROP BD	_____	1.0		RATIO	_____	1.0	
	or				BIAS	_____	0	
	GAIN	_____	1.0		SP TRACK	_____	NONE	
	RATE MIN	_____	0.00		POWER UP	_____	MANUAL	
	RSET MIN	_____	1.0		PWR OUT	_____	LAST	
	or				SP HILIM	_____	1000	
	RSET RPM	_____	1.0		SP LOLIM	_____	0	
	or				ACTION	_____	REVERSE	
	MAN RSET	_____	0.0		OUT RATE	_____	DISABL	
	PROP BD2	_____	1.0		PCT/M UP	_____	0	
	or				PCT/M DN	_____	0	
	GAIN 2	_____	1.0		OUT HILIM	_____	100.0	
	RATE2MIN	_____	0.00		OUT LOLIM	_____	0	
	RSET2MIN	_____	1.0		DROPOFF	_____	0.0	
	or				DEADBAND	_____	2.0	
RSET2RPM	_____	1.0	OUT HYST		_____	0.5		
CYCSEC	_____	20.0	FAILSAFE		_____	0.0		
CYC2SEC	_____	20.0	MAN OUT		_____	0.0		
SECURITY	_____	0	AUTO OUT		_____	0.0		
LOCKOUT	_____	CALIB	PBorGAIN		_____	GAIN		
AUTO MAN	_____	ENABLE	MINorRPM		_____	MIN		
SP SEL	_____	ENABLE						
RUN HOLD	_____	ENABLE						
SP RAMP	SP RAMP	_____	DISABL		OPTIONS	AUX OUT	_____	DISABL
	TIME MIN	_____	3			4mA VAL	_____	0
	FINAL SP	_____	—			20mA VAL	_____	0
	SP RATE	_____	DISABL			DIG IN 1	_____	NONE
	EU/HR UP	_____	—			DIG1 COM	_____	DISABL
	EU/HR DN	_____	—			DIG IN 2	_____	NONE
SP PROG	_____	DISABL	DIG2 COM		_____	DISABL		
ACCUTUNE	FUZZY	_____	DISABL		Com	ComSTATE	_____	DISABL
	ACCUTUNE	_____	DISABL			Com ADDR	_____	0
	SP CHANG	_____	10			SHEDTIME	_____	0
	KPG	_____	1.0			PARITY	_____	ODD
CRITERIA	_____	NORMAL	BAUD			_____	300	
ALGORITHM	CONT ALG	_____	PID A			DUPLEX	_____	—
	INPUT 2	_____	DISABL			TX DELAY	_____	1
	OUT ALG	_____	—			LOOPBACK	_____	DISABL
	4-20RNG	_____	50PCT			SHEDMODE	_____	LAST
INPUT 1	RLY TYPE	_____	MECHAN			SHED SP	_____	TO LSP
	TIMER	_____	DISABL		UNITS	_____	PERCNT	
	DECIMAL	_____	XXXX	ALARMS	A1S1 VAL	_____	90	
	UNITS	_____	NONE		A1S2 VAL	_____	10	
	IN1 TYPE	_____	0—10mV		A2S1 VAL	_____	95	
	XMITTER	_____	LINEAR		A2S2 VAL	_____	5	
	IN1 HI	_____	1000		A1S1TYPE	_____	NONE	
	IN1 LO	_____	0		A1S2TYPE	_____	NONE	
	BIAS IN1	_____	0		A2S1TYPE	_____	NONE	
	FILTER 1	_____	1		A2S2TYPE	_____	NONE	
BURNOUT	_____	NONE	A1S1 H L		_____	HI		
EMISSIV	_____	0	A1S1 EV		_____	—		
PWR FREQ	_____	60HZ	A1S2 H L	_____	LO			
LANGUAGE	_____	ENGLIS	A1S2 EV	_____	—			
INPUT 2	XMITTER 2	_____	LINEAR	A2S1 H L	_____	HI		
	IN2 HI	_____	1000	A2S1 EV	_____	—		
	IN2 LO	_____	0	A2S2 H L	_____	LO		
	FILTER 2	_____	1	A2S2 EV	_____	—		
		_____		AL HYST	_____	0.1		

# Section 4 – Configuration Prompt Definitions

## 4.1 Overview

### Introduction

This section provides information for all the user configurable parameters listed in the configuration section. If you aren't familiar with these parameters, this section gives you the parameter prompt, the selection or range of setting that you can make, and a definition of how each parameter setting affects controller performance. It will also refer you to any other prompts that might be affected by your selection.

### What's in this section?

The table below lists the topics that are covered in this section. They are listed in the order of their appearance in the controller.

	<b>Topic</b>	<b>See Page</b>
4.1	Overview	53
4.2	Timer Parameters Set Up Group	54
4.3	Tuning Parameters Set Up Group	55
4.4	Setpoint Ramp/Rate/Program Set Up Group	58
4.5	Accutune Set Up Group	59
4.6	Algorithm Data Set Up Group	61
4.7	Input 1 Set Up Group	65
4.8	Input 2 Set Up Group	69
4.9	Control Set Up Group	71
4.10	Options Set Up Group	76
4.11	Communications Set Up Group	79
4.12	Alarms Set Up Group	81
4.13	Calibration Data	84
4.14	Status Test Data	84

## 4.2 Timer Parameters Set Up Group

### Introduction

The Timer option allows you to configure a timeout period and to select the timer start by either the keyboard (Run/Hold key) or Alarm 2. The optional digital input can also be configured to start the timer. The timer display is selectable as either “time remaining” or “elapsed time”.

Alarm 1 is activated at the end of the timeout period. When the timer is enabled, it has exclusive control of the alarm 1 relay—any previous alarm 1 configuration is ignored. At timeout, the timer is ready to be activated again by whatever action has been configured.

### Timer group prompts

Table 4-1 lists all the function prompts in the Timer setup group and their definitions.

Table 4-1 Timer Group Prompt Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>TIMER</b>	ENABLE DISABL	<b>TIMER</b> allows you to enable or disable the timer option.
<b>PERIOD</b>	0:00 to 99:59	<b>PERIOD</b> allows you to configure the length of timeout period (from 0 to 99 hours:59 minutes).
<b>START</b>	KEY ALARM2	<b>START</b> allows you to select whether the timer starts with the keyboard (Run/Hold key) or Alarm 2.
<b>L DISP</b>	TI REM E TIME	<p><b>L DISP</b> allows you to select whether time remaining (TI REM) or elapsed time (E TIME) is displayed for the timer option.</p> <p>The time is shown on the lower display in HH:MM format along with a rotating “clock” character.</p> <p>If the “clock” rotation is <i>clockwise</i>, elapsed time is indicated.</p> <p>If the “clock” rotation is <i>counterclockwise</i>, time left is indicated.</p>



## 4.3 Tuning Parameters Set Up Group

### Introduction

Tuning consists of establishing the appropriate values for the tuning constants you are using so that your controller responds correctly to changes in process variable and setpoint. You can start with pre-determined values but you will have to watch the system to see how to modify them. Accutune feature automatically selects Gain, Rate, and Reset.

### Set this group last

Because this group contains functions that have to do with security and lockout, we recommend that you configure this group last, after all the other configuration data has been loaded.

### Tuning group prompts

Table 4-2 lists all the function prompts in the Tuning setup group and their definitions.

Table 4-2 Tuning Group Prompt Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
PROP BD or GAIN	0.1 to 999.9% or 0.1 to 999.9	<p><b>PROPORTIONAL BAND</b> is the percent of the range of the measured variable for which a proportional controller will produce a 100% change in its output.</p> <p><b>GAIN</b> is the ratio of output change (%) over the measured variable change (%) that caused it.</p> $G = \frac{100\%}{PB\%}$ <p>where PB is the proportional band (in %)</p> <p>If the PB is 20%, then the Gain is 5. Likewise, a 3% change in the error signal (SP-PV) will result in a 15% change in the controller's output due to proportional action. If the Gain is 2, then the PB is 50%.</p> <p>Defined as "HEAT" Gain on Duplex models for variations of Heat/Cool applications.</p> <p>The selection of Prop. Band or Gain is made in the control parameter group under prompt "PBorGAIN."</p>
RATE MIN	0.08 to 10.00 minutes 0.08 or less = OFF	<p><b>RATE</b> action affects the controller's output whenever the deviation is changing; and affects it more when the deviation is changing faster.</p> <p>Defined as "HEAT" Rate on Duplex models for variations of Heat/Cool applications.</p>

*Continued on next page*

## 4.3 Tuning Parameters Set Up Group, Continued

Table 4-2 Tuning Group Prompt Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
RSET MIN or RSET RPM	0.02 to 50.00	<p><b>RSET MIN</b> = RESET IN MINUTES / REPEAT  <b>RSET RPM</b> = RESET IN REPEATS PER MINUTE  <b>RESET</b> adjusts the controller's output in accordance with both the size of the deviation (SP-PV) and the time it lasts. The amount of the corrective action depends on the value of Gain. The Reset adjustment is measured as how many times proportional action is repeated/minute.</p> <p>Used with control algorithm PID-A or PID-B. Defined as "HEAT" Reset on Duplex models for variations of Heat/Cool applications.</p> <p>The selection of minutes per repeat or repeats per minute is made in the control parameters group under prompt "MINorRPM."</p>
MAN RSET	-100 to +100 (in % output)	<p><b>MANUAL RESET</b> is only applicable if you have control algorithm PD WITH MANUAL RESET. Because a proportional controller will not necessarily line out at setpoint, there will be a deviation (offset) from setpoint. This eliminates the offset and lets the PV line out at setpoint.</p>
PROP BD2 or GAIN 2	0.1 to 999.9% or 0.1 to 999.9	<p><b>PROPORTIONAL BAND 2</b> or <b>GAIN 2</b>, <b>RATE 2</b>, and <b>RESET 2</b> parameters are the same as previously described for "Heat" except that they refer to the <b>cool</b> zone tuning constants on duplex models or the second set of PID constants, whichever is pertinent.</p>
RATE2MIN	0.08 to 10.00 minutes 0.08 or less = OFF	
RSET2MIN RSET2RPM	0.02 to 50.00	
CYC SEC	1 to 120 seconds	<p><b>CYCLE TIME (HEAT)</b> determines the length of one time proportional output relay cycle. Defined as "HEAT" cycle time for Heat/Cool applications. Electromechanical relays</p>
CYC2 SEC	1 to 120 seconds	<p><b>CYCLE TIME 2 (COOL)</b> is the same as above except it applies to Duplex models as the cycle time in the "COOL" zone of Heat/Cool applications or for 2nd set of PID constants. Electromechanical relays</p>
CYC SX3	1 to 120 (1/3 second increments) 1 = .33 sec./120 = 40 sec.	<p><b>CYCLE TIME (HEAT)</b> - same as above except for solid state relays.            Algorithm prompt "RLY TYPE", selection "SOL ST"</p>
CYC2 SX3	1 to 120 (1/3 second increments) 1 = .33 sec./120 = 40 sec	<p><b>CYCLE TIME 2 (COOL)</b> same as above except for solid state relays.            Algorithm prompt "RLY TYPE", selection "SOL ST"</p>

Continued on next page

## 4.3 Tuning Parameters Set Up Group, Continued

Table 4-2 Tuning Group Prompt Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>SECURITY</b>	0000-4095	<p><b>SECURITY CODE</b> – The level of keyboard lockout may be changed in the set up mode. Knowledge of a security code may be required to change from one level to another. Select this number here, copy it, and keep it in a secure location. Entering “0” disables the security code feature.</p> <p>NOTE: The Security Code is for keyboard entry only and is not available via communications.</p> <p>Can only be changed if “LOCKOUT” selection is “NONE”.</p>
<b>LOCKOUT</b>	<p>NONE</p> <p>CALIB</p> <p>+CONF</p> <p>+VIEW</p> <p>MAX</p>	<p><b>LOCKOUT</b> applies to one of the functional groups: Configuration, Calibration, Tuning, Accutune. <b>DO NOT CONFIGURE UNTIL ALL CONFIGURATION IS COMPLETE.</b></p> <p>No Lockout – all groups read/write. Allows individual key lockout.</p> <p><b>CALIB</b> – All are available for read/write except for the Calibration and Keyboard Lockout groups.</p> <p><b>+CONF</b> – Tuning, SP Ramp, and Accutune groups are read/write. All other groups are read only. Keyboard Lockout and Calibration groups are not available.</p> <p><b>+VIEW</b> – Tuning and Setpoint Ramp parameters are read/write. No other parameters are viewable.</p> <p><b>MAX</b> – Tuning and Setpoint Ramp parameters are available for read only. No other parameters are viewable</p>
<b>AUTO MAN</b>	<p>DISABL</p> <p>ENABLE</p>	<p><b>MANUAL/AUTO KEY LOCKOUT</b> – Allows you to disable the Manual/Auto key.</p> <p>Disable</p> <p>Enable</p> <p>Can only be viewed if “LOCKOUT” is configured for “NONE”.</p>
<b>SP SEL</b>	<p>DISABL</p> <p>ENABLE</p>	<p><b>SETPOINT SELECT KEY LOCKOUT</b> – Allows you to disable the Setpoint Select key.</p> <p>Disable</p> <p>Enable</p> <p>Can only be viewed if “LOCKOUT” is configured for “NONE”.</p>
<b>RUN HOLD</b>	<p>DISABL</p> <p>ENABLE</p>	<p><b>RUN/HOLD KEY LOCKOUT</b> – Allows you to disable the Run/Hold key.</p> <p>Disable</p> <p>Enable</p> <p>Can only be viewed if “LOCKOUT” is configured for “NONE”.</p>

## 4.4 Setpoint Ramp/Program Set Up Group

### Introduction

A single setpoint ramp can be configured to occur between the current local setpoint and a final local setpoint over a time interval of from 1 to 255 minutes.

There is also a configurable rate of change for any local setpoint change. You can also configure a 12 segment program from a Ramp/Soak profile. You can start and stop the ramp/program using the RUN/HOLD key.

### Setpoint Ramp/Rate/Program group prompts

Table 4-3 lists all the function prompts in the Setpoint Ramp/Rate/Program setup group and their definitions.

Table 4-3 Setpoint Ramp/Rate/Program Group Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>SP RAMP</b>	ENABLE DISABL	<b>SINGLE SETPOINT RAMP</b> — Make selection to enable or disable the setpoint ramp function. Make sure you configure a ramp time and a final setpoint value. "SP RATE" and "SP PROG" must be disabled. <b>ENABLE SETPOINT RAMP</b> — Allows you to start the setpoint ramp (in automatic mode). <b>DISABLE SETPOINT RAMP</b> — Disables the setpoint ramp.
<b>TIME MIN</b>	0 to 255 minutes	<b>SETPOINT RAMP TIME</b> — Enter the number of minutes desired to reach the final setpoint. A ramp time of "0" implies and immediate change of setpoint.
<b>FINAL SP</b>	Within SP limits	<b>SETPOINT RAMP FINAL SETPOINT</b> — Enter the value desired for the final setpoint. The controller will operate at the setpoint set here when ramp is ended.
<b>SP RATE</b>	ENABLE DISABL	<b>SETPOINT RATE</b> — Lets you configure a specific rate of change for any local setpoint change. "SP RAMP" and "SP PROG" must be disabled. <b>ENABLE SETPOINT RATE</b> — allows the SP rate feature <b>DISABLE SETPOINT RATE</b> — disables the setpoint rate feature.
<b>EU/HR UP</b>	0 to 9999 in Engineering Units per hour	<b>RATE UP</b> — Value for SP Rate selection
<b>EU/HR DN</b>	0 to 9999 in Engineering Units per hour	<b>RATE DOWN</b> — Value for SP Rate selection
<b>SP PROG</b> (option)	ENABLE DISABL	<b>SETPOINT RAMP/SOAK PROGRAM</b> Available only with controllers that contain this option. For reasons of convenience, the information for the prompts when SP PROG is enabled are included in <i>Section 6 — Setpoint Programming Option</i> . "SP RAMP" and "SP RATE" must be disabled.

## 4.5 Accutune Set Up Group

### Introduction

Accutune offers the following selections:

- Fuzzy Overshoot Suppression
- Demand Tuning, or
- SP Tuning

Descriptions of their functions are listed with each selection in Table 4-4.

### Accutune group prompts

Table 4-4 lists all the function prompts in the Accutune setup group and their definitions.

Table 4-4 Accutune Group Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>FUZZY</b>	DISABL ENABLE	<b>FUZZY OVERSHOOT SUPPRESSION</b> - can be enabled or disabled independently of whether Demand tuning or SP tuning is enabled or disabled. <b>DISABLE-</b> Disable Fuzzy Overshoot Suppression <b>ENABLE</b> - The UDC uses Fuzzy Logic to suppress or minimize any overshoot that may occur when PV approaches SP. It will not recalculate any new tuning parameters.
<b>ACCUTUNE</b>	DISABL TUNE  SP <i>(SP does not operate with TPSC Algorithm)</i>	<b>ACCUTUNE</b> <b>DISABLE</b> – Disables the Accutune function. <b>TUNE</b> - If “TUNE” is selected, and tuning is initiated through the operator interface or digital input (if configured), the algorithm calculates new tuning parameters and enters them into the tuning group. <b>SETPOINT ONLY</b> – This selection tunes on setpoint changes only. It employs time domain analysis to accelerate line out at any desired setpoint without prior process knowledge.
<b>SP CHANG*</b>	5 to 15%	<b>SETPOINT CHANGE</b> – The minimum setpoint change that will result in re-tuning must be configured between 5% and 15%: i.e. If the range is 0 to 2400 and 5% is configured, re-tuning will occur if the setpoint change is 120 or larger.
<b>KPG*</b>	0.10 to 10.00	<b>PROCESS GAIN</b> – This is the Gain of the process being tuned. It is automatically calculated during tuning process. This is normally a READ only value. It should only need to be changed if the controller fails to identify the process. In this case, set the value to algebraic value of PV in percent, divided by output in percent while in the manual mode.

\* Applies to “SP” tuning only

Continued on next page

## 4.5 Accutune Set Up Group, Continued

Table 4-4 Accutune Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>CRITERIA*</b>	<p>NORMAL</p> <p>FAST</p>	<p><b>TUNING CRITERIA</b> – Lets you select a criterion best suited to your process.</p> <p><b>NORMAL</b> – Original critical damping (no overshoot) criterion.</p> <p><b>FAST</b> – Is a more aggressive tuning with a minimal possible overshoot of less than 0.5%. For example: slightly underdamped.</p>
<b>AT ERROR</b> Read Only	<p>NONE</p> <p>OUTLIM*</p> <p>IDFAIL*</p> <p>ABORT</p> <p>RUNING</p>	<p><b>ACCUTUNE ERROR STATUS</b> – When an error is detected in the Accutune process, an error prompt will appear.</p> <p><b>NO ERRORS during tune</b></p> <p><b>OUTPUT GREATER OR LESS THAN OUTPUT LIMITS</b> – Output set insufficiently to get Setpoint value.</p> <p><b>IDENTIFICATION PROCESS FAILED</b> – An illegal value for Gain, Rate, or Reset was calculated.</p> <p><b>CURRENT TUNE PROCESS ABORTED</b> – caused by one of the following conditions:</p> <ul style="list-style-type: none"> <li>• changing to manual mode</li> <li>• digital input detected</li> <li>• In heat region of output and a cool output calculated or vice versa.</li> </ul> <p><b>RUNNING</b> – Informational prompt indicating that tuning is still active checking process gain, even through "T" is not lit. It does not affect keyboard operation.</p>

\* Applies to "SP" tuning only



## 4.6 Algorithm Data Set Up Group, Continued

Table 4-5 Algorithm Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<p><b>CONT ALG</b> continued</p>	<p>PID B</p>	<p><b>PID B</b> Unlike the PID-A equation, the controller gives only an integral response to a setpoint change, with no effect on the output due to the gain or rate action, and it gives full response to PV changes. Otherwise controller action is as described for the PID-A equation. See note on PID-A.</p>
	<p>PD+MR</p>	<p><b>PD WITH MANUAL RESET</b> is used whenever integral action is not wanted for automatic control. The equation is computed with no integral contribution. The <b>MANUAL RESET</b>, which is operator adjustable, is then added to the present output to form the controller output. Switching between manual and automatic mode will not be bumpless.</p> <p>If you select PD with Manual Reset you can also configure the following variations</p> <ul style="list-style-type: none"> <li>• PD (Two Mode) control,</li> <li>• P (Single Mode) control.</li> </ul>
	<p>3PSTEP</p>	<p>Set Rate(D) and/or Reset Time(I) to 0. Other prompts affected: "MAN RSET"</p> <p>This selection automatically allows MAN RSET (output bias) value to be displayed on the lower display as "BIA". The value can be changed using the ▲ or ▼ keys.</p> <p>The <b>THREE POSITION STEP</b> algorithm allows the control of a valve (or other actuator), with an electric motor driven by two controller relay outputs; one to move the motor upscale, the other downscale without a feedback slidewire linked to the motor shaft. The deadband and hysteresis are adjustable in the same manner as the duplex output algorithm.</p> <p>The Three Position Step Control algorithm provides an output display (OUT) which is an estimated motor position since the motor is not using any feedback. Although this output indication is only an approximation, it is "corrected" each time the controller drives the motor to one of its stops (0% or 100%). It avoids all the control problems associated with the feedback slidewire (wear, dirt, noise). When operating in this algorithm, the estimated "OUT" display is shown to the nearest percent (i.e. no decimal). Refer to the Operation section for motor position displays.</p> <p>As a customer configurable option, when a second input board is installed, the motor slidewire can be connected to the controller. The actual slidewire position is then shown on the lower display as "POS". <b>This value is used for display only, it is not used in the 3 Position Step algorithm.</b> To configure this option, set the Input 2 Enable/Disable prompt shown next to "DISABLE". Calibrate the slidewire. Other prompts affected: "DEADBAND"</p>

*Continued on next page*



## 4.6 Algorithm Data Set Up Group, Continued

Table 4-5 Algorithm Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
INPUT 2	ENABLE DISABL	INPUT 2 algorithm allows you to enable or disable the second input. Appears only when input 2 is ordered.
OUT ALG	TIME  CURRNT  POSITN  TIME D  CUR D  CUR TI  TI CUR	<p>The <b>OUTPUT ALGORITHM</b> lets you select the type of output you want. Not applicable with Control Algorithm prompt "3PSTEP." <i>Selections are model dependent. For example, current output models cannot be configured for Time Proportioning Simplex Output.</i></p> <p><b>RELAY SIMPLEX</b> — Type of output using one SPDT relay. Its normally open (NO) or normally closed (NC) contacts are selected when wiring the rear terminals. Other prompts affected: "OUT HYST"</p> <p><b>CURRENT SIMPLEX</b> — Type of output using one 2 to 20 mA signal that can be fed into a positive or negative grounded load of 0 to 1000 ohms. The signal can be recalibrated for any desired range from 2 to 20 mA for 0 to 100% output.</p> <p><b>POSITION PROPORTIONAL SIMPLEX</b> — Type of output using two SPDT relays and a motor which has a 100 to 1000 ohms feedback slidewire. Other prompt affected: "DEADBAND"</p> <p><b>RELAY DUPLEX</b> — Type of output using two SPDT relays. Its normally open (NO) or normally closed (NC) contacts are selected when wiring the rear terminals (see Installation section). Other prompts affected: "DEADBAND"</p> <p><b>CURRENT DUPLEX</b> is similar to current simplex but provides a second current output if Auxiliary output is used. The second output is usually scaled so that zero and span correspond with 0% and 50% output (cool zone). When the output is 0 to 50%, the controller uses tuning parameter set #2, when the output is 50 to 100% it uses set #1. NOTE: Auxiliary Output must be configured for "OUTPUT." Other prompts affected: "DEADBAND", "4-20RNG".</p> <p><b>CURRENT/RELAY DUPLEX (RELAY = HEAT)</b> is a variation of duplex with current active for 0 to 50% output (tuning set 2) and relay#2 is active 50 to 100% output (tuning set 1). Other prompts affected: "4-20 RNG," "DEADBAND"</p> <p><b>RELAY CURRENT DUPLEX (RELAY = COOL)</b> is similar to "CUR-TI" except that current is active for 50 to 100% and relay #2 is active for 0 to 50%. Other prompts affected: "4-20 RNG," "DEADBAND"</p>

Continued on next page

## 4.6 Algorithm Data Set Up Group, Continued

Table 4-5 Algorithm Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
4-20 RNG	<p>50 PCT</p> <p>100PCT</p>	<p><b>CURRENT DUPLEX RANGE ALGORITHM</b> — Used with Output Algorithm selections "CUR-D," "CUR-TI", or "TI-CUR." For "CUR-TI" and "TI-CUR", this should be set to "50 PCT".</p> <p><b>CURRENT DUPLEX RANGE (SPLIT)</b> For "CUR D" this enables the normal control current output to provide heat control and the Auxiliary output to provide cool control. To enable this, the auxiliary output must be:</p> <ul style="list-style-type: none"> <li>• Selected for Output</li> <li>• Auxiliary current output is scaled as desired for 0-50% controller output (4mA set to 50; 20mA set to 0).</li> <li>• Deadband for this configuration only applies to the current output. Auxiliary output must have Deadband scaled in.</li> </ul> <p>For example: If a 2% Deadband is desired, then enter a "2.0" for the "Deadband" selection in the Control Algorithm Group. This will apply Deadband to the Current Output. In the "Options" group, set the Auxiliary Output "4mA" selection to "49.0" and the "20mA" selection to 0.0.</p> <p>Other prompts affected: "AUX OUT"</p> <p><b>CURRENT DUPLEX RANGE (FULL)</b> enables the normal control current output to provide duplex heat and cool control over 0 - 100% of the controller output.</p> <p>The PID <u>heat</u> parameters apply when the controller output is greater than 50% and the PID <u>cool</u> parameters apply when the controller output is less than 50%.</p>
RLY TYPE	<p>MECHAN</p> <p>SOL ST</p>	<p><b>RELAY TYPE</b> – For Time Proportional only</p> <p><b>ELECTROMECHANICAL RELAY</b> – This selection allows cycle times of from 1 to 120 seconds.</p> <p><b>SOLID STATE RELAY OR OPEN COLLECTOR OUTPUT</b> – This selection allows cycle times of 0.333 seconds through 40.0 seconds in 0.333 second increments.</p> <p><b>ATTENTION</b> Lockout must be set to "NONE" to view this prompt.</p>
TIMER	<p>ENABLE</p> <p>DISABL</p>	<p><b>TIMER</b> – This selection allows the "TIMER" group to appear for configuration.</p> <p><b>ENABLE</b> – Enables "Timer" group.</p> <p><b>DISABLE</b> – Disables "Timer" group.</p>

## 4.7 Input 1 Parameters Set Up Group

### Introduction

These are the parameters required for input 1; temperature units, decimal location, actuation, transmitter characterization, high and low range values in engineering units, filter, burnout, emissivity, and power line frequency.

**Input 1 group prompts** Table 4-6 lists all the function prompts in the Input 1 setup group and their definitions.

Table 4-6 Input 1 Group definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
DECIMAL	XXXX XXX.X XX.XX	<p><b>DECIMAL POINT LOCATION</b> -- This selection determines where the decimal point appears in the display.</p> <p>None One Place Two Places</p> <p>NOTE: Auto-ranging will occur when one decimal position has been selected and the value increases above 999.9 but auto-ranging <i>will not</i> similarly occur when two decimal positions are selected.</p>
UNITS	DEG F DEG C NONE	<p><b>TEMPERATURE UNITS</b> -- This selection will be indicated on the annunciator. What display of temperature do you want:</p> <p>Degrees Fahrenheit Degrees Celsius None</p>

*Continued on next page*

## 4.7 Input 1 Parameters Set Up Group, Continued

Table 4-6 Input 1 Group definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition																																																																																																				
<b>IN1 TYPE</b>		<p><b>INPUT 1 ACTUATION TYPE</b> -- This selection determines what actuation you are going to use for input one.</p> <table border="0"> <tr> <td>B TC</td> <td>B thermocouple</td> <td>0 to 3300°F</td> <td>-18 to 1815°C</td> </tr> <tr> <td>ETCH</td> <td>E thermocouple high</td> <td>-454 to 1832°F</td> <td>-270 to 1000°C</td> </tr> <tr> <td>ETCL</td> <td>E thermocouple low</td> <td>-200 to 1100°F</td> <td>-129 to 593°C</td> </tr> <tr> <td>JTCH</td> <td>J thermocouple high</td> <td>0 to 1600°F</td> <td>-18 to 871°C</td> </tr> <tr> <td>JTCL</td> <td>J thermocouple low</td> <td>20 to 770°F</td> <td>-7 to 410°C</td> </tr> <tr> <td>KTCH</td> <td>K thermocouple high</td> <td>0 to 2400°F</td> <td>-18 to 1316°C</td> </tr> <tr> <td>KTCL</td> <td>K thermocouple low</td> <td>-20 to 1000°F</td> <td>-29 to 538°C</td> </tr> <tr> <td>NNMH</td> <td>NiNiMo thermocouple high</td> <td>32 to 2500°F</td> <td>0 to 1371°C</td> </tr> <tr> <td>NNML</td> <td>NiNiMo thermocouple low</td> <td>32 to 1260°F</td> <td>0 to 682°C</td> </tr> <tr> <td>NICTC</td> <td>Nicrosil-Nisil thermocouple</td> <td>0 to 2372°F</td> <td>-17.8 to 1300°C</td> </tr> <tr> <td>RTC</td> <td>R thermocouple</td> <td>0 to 3100°F</td> <td>-18 to 1704°C</td> </tr> <tr> <td>STC</td> <td>S thermocouple</td> <td>0 to 3100°F</td> <td>-18 to 1704°C</td> </tr> <tr> <td>TTCH</td> <td>T thermocouple high</td> <td>-300 to 700°F</td> <td>-184 to 371°C</td> </tr> <tr> <td>TTCL</td> <td>T thermocouple low</td> <td>-200 to 500°F</td> <td>-129 to 260°C</td> </tr> <tr> <td>WTCH</td> <td>W5W26 thermocouple high</td> <td>0 to 4200°F</td> <td>-18 to 2316°C</td> </tr> <tr> <td>WTCL</td> <td>W5W26 thermocouple low</td> <td>0 to 2240°F</td> <td>-18 to 1227°C</td> </tr> <tr> <td>100 PT</td> <td>100 Ohm-RTD</td> <td>-300 to 1200°F</td> <td>-184 to 649°C</td> </tr> <tr> <td>500 PT</td> <td>500 Ohm-RTD</td> <td>-300 to 1200°F</td> <td>-184 to 649°C</td> </tr> <tr> <td>100 LO</td> <td>100 Ohm RTD low</td> <td>0 to 300°F</td> <td>-18 to 149°C</td> </tr> <tr> <td>RADIAM</td> <td>Radiamatic (RH)</td> <td>1400 to 3400°F</td> <td>760 to 1871°C</td> </tr> <tr> <td>4-20mA</td> <td>4 to 20 Milliamps</td> <td></td> <td></td> </tr> <tr> <td>0-10mV</td> <td>0 to 10 Millivolts</td> <td></td> <td></td> </tr> <tr> <td>10-50m</td> <td>10 to 50 Millivolts</td> <td></td> <td></td> </tr> <tr> <td>1-5 V</td> <td>1 to 5 Volts</td> <td></td> <td></td> </tr> <tr> <td>0-10 V</td> <td>0 to 10 Volts</td> <td></td> <td></td> </tr> </table>	B TC	B thermocouple	0 to 3300°F	-18 to 1815°C	ETCH	E thermocouple high	-454 to 1832°F	-270 to 1000°C	ETCL	E thermocouple low	-200 to 1100°F	-129 to 593°C	JTCH	J thermocouple high	0 to 1600°F	-18 to 871°C	JTCL	J thermocouple low	20 to 770°F	-7 to 410°C	KTCH	K thermocouple high	0 to 2400°F	-18 to 1316°C	KTCL	K thermocouple low	-20 to 1000°F	-29 to 538°C	NNMH	NiNiMo thermocouple high	32 to 2500°F	0 to 1371°C	NNML	NiNiMo thermocouple low	32 to 1260°F	0 to 682°C	NICTC	Nicrosil-Nisil thermocouple	0 to 2372°F	-17.8 to 1300°C	RTC	R thermocouple	0 to 3100°F	-18 to 1704°C	STC	S thermocouple	0 to 3100°F	-18 to 1704°C	TTCH	T thermocouple high	-300 to 700°F	-184 to 371°C	TTCL	T thermocouple low	-200 to 500°F	-129 to 260°C	WTCH	W5W26 thermocouple high	0 to 4200°F	-18 to 2316°C	WTCL	W5W26 thermocouple low	0 to 2240°F	-18 to 1227°C	100 PT	100 Ohm-RTD	-300 to 1200°F	-184 to 649°C	500 PT	500 Ohm-RTD	-300 to 1200°F	-184 to 649°C	100 LO	100 Ohm RTD low	0 to 300°F	-18 to 149°C	RADIAM	Radiamatic (RH)	1400 to 3400°F	760 to 1871°C	4-20mA	4 to 20 Milliamps			0-10mV	0 to 10 Millivolts			10-50m	10 to 50 Millivolts			1-5 V	1 to 5 Volts			0-10 V	0 to 10 Volts		
B TC	B thermocouple	0 to 3300°F	-18 to 1815°C																																																																																																			
ETCH	E thermocouple high	-454 to 1832°F	-270 to 1000°C																																																																																																			
ETCL	E thermocouple low	-200 to 1100°F	-129 to 593°C																																																																																																			
JTCH	J thermocouple high	0 to 1600°F	-18 to 871°C																																																																																																			
JTCL	J thermocouple low	20 to 770°F	-7 to 410°C																																																																																																			
KTCH	K thermocouple high	0 to 2400°F	-18 to 1316°C																																																																																																			
KTCL	K thermocouple low	-20 to 1000°F	-29 to 538°C																																																																																																			
NNMH	NiNiMo thermocouple high	32 to 2500°F	0 to 1371°C																																																																																																			
NNML	NiNiMo thermocouple low	32 to 1260°F	0 to 682°C																																																																																																			
NICTC	Nicrosil-Nisil thermocouple	0 to 2372°F	-17.8 to 1300°C																																																																																																			
RTC	R thermocouple	0 to 3100°F	-18 to 1704°C																																																																																																			
STC	S thermocouple	0 to 3100°F	-18 to 1704°C																																																																																																			
TTCH	T thermocouple high	-300 to 700°F	-184 to 371°C																																																																																																			
TTCL	T thermocouple low	-200 to 500°F	-129 to 260°C																																																																																																			
WTCH	W5W26 thermocouple high	0 to 4200°F	-18 to 2316°C																																																																																																			
WTCL	W5W26 thermocouple low	0 to 2240°F	-18 to 1227°C																																																																																																			
100 PT	100 Ohm-RTD	-300 to 1200°F	-184 to 649°C																																																																																																			
500 PT	500 Ohm-RTD	-300 to 1200°F	-184 to 649°C																																																																																																			
100 LO	100 Ohm RTD low	0 to 300°F	-18 to 149°C																																																																																																			
RADIAM	Radiamatic (RH)	1400 to 3400°F	760 to 1871°C																																																																																																			
4-20mA	4 to 20 Milliamps																																																																																																					
0-10mV	0 to 10 Millivolts																																																																																																					
10-50m	10 to 50 Millivolts																																																																																																					
1-5 V	1 to 5 Volts																																																																																																					
0-10 V	0 to 10 Volts																																																																																																					

*Continued on next page*

## 4.7 Input 1 Parameters Set Up Group, Continued

Table 4-6 Input 1 Group definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition																						
<b>XMITTER</b>	<p>Select one from the columns below</p> <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">B TC</td> <td style="width: 50%;">S TC</td> </tr> <tr> <td>ETCH</td> <td>TTCH</td> </tr> <tr> <td>ETCL</td> <td>TTCL</td> </tr> <tr> <td>JTCH</td> <td>WTCH</td> </tr> <tr> <td>JTCL</td> <td>WTCL</td> </tr> <tr> <td>KTCH</td> <td>100 PT</td> </tr> <tr> <td>KTCL</td> <td>500 PT</td> </tr> <tr> <td>NNMH</td> <td>100 LO</td> </tr> <tr> <td>NNML</td> <td>RADIAM</td> </tr> <tr> <td>NICTC</td> <td>LINEAR</td> </tr> <tr> <td>RTC</td> <td>SQROOT</td> </tr> </table>	B TC	S TC	ETCH	TTCH	ETCL	TTCL	JTCH	WTCH	JTCL	WTCL	KTCH	100 PT	KTCL	500 PT	NNMH	100 LO	NNML	RADIAM	NICTC	LINEAR	RTC	SQROOT	<p><b>TRANSMITTER CHARACTERIZATION</b> — This selection lets you instruct the controller to characterize a linear input to represent a non-linear one.</p> <p>NOTE: Prompt only appears when a linear actuation is selected at prompt 'IN1 TYPE'.</p> <p>FOR EXAMPLE: If input 1 is a 4 to 20 mA signal, but the signal represents a type "K" thermocouple; select "K TC H" and the controller will characterize the 4 to 20 mA signal so that it is treated as a type "K" thermocouple input (high range).</p> <p>Parameter definitions are the same as shown in Lower Display Prompt "IN1 TYPE"</p>
B TC	S TC																							
ETCH	TTCH																							
ETCL	TTCL																							
JTCH	WTCH																							
JTCL	WTCL																							
KTCH	100 PT																							
KTCL	500 PT																							
NNMH	100 LO																							
NNML	RADIAM																							
NICTC	LINEAR																							
RTC	SQROOT																							
<b>IN1 HI</b>	<p>–999.0 to 9999. in Engineering units</p>	<p><b>INPUT 1 HIGH RANGE VALUE</b> in engineering units is displayed for all inputs but can only be configured for linear or square root transmitter characterization.</p> <p>Scale the #1 input signal to the display value you want for 100%.</p> <p>EXAMPLE:            Actuation (Input) = 4 to 20 mA            Process Variable = Flow            Range of Flow = 0 to 250 Gal/Min            High Range display value = 250            Then 20 mA = 250 Gal/Min</p> <p>The control setpoint will be limited by the range of units selected here.</p>																						
<b>IN1 LO</b>	<p>–999.0 to 9999. 0 in Engineering units</p>	<p><b>INPUT 1 LOW RANGE VALUE</b> in engineering units is displayed for all inputs but can only be configured for linear or Square Root transmitter characterization. Scale the #1 input signal to the display value you want for 0%. See example on previous page. The control setpoint for Input 1 will be limited by the range of units selected here.</p>																						
<b>BIAS IN1</b>	<p>–999.0 to 9999.</p>	<p><b>BIAS ON INPUT 1</b> — Bias is used to compensate the input for drift of an input value due to deterioration of a sensor, or some other cause. Select the bias value you want on input one.</p>																						

Continued on next page

## 4.7 Input 1 Parameters Set Up Group, Continued

Table 4-6 Input 1 Group definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>FILTER 1</b>	0 to 120 seconds No filter = 0	<b>FILTER FOR INPUT ONE</b> — A software digital filter is provided for input 1 to smooth the input signal. You can configure the first order lag time constant from 1 to 120 seconds. If you do not want filtering, enter 0.
<b>BURNOUT</b>	NONE  UP          DOWN	<p><b>BURNOUT PROTECTION (SENSOR BREAK)</b> provides most input types with upscale or downscale protection if the input fails. 1-5V, 0-10V, or 4-20 mA inputs require no burnout or "NONE" selection.</p> <p><b>NO BURNOUT</b> — Pre-configured Failsafe output applied if failed input is detected. Error message "INPUT1 FAIL" is flashed on the lower display intermittently every 10 seconds.</p> <p><b>UPSCALE BURNOUT</b> will make the PV signal increase to full scale when a sensor fails, and flash "INPUT1 FAIL" on the lower display intermittently every 10 seconds. The controller remains in Automatic control mode and adjusts the controller output signal in response to the full scale PV signal developed by the Burnout circuitry.</p> <p><b>DOWNSCALE BURNOUT</b> will make the PV signal decrease to the lower range value when a sensor fails, and flash "INPUT1 FAIL" on the lower display intermittently every 10 seconds. The controller remains in Automatic control mode and adjusts the controller output signal in response to the zero percent PV signal developed by the Burnout circuitry.</p> <p><b>NOTE:</b> For no Burnout, i.e. "None," to function properly on a 4-20MA input, there must be a dropping resistor directly across the <i>input</i> terminals (i.e., not remote), then the unit can detect the "zero" voltage that occurs when the 4-20 mA line is opened.</p>
<b>EMISSIV</b>	0.01 to 1.00	<b>EMISSIVITY</b> is a correction factor applied to the Radiamatic input signal that is the ratio of the actual energy emitted from the target to the energy which would be emitted if the target were a perfect radiator. Available only for "Radiamatic" inputs.
<b>PWR FREQ</b>	60 Hz 50 Hz	<b>POWER LINE FREQUENCY</b> — select whether your controller is operating at 60 Hz or 50 Hz. <b>60 HERTZ</b> <b>50 HERTZ</b>
<b>LANGUAGE</b>	ENGLIS FRENCH GERMAN SPANIS ITALAN	

## 4.8 Input 2 Parameters Set Up Group

### Introduction

These are the parameters required for input 2; actuation, transmitter characterization, high and low range values in engineering units, filter, and burnout.

### Input 2 group prompts

Table 4-7 lists all the function prompts in the Input 2 setup group and their definitions.

Table 4-7 Input 2 Group Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>XMITTER2</b>		<p><b>TRANSMITTER CHARACTERIZATION</b> — This selection lets you instruct the controller to characterize a linear input to represent a non-linear one.</p> <p>FOR EXAMPLE: If input 2 is a 4 to 20 mA signal, but you want the signal to represent a type "K" thermocouple; select " K TC H" and the controller will characterize the 4 to 20 mA signal so that it is treated as a type "K" thermocouple input.</p>
	B TC	B Type Thermocouple
	ETCH	E Type Thermocouple High
	ETCL	E Type Thermocouple Low
	JTCH	J Type Thermocouple High
	JTCL	J Type Thermocouple Low
	KTCH	K Type Thermocouple High
	KTCL	K Type Thermocouple Low
	NNM H	NiNiMo Type Thermocouple High
	NNM L	NiNiMo Type Thermocouple Low
	NIC TC	Nicrosil Nisil Thermocouple
	RTC	R Type Thermocouple
	STC	S Type Thermocouple
	T TCH	T Type Thermocouple High
	T TCL	T Type Thermocouple Low
	WTCH	W5W26 Type Thermocouple High
	WTCL	W5W26 Type Thermocouple Low
	100 PT	100 Ohm-RTD
	500 PT	500 Ohm-RTD
	100 LO	100 Ohm RTD Low
	RADIAM	Radiamatic (RH)
	LINEAR	Linear Range
	SQROOT	Square Root

*Continued on next page*

## 4.8 Input 2 Parameters Set Up Group, Continued

Table 4-7 Input 2 Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>IN2 HI</b>	-999.0 to 9999. in Engineering units	<b>INPUT 2 HIGH RANGE VALUE</b> in engineering units is displayed for all inputs but can only be configured for linear or square root actuations only. Scale the #2 input signal to the display value you want for 100%.  This is what you want 20mA or 5 volts to represent.  EXAMPLE: Same as input one.
<b>IN2 LO</b>	-999.0 to 9999. in Engineering units	<b>INPUT 2 LOW RANGE VALUE</b> in engineering units, for linear or Square Root characterization only. Scale the #2 input signal to the display value you want for 0%.  This is what you want 4mA or 1 volt to represent.  EXAMPLE: Same as input one.
<b>FILTER 2</b>	0 to 120 seconds No filter = 0	<b>FILTER FOR INPUT TWO</b> — A software digital filter is provided for input 2 to smooth the input signal. You can configure the first order lag constant from 1 to 120 seconds. If you do not want filtering, enter 0.



## 4.9 Control Parameters Set Up Group

### Introduction

The functions listed in this group deal with how the UDC 3000 will control the process including: Number of tuning parameter sets, Setpoint source, Ratio, Bias, Tracking, Power-up recall, Setpoint limits, Output direction and limits, Deadband and Hysteresis.

**Control group prompts** Table 4-8 lists all the function prompts in the Control setup group and their definitions.

Table 4-8 Control Group Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<p style="text-align: center;"><b>PID SETS</b></p>	<p style="text-align: center;">1 ONLY</p>	<p><b>NUMBER OF TUNING PARAMETER SETS</b> — This selection lets you choose one or two sets of tuning constants (gain, rate, and reset).</p>
	<p style="text-align: center;">2KEYBD</p>	<p><b>ONE SET ONLY</b> — Only one set of tuning parameters is available. Configure the values for:            Gain (proportional band)            Rate            Reset Time            Cycle Time (if time proportional is used)</p>
	<p style="text-align: center;">2PV SW</p>	<p><b>TWO SETS KEYBOARD SELECTABLE</b> — Two sets of tuning parameters can be configured and can be selected at the operator interface or by using the Digital Inputs.            Press <b>LOWR DISP</b> key until you see "PID SET1" or "PID SET2" to switch between sets. Configure the values for:            Gain, Rate , Reset, Cycle Time            Gain #2, Rate #2, Reset#2, Cycle#2 Time</p>
	<p style="text-align: center;">2SP SW</p>	<p><b>TWO SETS PV AUTOMATIC SWITCHOVER</b> —            When the process variable is <i>GREATER</i> than the value set at prompt "SW VALUE" (Switchover Value), the controller will use Gain, Rate, Reset, and Cycle Time. The active PID SET can be read in the lower display.             When the process variable is <i>LESS</i> than the value set at prompt "SW VALUE," the controller will use Gain #2, Rate #2, Reset #2, and Cycle #2 Time. The active PID SET can be read in the lower display.            Other prompts affected: SW VALUE</p> <p><b>TWO SETS SP AUTOMATIC SWITCHOVER</b> —            When the setpoint is <i>GREATER</i> than the value set at prompt "SW VALUE" (Switchover Value), the controller will use Gain, Rate, Reset, and Cycle.             When the setpoint is <i>LESS</i> than the value set at prompt "SW VALUE," the controller will use Gain #2, Rate #2, Reset #2, and Cycle #2.            Other prompts affected: SW VALUE</p>

*Continued on next page*

## 4.9 Control Parameters Set Up Group, *Continued*

Table 4-8 Control Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>SW VALUE</b>	Value in engineering units	<b>AUTOMATIC SWITCHOVER VALUE</b> — This is the value of Process Variable or Setpoint at which the controller will switch from Tuning Constant Set #2 to Set #1. Only appears when PID SETS selections "2PV SW" or "2SP SW" are selected.
<b>SP SOURC</b>	1LOCAL  2LOCAL	<b>SETPOINT SOURCE</b> — This selection determines what your setpoint source will be; One local or Two local. Toggled by the "SETPOINT SELECT" key.  <b>LOCAL SETPOINT</b> — The setpoint entered from the keyboard.  <b>TWO LOCAL SETPOINTS</b> — This selection lets you switch between two local setpoints. Mutually exclusive with Remote setpoint.
<b>RSP SRC</b>	NONE IN 2	<b>REMOTE SETPOINT</b> — A signal is brought in through the input 2 terminals and used as the control setpoint. Ratio and Bias can be applied to the remote setpoint. Mutually exclusive with 2 Local setpoints  Other prompts affected: RATIO, BIAS  <b>NONE</b> - No remote setpoint <b>IN 2</b> - RSP using second Input (Input 2 must be enabled)
<b>RATIO</b>	-20.00 to 20.00	<b>RATIO</b> — Used when input 2 operates as a remote setpoint, prompt "REMOTE." This ratio value can be applied to the remote setpoint. It establishes the correct relationship between the remote setpoint and the input 2 signal applied according to the formula below...(under Bias).  Input 2 must be enabled, or DMCS/RS422 Comm enabled.
<b>BIAS</b>	-999.0 to 9999 (Engineering Units)	<b>BIAS</b> — Used when input 2 operates as a remote setpoint (prompt "REMOTE"). Bias, together with ratio, establishes the correct relationship between the remote setpoint and the input 2 signal applied according to the formula:  $\text{REMOTE SETPOINT} = \text{IN2 VALUE (RATIO)} + \text{BIAS}$  NOTE: IN2 VALUE = Actual (engineering units)  All values must be within configured setpoint high and low limits.  Input 2 must be enabled, or DMCS/RS422 Comm enabled.

*Continued on next page*

## 4.9 Control Parameters Set Up Group, Continued

Table 4-8 Control Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
SP TRACK	NONE  PV RSP	<p><b>SETPOINT TRACKING</b> — The local setpoint can be configured to track either PV or RSP as listed below:</p> <p><b>NO TRACKING</b> — If local setpoint tracking is not configured, the LSP will not be altered when transfer from RSP to LSP is made.</p> <p><b>LSP (LOCAL SETPOINT) TRACKS PV IN MANUAL</b></p> <p><b>LSP (LOCAL SETPOINT) TRACKS RSP (REMOTE SETPOINT) IN AUTO</b> — If configured, when the controller transfers out of remote setpoint, the last value of the remote setpoint (RSP) is inserted into the local setpoint.</p>
POWER UP	MANUAL  A LSP  A RSP  AM SP AM LSP	<p><b>POWER UP CONTROLLER MODE RECALL</b> — This selection determines which mode and setpoint the controller will use when the controller restarts after a power loss. Select one from below:</p> <p><b>MANUAL, LSP</b> — At power-up, the controller will use <i>manual</i> mode with the local setpoint displayed.</p> <p><b>AUTOMATIC, LOCAL SETPOINT</b> — At power-up, the controller will return to the <i>automatic</i> mode and will use the local setpoint for control.</p> <p><b>AUTOMATIC, REMOTE SETPOINT</b> — At power-up, the controller will return to the <i>automatic</i> mode and will use the remote setpoint for control.</p> <p><b>LAST MODE/LAST SETPOINT</b></p> <p><b>LAST MODE/LAST LOCAL SETPOINT</b></p>
PWR OUT For 3 Position Step Control Only	LAST  F'SAFE	<p><b>POWER UP FAILSAFE OUTPUT SELECTION</b>—This selection determines what position the motor will be in when powered up or in the failsafe position.</p> <p><b>LAST</b>—At power up in automatic mode, the motor position will be the last one prior to power down. When the unit goes into FAILSAFE, it will stay in automatic mode; motor will <b>not</b> be driven to the configured Failsafe position.</p> <p><b>F'SAFE</b>—At power up in manual mode, the motor will be driven to either the 0% or 100% output position; whichever is selected at prompt "FAILSAFE". For Burnout/none, when the unit goes into FAILSAFE, it will stay in auto mode; motor will be driven to the configured Failsafe position.</p>
SP HILIM	0 to 100% of span input in engineering units with decimal place	<p><b>SETPOINT HIGH LIMIT*</b> — This selection prevents the local and remote setpoints from going above the value selected here. The setting must be equal or less than the upper range of input 1. Input 2, when configured for remote setpoint, will be restricted to this upper limit.</p>

\*The Local Setpoint will automatically adjust itself to be within the setpoint limit range. For example, if SP = 1500 and the SP HILIM is changed to 1200, the new Local Setpoint will be 1200.

Continued on next page

## 4.9 Control Parameters Set Up Group, Continued

Table 4-8 Control Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
SP LOLIM	0 to 100% of span input in engineering units with decimal place	<b>SETPOINT LOW LIMIT*</b> — This selection prevents the local and remote setpoints from going below the value selected here. The setting must be equal or greater than the lower range of input 1. Input 2, when configured for remote setpoint, will be restricted to this lower limit.
ACTION	DIRECT REVRSE	<b>CONTROL OUTPUT DIRECTION</b> — In what direction do you want the controller output to go when the process variable increases. <b>DIRECT ACTING CONTROL</b> — The controller's output <u>increases</u> as the process variable increases. <b>REVERSE ACTING CONTROL</b> — The controller's output <u>decreases</u> as the process variable increases.
OUT RATE	DISABL ENABLE	<b>OUTPUT CHANGE RATE</b> - Enables or Disables the Output Change Rate. The maximum rate is set at Prompt "PCT/M UP" or "PCT/M DN" shown below. <b>ATTENTION</b> Does not apply to 3 Position Step Control. Disable Enable
PCT/M UP	0 to 9999%/minute	<b>OUTPUT RATE UP VALUE</b> - This selection limits the rate at which the output can change upward. Enter a value in percent/minute. Appears only if "OUT RATE" is enabled. "0" means no output rate applied.
PCT/M DN	0 to 9999%/minute	<b>OUTPUT RATE DOWN VALUE</b> - This selection limits the rate at which the output can change downward. Enter a value in percent/minute. Appears only if "OUT RATE" is enabled. "0" means no output rate.
OUTHILIM	-5.0 to 105.0% of output	<b>HIGH OUTPUT LIMIT</b> — This is the highest value of output beyond which you do not want the controller automatic output to exceed. Use 0 to 100% for time proportional output type.
OUTLOLIM	-5.0 to 105.0% of output	<b>LOW OUTPUT LIMIT</b> — This is the lowest value of output below which you do not want the controller automatic output to exceed. Use 0 to 100% for time proportional output type.
DROPOFF	-5 to 105.0% of output	<b>CONTROLLER DROPOFF VALUE</b> — Select an output value that below which the controller output will droppoff to the low output limit value set in prompt "OUT LOLIM." DROPOFF is not displayed if On-Off or 3 Position Step is configured.

\*The Local Setpoint will automatically adjust itself to be within the setpoint limit range. For example, if SP = 1500 and the SP HILIM is changed to 1200, the new Local Setpoint will be 1200.

*Continued on next page*

## 4.9 Control Parameters Set Up Group, *Continued*

Table 4-8 Control Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>DEADBAND</b>	-5.0 to 25.0% 0.5 to 5.0%	<b>DEADBAND</b> is an adjustable gap between the operating ranges of output 1 and output 2 in which neither output operates (positive value) or both outputs operate (negative value). It is the difference between the nominal trip points of relay 1 and 2. Time Duplex or Current Duplex Position Proportional and Three Position Step
<b>OUT HYST</b>	0.0 to 5.0% of PV span	<b>HYSTERESIS (OUTPUT RELAY ONLY)</b> is an adjustable overlap of the ON/OFF states of each control output. This is the difference between the value of the process variable at which the control outputs energize and the value at which they de-energize. Only applicable for ON-OFF control.
<b>FAILSAFE</b>	0 to 100%  100PCT 0 PCT	<b>FAILSAFE OUTPUT VALUE</b> — The output level used when you have Communications SHED or when NO BURNOUT is configured and input 1 fails.  <i>For 3 Position Step Control</i> <b>100PCT</b> - Motor position set to 100% output position <b>0 PCT</b> -Motor position set to 0% output position
<b>MAN OUT</b>	0 to 100%	<b>POWER UP PRESET MANUAL OUTPUT</b> — At power -up, the controller will go to manual, and the Output value set here.
<b>AUTO OUT</b>	0 to 100%	<b>POWER UP PRESET AUTOMATIC OUTPUT</b> — At power -up, the controller will begin its automatic control at the Output value set here.
<b>PBorGAIN</b>	PB PCT  GAIN	<b>PROPORTIONAL BAND UNITS</b> — Select one of the following for the Proportional (P) term of the PID algorithm:  <b>PROPORTIONAL BAND</b> — Selects units of percent proportional band for the P term of the PID algorithm. Where: $PB\% = \frac{100\%FS}{GAIN}$  <b>GAIN</b> selects the unitless term of gain for the P term of the PID algorithm. Where: $GAIN = \frac{100\%FS}{PB\%}$
<b>MINorRPM</b>	RPM  MIN	<b>RESET UNITS</b> — Selects units of minutes or repeat per minutes for the I term of the PID algorithm. 20 Repeats per Minute = 0.05 Minutes per Repeat.  <b>REPEATS PER MINUTE</b> — The number of times per minute that the proportional action is repeated by reset.  <b>MINUTES PER REPEAT</b> — The time between each repeat of the proportional action by reset.

## 4.10 Options Set Up Group

### Introduction

Configure the remote mode switch (Digital Inputs) to a specific contact closure response, or configure the Auxiliary Output to be a specific selection with desired scaling.

Table 4-9 lists all the function prompts in the Option setup group and their functions.

Table 4-9 Option Group Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>AUX OUT</b>		<p><b>AUXILIARY OUTPUT SELECTION</b> provides an mA output representing any of six control parameters. The display for auxiliary output viewing will be in engineering units for Input 1, Input 2, Process Variable, Deviation, and Setpoint. Output will be displayed in percent.</p> <p>Other prompts affected by these selections: "4mA VAL" and "20mA VAL."</p>
	DISABL	<b>NO AUXILIARY OUTPUT</b>
	IN 1	<p><b>INPUT 1</b> — This represents the configured range of input 1. FOR EXAMPLE:            Type "J" Thermocouple (0 to 1600°F)            0°F display = 0% output            1600°F display = 100% output</p>
	IN 2	<b>INPUT 2</b> represents the value of the configured range of input 2.
	PV	<b>PROCESS VARIABLE</b> — Represents the value of the Process Variable. $PV = \text{Input 1} + \text{Bias}$
	DEV	<p><b>DEVIATION (PROCESS VARIABLE MINUS SETPOINT)</b> — Represents -100 to +100% of the selected PV span in engineering units. FOR EXAMPLE:            Type "T" Thermocouple            PV range = -300 to +700°F            PV span = 1000°F            Deviation Range = -1000 to +1000°F            If PV = 500°F            and SP = 650°F            then Deviation Display = -150°F            Auxiliary Output = 42.5%</p>
	OUTPUT	<p><b>NOTE:</b> A deviation of 0°F yields an auxiliary output of 50%.</p> <p><b>OUTPUT</b> — Represents the displayed controller output in percent (%). Cannot be used with 3 Position Step Control.</p>
	SP	<b>SETPOINT</b> — Represents the value of the setpoint in units of PV.
	LSP 1	<b>LOCAL SETPOINT ONE</b> — Auxiliary output represents local setpoint one regardless of active setpoint.

*Continued on next page*

## 4.10 Options Set Up Group, Continued

Table 4-9 Option Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
4mA VAL	Low Scale Value within the range of the selected variable to represent 4 mA	<p><b>AUXILIARY OUTPUT LOW SCALING FACTOR</b> — Use a value in engineering units for: Input 1, Input 2, Process Variable, Deviation, and Setpoint.</p> <p>Use value in percent (%) for Output. (Output can be between -5 and +105%.)</p>
20mA VAL	High Scale Value within the range of the selected variable to represent 20 mA	<p><b>AUXILIARY OUTPUT HIGH SCALING FACTOR</b> — Use a value in engineering units for: Input 1, Input 2, Process Variable, Deviation,* and Setpoint.</p> <p>Use a value in percent (%) for Output. (Output can be between -5 and +105%.)</p> <p>*When Deviation is selected, only one operating parameter will be entered. This value represents the deviation level that will produce 20 mA output. Zero deviation will produce a center scale (12 mA) output. A negative deviation equal in magnitude to the Auxiliary Output High Value will produce a low end (4 mA) output.</p>
DIG IN 1 DIG IN 2	<p>NONE</p> <p>To MAN</p> <p>To LSP</p> <p>To 2SP</p> <p>To DIR</p> <p>ToHOLD</p> <p>ToPID2</p>	<p><b>DIGITAL INPUT SELECTIONS</b> — All selections are available for either Input. The controller returns to its original state when contact opens, except when overruled by the keyboard.</p> <p><b>NO DIGITAL INPUT SELECTIONS</b></p> <p><b>TO MANUAL</b> — Contact closure puts the controller into manual mode. Contact open returns controller to former mode unless <b>AUTO/MAN</b> key is pressed while digital input is active.</p> <p><b>TO LOCAL SETPOINT</b> — Contact closure puts the controller into local setpoint 1. When contact opens, the controller returns to former operation local or remote setpoint unless <b>Setpoint Select</b> key is pressed while digital input is active.</p> <p><b>TO LOCAL SETPOINT TWO</b> — Contact closure puts the controller into local setpoint 2.</p> <p><b>TO DIRECT ACTION</b> — Contact closure selects direct controller action.</p> <p><b>TO HOLD</b> — Contact closure suspends Setpoint Program or Setpoint Ramp. Contact open runs program.</p> <p><b>TO PID2</b> — Contact closure selects PID Set 2.</p>

Continued on next page

## 4.10 Options Set Up Group, Continued

Table 4-9 Option Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<p><b>DIG IN 1</b> <b>DIG IN 2</b> continued</p>	<p>PV 2IN To RUN  ToBEGN   STOP I  MAN/FS  To LOCK  To A OUT  TIMER AM STA  To TUNE</p>	<p><b>PV = INPUT 2-Contact Closure</b> selects PV = Input 2.  <b>RUN</b> — Contact closure starts a stopped SP Program. Left character blinks "R"  <b>EXTERNAL PROGRAM RESET</b> — Contact closure resets SP Program back to the beginning of the first segment in the Program. Program cycle number is not affected. Reopening switch has no effect <i>NOTE: Once the last segment of the setpoint program has timed out, the controller enters the mode of action specified in the configuration data and the program cannot be reset to the beginning of the first segment by digital input closure.</i>  <b>INHIBIT INTEGRAL (RESET)</b> — Contact closure disables PID Integral (Reset) action.  <b>MANUAL FAILSAFE</b> – Unit goes to Manual Mode, output goes to the Failsafe value.  <b>KEYBOARD LOCKOUT</b> — Contact closure disables all keys. Lower display shows "LOCKED" if a key is pressed.  <b>AUTOMATIC OUTPUT</b> — Contact closure sends output to the value set at Control prompt "AUTO OUT".  <b>TIMER</b> – Contact closure starts timer—if enabled.  <b>TO AUTO MANUAL STATION</b> – Contact closure causes switch to Auto Manual Station configuration.  <b>TUNING</b> - Contact closure starts the tuning process.</p>
<p><b>DIG 1 COM</b> <b>DIG 2 COM</b></p>	<p>DISABL +PID2  +To DIR  +ToSP2  +DISAT</p>	<p><b>DIGITAL INPUT COMBINATIONS SELECTIONS</b> — All selections are available can be combined with either Input.  <b>DISABLES INPUT COMBINATIONS</b>  <b>ANY DIGITAL INPUT SELECTION PLUS TO PID2</b> — Contact closure selects PID Set 2.  <b>ANY DIGITAL INPUT SELECTION PLUS TO DIRECT ACTION</b> — Contact closure selects direct controller action.  <b>ANY DIGITAL INPUT SELECTION PLUS TO LOCAL SETPOINT TWO</b> — Contact closure puts the controller into local setpoint 2.  <b>ANY DIGITAL INPUT SELECTION PLUS DISABLE ADAPTIVE TUNE</b> — Contact closure disables Accutune process.</p>



# 4.11 Communications Set Up Group

**Introduction**

This option allows the controller to be connected to a host computer via a RS422/485 or DMCS bus. Fifteen units can be configured over this link. The controller looks for messages from the computer at regular intervals. If these messages are not received within the configured shed time, the controller will SHED from the communications link and return to stand alone operation. The device address, parity, and baud rate are configurable. You can also set the SHED output mode and setpoint recall, and communication units.

**Communications group prompts** Table 4-10 lists all the function prompts in the Communications setup group and their definitions.

Table 4-10 Communications Group Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>ComSTATE</b>	RS-422/485 DMCS DISABL	<b>COMMUNICATIONS SELECTION</b> RS-422/485 — Allows RS422/485 communication prompts. DMCS — Allows DMCS communication prompts. DISABL — Disables the communications option.
<b>Com ADDR</b>	1 to 99 (RS422) 1 to 99 (DMCS)	<b>COMMUNICATIONS STATION ADDRESS</b> — This is a number that is assigned to a controller that is to be used with the communications option.
<b>SHEDTIME</b>	0 to 255	<b>SHED TIME</b> — The number that represents how many sample periods there will be before the controller sheds from communications. Each period equals 1/3 seconds or 0 = No shed.
<b>PARITY</b> (RS422/485 only)	ODD EVEN	<b>PARITY</b> pertains to the use of a self-checking code employing binary digits in which the total number of ONE's (or ZERO's) in each permissible code expression is either ODD or EVEN.  <b>ODD PARITY</b> <b>EVEN PARITY</b>
<b>BAUD</b> (RS422/485 only)	300 600 1200 2400 4800 9600 19200	<b>BAUD RATE</b> is the transmission speed in bits per second.  <b>300 BAUD</b> <b>600 BAUD</b> <b>1200 BAUD</b> <b>2400 BAUD</b> <b>4800 BAUD</b> <b>9600 BAUD</b> <b>19200 BAUD</b>

*Continued on next page*

## 4.11 Communications Set Up Group, Continued

Table 4-10 Communications Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>DUPLEX</b> (RS422/485 only)	HALF FULL	<b>DUPLEX</b> - Transmission Type <b>HALF DUPLEX</b> - Two wires <b>FULL DUPLEX</b> - Four wires
<b>TX DELAY</b> (RS422/485 only)	1 to 500	<b>TX DELAY</b> – Configurable response–delay timer allows you to force the UDC to delay its response for a time period of from 1 to 500 milliseconds compatible with the host system hardware/software.
<b>SHEDMODE</b>	LAST  TO MAN  FSAFE  ToAUTO	<b>SHED CONTROLLER MODE AND OUTPUT LEVEL</b> — determines the mode of local control you want when the controller is shed from the communications link.  <b>LAST</b> -SAME MODE AS BEFORE SHED - The controller will return to the same mode (manual or automatic) that it was in before shed.  <b>TO MAN</b> — TO MANUAL MODE BUMPLESS OUTPUT - The controller will return to manual mode at the same output level that it had before shed.  <b>FSAFE</b> — TO MANUAL MODE, FAILSAFE OUTPUT - The controller will return to manual mode at the output value selected at “CONTROL” prompt “FAILSAFE”.  <b>ToAUTO</b> — To automatic mode.
<b>SHED SP</b> (DMCS only)	TO LSP TO CSP	<b>SHED SP</b> — Shed setpoint (DMCS only). <b>TO LSP</b> — Controller will use last local SP used. <b>TO CSP</b> — Controller will use computer setpoint.
<b>UNITS</b>	PERCNT ENG	<b>COMMUNICATION UNITS</b> — This selection determines how the controller values are expressed during communications.  <b>PERCENT OF SPAN ENGINEERING UNITS</b>
<b>LOOPBACK</b>	ENABLE  DISABL	<b>LOCAL LOOPBACK</b> tests the communications hardware.  <b>ENABLE</b> — Allows loopback test. The UDC goes into Loopback mode in which it sends and receives its own message. The UDC displays “PASS” or “FAIL” in the upper display and “LOOPTEST” in the lower display as long as the test is running. The UDC will go into manual mode. The test will run until the operator disables it here.  <b>DISABLE</b> - disables the Loopback test.

## 4.12 Alarms Set Up Group

### Introduction

An alarm is an indication that an event that you have configured (for example—Process Variable) has exceeded one or more alarm limits. There are two alarms available. Each alarm has two setpoints. You can configure each of these two setpoints to alarm on various controller parameters.

There are two alarm output selections, High and Low. You can configure each setpoint to alarm either High or Low. These are called single alarms.

You can also configure the two setpoints to alarm on the same event and to alarm both high and low. A single adjustable Hysteresis of 0 to 100% is configurable for the alarm setpoint.

See Table 2-4 in the Installation section for Alarm relay contact information.

### Alarms group prompts

Table 4-11 lists all the function prompts in the Alarms setup group and their definitions.

Table 4-11 Alarms Group Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>A1S1 VAL</b>	Value in Engineering Units	<b>ALARM 1 SETPOINT 1 VALUE</b> — This is the value at which you want the alarm type chosen in Prompt "A1S1TYPE" to actuate. The value depends on what the setpoint has been configured to represent. NO setpoint is required for Communications SHED. For SP Programming the value is the segment number for which the event applies.  This prompt does not appear for "Alarm on Manual" type alarm. For example: A1S1TYPE = MANUAL.
<b>A1S2 VAL</b>	Value in Engineering Units	<b>ALARM 1 SETPOINT 2 VALUE</b> — This is the value at which you want the alarm type chosen in Prompt "A1S2TYPE" to actuate. The details are the same as "A1S1 VAL".  This prompt does not appear for "Alarm on Manual" type alarm. For example: A1S1TYPE = MANUAL.
<b>A2S1 VAL</b>	Value in Engineering Units	<b>ALARM 2 SETPOINT 1 VALUE</b> — This is the value at which you want the alarm type chosen in Prompt "A2S1TYPE" to actuate. The details are the same as "A1S1 VAL".
<b>A2S2 VAL</b>	Value in Engineering Units	<b>ALARM 2 SETPOINT 2 VALUE</b> — This is the value at which you want the alarm type chosen in Prompt "A2S2TYPE" to actuate. The details are the same as "A1S1 VAL".

*Continued on next page*

## 4.12 Alarms Set Up Group, *Continued*

Table 4-11 Alarms Group Definitions, *continued*

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<b>A1S1TYPE</b>	NONE IN 1 IN 2 PV DEV OUTPUT  SHED EV ON EV OFF MANUAL	<b>ALARM 1 SETPOINT 1 TYPE</b> — Select what you want Setpoint 1 of Alarm 1 to represent. It can represent the Process Variable, Deviation, Input 1, Input 2, Output, and if you have a model with communications, you can configure the controller to alarm on SHED. If you have setpoint programming, you can alarm when a segment goes ON or OFF.  <b>NO ALARM</b> <b>INPUT 1</b> <b>INPUT 2</b> <b>PROCESS VARIABLE</b> <b>DEVIATION</b> <b>OUTPUT</b> (cannot be used with 3 Position Step control) <b>SHED FROM COMMUNICATIONS</b> <b>EVENT ON (SP PROGRAMMING)</b> <b>EVENT OFF (SP PROGRAMMING)</b> <b>ALARM ON MANUAL MODE</b> (see Note 1)
<b>A1S2TYPE</b>	Same as A1S1 TYPE	<b>ALARM 1 SETPOINT 2 TYPE</b> — Select what you want Setpoint 2 of Alarm 1 to represent. The selections are the same as A1S1TYPE.
<b>A2S1TYPE</b>	Same as A1S1 TYPE	<b>ALARM 2 SETPOINT 1 TYPE</b> — Select what you want Setpoint 1 of Alarm 2 to represent. The selections are the same as A1S1TYPE.  NOTE: Not applicable with Relay Duplex or Position Proportional outputs.
<b>A2S2TYPE</b>	Same as A1S1 TYPE	<b>ALARM 2 SETPOINT 2 TYPE</b> — Select what you want Setpoint 2 of Alarm 2 to represent. The selections are the same as A1S1TYPE.  NOTE: Not applicable with Relay Duplex or Position Proportional outputs.
<b>A1S1 H L</b>  <b>A1S1 EV</b>	<b>H</b> <b>LO</b> <b>BEGIN</b> <b>END</b>	<b>ALARM 1 SETPOINT 1 STATE</b> — Select whether you want the alarm type chosen in Prompt "A1S1TYPE" to alarm High or Low or the beginning or end of a segment in setpoint Ramp/Soak programming.  <b>HI ALARM</b> <b>LO ALARM</b> <b>BEGIN (SP PROGRAMMING)</b> <b>END (SP PROGRAMMING)</b>

NOTE 1: Not available if Timer is enabled because Alarm 1 is dedicated to Timer output.

*Continued on next page*

## 4.12 Alarms Set Up Group, Continued

Table 4-11 Alarms Group Definitions, continued

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
<p><b>A1S2 H L</b> <b>A1S2 EV</b></p>	<p><b>HI</b> <b>LO</b> <b>BEGIN</b> <b>END</b></p>	<p><b>ALARM 1 SETPOINT 2 STATE</b> — Select whether you want the alarm type chosen in Prompt "A1S2TYPE" to alarm High or Low or the beginning or end of a segment in setpoint Ramp/Soak programming.</p> <p><b>HI ALARM</b> <b>LO ALARM</b> <b>BEGIN (SP PROGRAMMING)</b> <b>END (SP PROGRAMMING)</b></p>
<p><b>A2S1 H L</b> <b>A2S1 EV</b></p>	<p><b>HI</b> <b>LO</b> <b>BEGIN</b> <b>END</b></p>	<p><b>ALARM 2 SETPOINT 1 STATE</b> — Select whether you want the alarm type chosen in Prompt "A2S1TYPE" to alarm HIGH or LOW or the beginning or end of a segment in setpoint Ramp/Soak programming.</p> <p><b>HI ALARM</b> <b>LO ALARM</b> <b>BEGIN (SP PROGRAMMING)</b> <b>END (SP PROGRAMMING)</b></p>
<p><b>A2S2 H L</b> <b>A2S2 EV</b></p>	<p><b>HI</b> <b>LO</b> <b>BEGIN</b> <b>END</b></p>	<p><b>ALARM 2 SET POINT 2 STATE</b> — Select whether you want the alarm type chosen in Prompt "A2S2TYPE" to alarm HIGH or LOW or the beginning or end of a segment in setpoint Ramp/Soak programming.</p> <p><b>HI ALARM</b> <b>LO ALARM</b> <b>BEGIN (SP PROGRAMMING)</b> <b>END (SP PROGRAMMING)</b></p>
<p><b>AL HYST</b></p>	<p>0.0 to 100% of span or full output as appropriate</p>	<p><b>ALARM HYSTERESIS</b> — A single adjustable hysteresis is provided on alarms such that when the alarm is OFF it activates at exactly the alarm setpoint; when the alarm is ON, it will not deactivate until the variable is 0.0% to 100% away from the alarm setpoint.</p> <p>Configure the hysteresis of the alarms based on INPUT signals as a % of input range span.</p> <p>Configure the hysteresis of the alarm based on OUTPUT signals as a % of the full scale output range.</p>

## 4.13 Calibration Data

---

### Introduction

The prompts used here are for field calibration purposes. Refer to *Section 7 – Calibration* in this manual for complete information.

---

## 4.14 Status Test Data

---

### Introduction

The prompts used here are for determining the reason for a controller failure. Refer to the *Section 9 – Troubleshooting* in this manual for complete information.

---

## Section 5 – Operation

### 5.1 Overview

**Introduction**

This section gives you all the information necessary to monitor and operate your controller. Review the Operator Interface shown in “Monitoring” to make sure you are familiar with the indicator definitions. The key functions are listed in *Section 1 - Overview*.

**What's in this section?**

This section contains the following topics:

Topic	See Page
5.1 Overview	85
5.2 How to Power Up the Controller	86
5.3 How to Enter a Security Code	88
5.4 Monitoring Your Controller	89
Operator Interface	89
Decimal Point Position	89
Viewing the Operating Parameters	90
Diagnostic Error Messages	91
5.5 Start-up Procedure	92
5.6 Operating Modes	93
Definitions	93
Changing Operating Modes	93
Selecting Manual or Automatic	94
Position Proportional Backup Mode	95
5.7 Setpoints	96
Selecting the Local Setpoint Source	96
Changing the Local Setpoint	96
Enabling the Remote Setpoint	97
Switching between Setpoints	97
Setpoint Selection Indication	98
5.8 Setpoint Ramp Rate	99
5.9 Single Setpoint Ramp	100
Configuring the Ramp	100
Running the Ramp	101
5.10 Using Two Sets of Tuning Constants	103
5.11 Alarm Setpoints	106
5.12 Three Position Step Control Algorithm	107
5.13 Digital Input Option (Remote Switching)	108
5.14 Auto/Manual Station	110
Configuration	111
Operation	113
5.15 Fuzzy Overshoot Suppression	114
5.16 Accutune	115
Rules and Regulations	115
Demand Tuning	116
SP Tuning	117
SP Tuning for Duplex	118
Aborting Accutune Tuning	119
Error Codes	120

## 5.2 How to Power Up the Controller

---

### Apply power

When power is applied, the controller will run three diagnostic tests. All the displays will light and then the controller will go into automatic mode.

---

### Diagnostic tests

Table 5-1 lists the three diagnostic tests.

Table 5-1 Power Up Diagnostic Tests

Prompt on Lower Display	Condition
RAM TEST	Check RAM
CONFTEST	Check Non-volatile memory
CAL TEST	Check Calibration

---

### Test failures

If one or more of these tests fail, the controller will go to the Fail-safe Manual Mode, and "FAILSAFE" will flash in the lower display.

If the output type is Position Proportional, and AUTO-CAL has never been done, a prompt "CALMTR" will appear suggesting that the controller be calibrated.

---

### Troubleshooting

Refer to "STATUS TESTS" in *Section 9 - Troubleshooting* to identify and correct the problem.

---

*Continued on next page*



## 5.2 How to Power Up The Controller, Continued

**Check the displays and keys**

Use the procedure in Table 5-2 to run the display and key test.

Table 5-2 Procedure for Testing the Displays and Keys

Press	Result																				
<p style="text-align: center;"> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 5px;">SET UP</div>                      and hold in,                      then  <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 5px;">FUNCTION</div>                      at the same time                 </p>	<p>The controller will run a display test. All the displays will light for 8 seconds, then the displays will look like this:</p> <p style="text-align: center;">Upper Display  <div style="border: 1px solid black; padding: 2px; display: inline-block; margin: 0 auto; width: 80px; text-align: center;">keys</div></p> <p style="text-align: center;">Lower Display  <div style="border: 1px solid black; padding: 2px; display: inline-block; margin: 0 auto; width: 80px; text-align: center;">try all</div></p>																				
<p>Press each key to see if it works</p>	<p>When the key is pressed, the lower display will indicate the name of the key pressed.</p> <table border="1" data-bbox="862 779 1414 1146"> <thead> <tr> <th>Key Pressed</th> <th>Lower Display</th> </tr> </thead> <tbody> <tr> <td>FUNCTION</td> <td>FUNCTION</td> </tr> <tr> <td>LOWER DISPLAY</td> <td>LWR DISP</td> </tr> <tr> <td>MANUAL/AUTO</td> <td>AUTO MAN</td> </tr> <tr> <td>SETPOINT/SELECT</td> <td>SP SEL</td> </tr> <tr> <td>▲</td> <td>INCRMENT</td> </tr> <tr> <td>▼</td> <td>DECRMENT</td> </tr> <tr> <td>RUN/HOLD</td> <td>RUN HOLD</td> </tr> <tr> <td>▲ + ▼</td> <td>INCRDECR</td> </tr> <tr> <td>FUNCTION+SETUP</td> <td>FUNC SU</td> </tr> </tbody> </table>	Key Pressed	Lower Display	FUNCTION	FUNCTION	LOWER DISPLAY	LWR DISP	MANUAL/AUTO	AUTO MAN	SETPOINT/SELECT	SP SEL	▲	INCRMENT	▼	DECRMENT	RUN/HOLD	RUN HOLD	▲ + ▼	INCRDECR	FUNCTION+SETUP	FUNC SU
Key Pressed	Lower Display																				
FUNCTION	FUNCTION																				
LOWER DISPLAY	LWR DISP																				
MANUAL/AUTO	AUTO MAN																				
SETPOINT/SELECT	SP SEL																				
▲	INCRMENT																				
▼	DECRMENT																				
RUN/HOLD	RUN HOLD																				
▲ + ▼	INCRDECR																				
FUNCTION+SETUP	FUNC SU																				

If no key is presses for 20 seconds, the test will time out and the controller will go into control mode.

If any test fails, go to “Controller Failure Symptoms” in *Section 9 - Troubleshooting*.

**Key error**

When a key is pressed and the prompt “KEY ERROR” appears in the lower display, it will be for one of the following reasons:

- parameter not available,
- not in Set Up mode, press [SET UP] key first,
- Key malfunction, do keyboard test.

## 5.3 Enter a Security Code

### Introduction

The LOCKOUT feature in the UDC 3000 is used to inhibit changes (via keyboard) of certain functions or parameters by unauthorized personnel. There are different levels of LOCKOUT depending on the level of security required. These levels are:

NONE  
 CALIBRATE  
 +CONF  
 +VIEWING  
 MAXIMUM

See Section 4 - Configuration Definitions for details.

### Security code numbers

The level of keyboard lockout may be changed in the Set Up mode. However, knowledge of a security code number (1 to 4095) may be required to change from one level of lockout to another. When a controller leaves the factory, it has a security code of 0 which permits changing from one lockout level to another without entering any other code number.









### Procedure

If you require the use of a security code, select a number from 0001 to 4095 and enter it when the lockout level is configured as "NONE". Thereafter, that selected number must be used to change the lockout level from something other than "NONE".

**CAUTION** Write the number on the Configuration Record Sheet in the configuration section so you will have a permanent record.

Use the procedure in Table 5-3 to enter a security code.

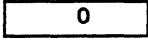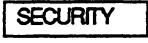Table 5-3 Procedure for Entering a Security Code

Step	Press	Action
1		Until you see Upper Display  Lower Display 
2		Until you see Upper Display  Lower Display 
3	 or 	to enter a four digit number in the upper display (1 to 4095)  This will be your security code.


## 5.4 Monitoring Your Controller

### Operator Interface

The indicators and displays on the Operator Interface let you see what is happening to your process and how the controller is responding.

Figure 5-1 is a view of the Operator interface. A description of the displays and indicators is included.

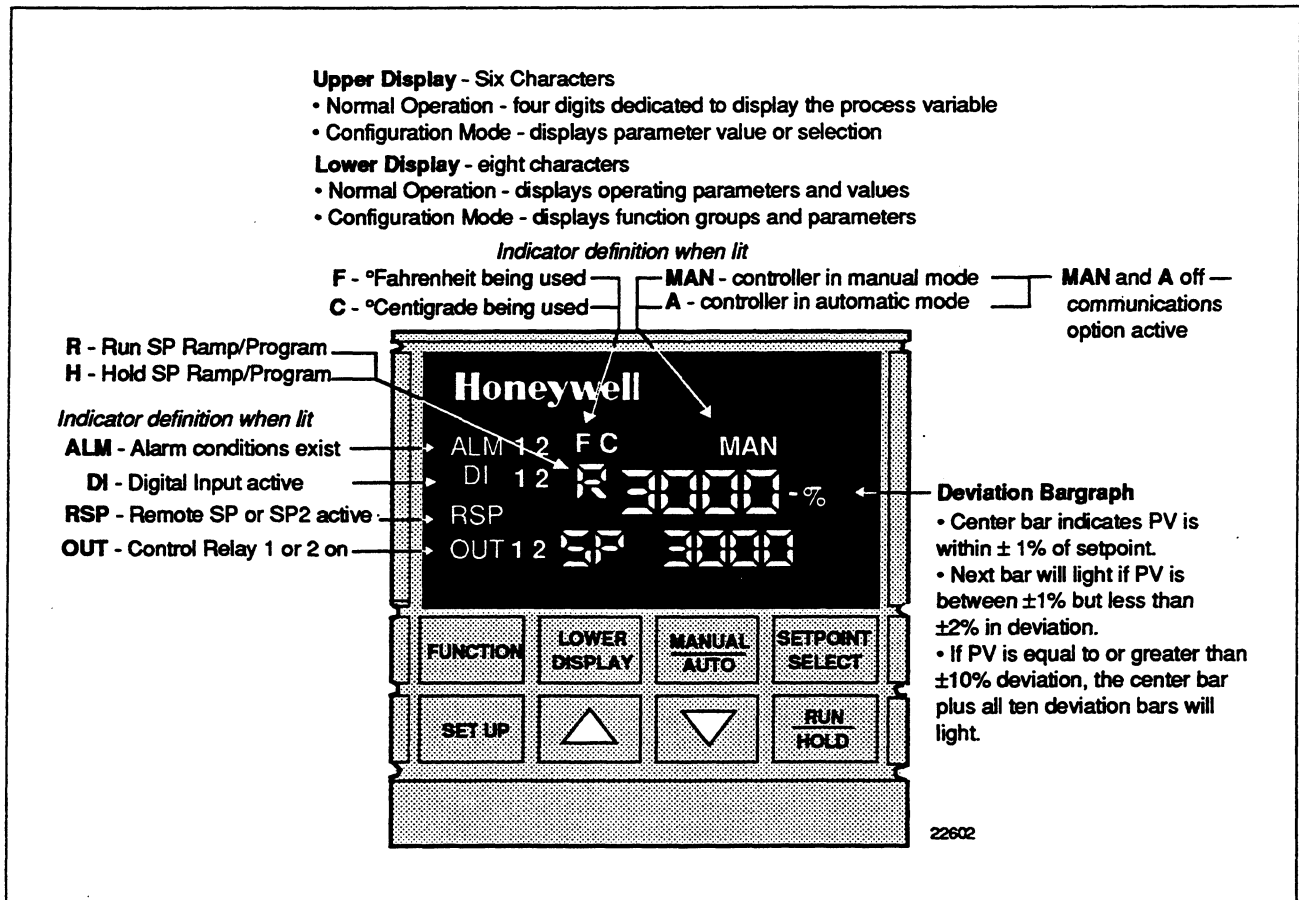Figure 5-1 Operator Interface



### Decimal point position

In each display, when no decimal place is configured, the right-most character is blank.

When a single decimal position has been configured and values greater than 1000 are displayed, the right-most character is blank but the decimal point will be lit.

*Continued on next page*




## 5.4 Monitoring Your Controller, Continued



### Viewing the operating parameters

Press the **LOWER DISPLAY** key to scroll through the operating parameters listed in Table 5-4.

The lower display will show only those parameters and its value that apply to your specific model and the way in which it was configured.

Table 5-4 Lower Display Key Parameter Prompts

Prompt	Description
SP **	Local Setpoint 1
2SP **	Local Setpoint 2 (where remote setpoint does not apply)
RSP	Remote Setpoint (when available)
2IN	Input 2
DEV	PV deviation from setpoint ( $\pm 999.9$ maximum)
ZZRAXX.XX	Time remaining in Setpoint Ramp ZZ = Segment Number XX.XX = Hrs/Minutes
ZZSKXX.XX	Time remaining in Setpoint Soak ZZ = Segment Number XX.XX = Hrs/Minutes
PIDSETX **	Tuning Parameter Set     X=1 or 2
OUT **	Output value in Percent (%); also 3PStep estimated motor position when no slidewire exists
CSP	Computer Setpoint (when setpoint is in override)
SPN	Setpoint Now (for setpoint rate)
POS	3 Position Step motor position when slidewire is connected
BIA**	PD+MR algorithm output bias (same as manual reset value)
 TR	Time remaining on timer
 ET	Elapsed time on timer
TUNE OFF**	Appears when Accutune is enabled
TUNE RUN**	Press  to initiate Accutune Display will read TUNE RUN

\*\*You can press  or  to change the value of this parameter.

*Continued on next page*

## 5.4 Monitoring Your Controller, Continued

### Diagnostic error messages

The UDC 3000 performs background tests to verify data and memory integrity. If there is a malfunction, an error message will be displayed.

In the case of more than one simultaneous malfunctions, only the one with the highest priority will appear on the lower display.

A list of error messages is contained in Table 5-5.

If any of these error messages occur, refer to *Section 9 - Troubleshooting* for information to correct the failure.

Table 5-5 Error Messages






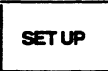






Prompt	Description
EE FAIL	Unable to write to non-volatile memory
FAILSAFE	Failsafe
INP1FAIL	Two consecutive failures of input 1 integration
INP2FAIL	Two consecutive failures of input 2 integration
SW FAIL	Position Proportional slidewire input failure
CONF ERR	Low limit greater than high limit for PV, SP, Reset or Output
INP1 RNG	Input 1 out-of-range Linear: $\pm 1\%$ out-of-range Characterized: $\pm 1\%$ out-of-range
INP2 RNG	Input 2 $\pm 1\%$ out-of-range
PV LIMIT	PV $\pm 10\%$ out-of-range
RV LIMIT	Remote Variable out-of-range Note: $RV = (\text{input 1} \times \text{ratio}) + \text{bias}$
CAL MTR	Not calibrated. Perform Position Proportional Calibration

## 5.5 Start-up Procedure

### Procedure

The Start-up procedure is given in Table 5-6.

Table 5-6 Procedure for Starting Up the Controller

Step	Operation	Press	Action
1	Select manual mode		until "MAN" indicator is ON. The controller is in manual mode.
2	Adjust the output	 OR 	to adjust the output value and ensure that the final control element is functioning correctly. Upper Display  shows the PV value Lower Display  shows OUT and the output value in %.
3	Tune the controller		Make sure the controller has been configured properly and all the values and selections have been recorded on the Configuration Record Sheet.  To tune your controller manually, see Section 11 - Appendix A. Refer to Set Up group "TUNING" to ensure that the proper selections for PROP BD or GAIN, RATE MIN, and RSET MIN or RSET RPM have been entered.  For controllers with Accutune, see the procedure in this section.
4	Enter the local setpoint		Upper Display  shows the PV Value  Lower Display  SP and the local setpoint value
		 OR 	To adjust the local setpoint to the value at which you want the process variable maintained.
5	Select Automatic Mode		until "A" indicator is ON. The controller is in Automatic mode.  The controller will automatically adjust the output to maintain the process variable at setpoint, if the controller is properly tuned.

## 5.6 Operating Modes

### Available modes

The controller can operate in any of three basic modes:

- Manual
- Automatic with Local Setpoint
- Automatic with Remote Setpoint

Manual and Automatic with Local set point are standard features and Automatic with Remote Setpoint is optional.

### Mode definitions

Table 5-7 lists the three modes and their definitions.

Table 5-7 Operating Mode Definitions

Operating Mode	Definition
MANUAL	When switched to manual mode, the controller holds its output at the last value used during automatic operation and stops adjusting the output for changes in setpoint or process variable. Instead, you adjust the output by changing the value shown in the lower display. See "Selecting Modes".
AUTOMATIC with LOCAL SETPOINT	In automatic local mode, the controller will operate from the local setpoint and automatically adjust the output to maintain the setpoint at the desired value. In this mode you can adjust the setpoint. See 5.7 - "Setpoints".
AUTOMATIC with REMOTE SETPOINT	In automatic remote mode, the controller will operate from the setpoint measured at input 2. Adjustments are available to ratio this input and add a constant bias before it is applied to the control equation. See Section 3 - Configuration, Set up group "Control".

### What happens when you change modes

Table 5-8 explains what happens to the controller when you switch from one mode to another.

Table 5-8 Changing Operating Modes

Mode Change	Description
Manual to Automatic Local Setpoint	The local setpoint is usually the value previously stored as the local setpoint. PV Tracking is a configurable feature which modifies this. When it is selected, the local setpoint value tracks the process variable value continuously while in manual. LSP=PV at the moment you switch from manual to automatic. LSP holds at this one value.
Manual or Auto Local to Automatic Remote SP	The second Input value with Ratio and Bias applied is used to calculate the control setpoint.
Automatic Remote SP to Manual or Auto Local Setpoint	If configured for Local Setpoint Tracking, when the UDC transfers out of remote setpoint, the last value of the control setpoint is inserted into the local setpoint. If LSP tracking is not configured, the local setpoint will not be altered when the transfer is made.

Continued on next page

## 5.6 Operating Modes, Continued


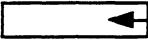








### Selecting Manual or Automatic mode

An alternate action switch places the controller in Automatic or Manual mode of operation.

Switching between manual and automatic will be bumpless, except when PD+MR algorithm is selected.

Table 5-9 includes procedures for selecting automatic or manual mode and changing the output while in manual.

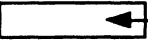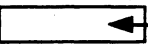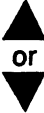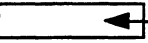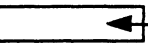Table 5-9 Procedure for Selecting Automatic or Manual Mode

Step	Operation	Press	Action
1	Selecting Automatic Mode		<p>until "A" indicator is ON. The controller regulates its output to maintain the PV at the desired setpoint.</p> <p>Upper Display   ← shows the PV value</p> <p>Lower Display   ← shows SP and the setpoint value</p> <p>The deviation bargraph indicates the PV deviation from the setpoint.</p>
2	Selecting Manual Mode		<p>until "MAN" indicator is ON. The controller holds its output at the last value used during automatic operation and stops adjusting the output for changes in setpoint or process variable.</p> <p>Upper Display   ← shows the PV value</p> <p>Lower Display   ← shows OUT and the output value in (%).</p> <p>The deviation bargraph indicates the PV deviation from the setpoint.</p>
3	Adjust the Output in Manual Mode		<p>to adjust the output value while in manual mode.</p> <p>Upper Display   ← shows the PV value</p> <p>Lower Display   ← shows OUT and the output value in %.</p>
4	Return to Automatic Mode		<p>The "A" indicator will appear indicating Automatic mode.</p>

*Continued on next page*



## 5.6 Operating Modes, Continued

---

### Position Proportional Backup mode

This feature provides for Position Proportional models to automatically change to a Three Position Step algorithm if the slidewire input signal fails. This will maintain control of your process.

“IN2 RNG” or “SWFAIL” will flash in the lower display and the “OUT” display will show a estimated motor position WITHOUT a decimal point.

---

## 5.7 Setpoints

### Introduction

You can configure the following setpoints for the UDC 3000 controller.


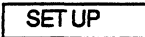







- A single local setpoint
- 2 local setpoints
- A local setpoint and a remote setpoint (Remote setpoint is an option)

These setpoint can be toggled by the **SETPOINT/SELECT** key.

### Selecting the local setpoint source

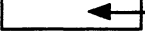Use the procedure in table 5-10 to select a single local setpoint source or two local setpoints.






Table 5-10 Procedure for Selecting the Local Setpoint Source

Step	Operation	Press	Action
1	Enter Set Up mode		until the displays read: Upper Display  Lower Display 
2	Display Local Setpoint Source selections		until the displays read: Upper Display  Setpoint source selections Lower Display  1 LOCAL 2 LOCAL
3	Select the desired source	 OR 	to select the desired setpoint source in the upper display.
4	Return to control		The controller will assume normal control.

### Changing the local setpoints

Use the procedure in Table 5-11 to change either of the local setpoint value.

Table 5-11 Procedure for Changing the Local Setpoints

Step	Operation	Press	Action
1	Select the setpoint		until you see Upper Display  The PV value Lower Display  SP or 2sp and the local setpoint value
2	Change the value	 OR 	to change the local setpoint to the value at which you want the process maintained. The deviation bargraph indicates PV deviation from setpoint.










*Continued on next page*

## 5.7 Setpoints, Continued

### Enabling (or disabling) the remote setpoint

Use the procedure in Table 5-12 to enable the remote setpoint source as Input 2.


Table 5-12 Procedure for Enabling (or disabling) the Remote Setpoint

Step	Operation	Press	Action
1	Select Set Up Group		Until you see: Upper Display  Lower Display 
2	Select the Remote Setpoint Source Prompt		Until you see: Upper Display  The Remote Setpoint source selection Lower Display  NONE - not used IN 2 - Input 2 as RSP
3	Change selection	 or 	to enable or disable the remote setpoint.
4	Return to normal operation		This will return the controller to normal operation.

### Switching between setpoints

You can switch between Local and Remote setpoints or between two Local setpoints when configured. Use the procedure in Table 5-13 to switch between setpoints.

Table 5-13 Procedure for Switching Between Setpoints

Step	Operation	Press	Action
1	Switch between Setpoints		alternately select Local setpoint 1 and Remote setpoint or switch between the 2 Local Setpoints. or until you see the desired setpoint indicated <b>ATTENTION</b> "KEY ERROR" will appear in the lower display if the remote setpoint or 2nd local setpoint is not configured as a setpoint source, or if you attempt to change the setpoint while a setpoint ramp is enabled.

*Continued on next page*

## 5.7 Setpoints, Continued

### Setpoint selection indication

Table 5-14 shows how the indicators react and what the displays show for each type of setpoint.

Table 5-14 Setpoint Selection Indication

	Using Local Setpoint	Using Remote Setpoint	Using 2nd Local Setpoint
RSP Indicator	OFF	ON	ON
Upper Display	PV	PV	PV
Lower Display	SP and the Local Setpoint Source	RSP and Remote Setpoint Value	SP2 and the 2nd Local Setpoint Value

## 5.8 Setpoint Rate

---

### Configuration

You can configure a Setpoint Ramp Rate that will apply to any Local setpoint change immediately.

Refer to the Configuration Section to enable the ramp and set an upscale or downscale rate value.

Make sure SP RAMP and SP PROG are disabled.

---

### Operation

When a Local setpoint change is made, the controller will ramp from the original setpoint to the new one at the rate specified. This changing (current) setpoint can be viewed on the lower display.

Press the **LOWER DISPLAY** key until you see SPn and the setpoint value in the lower display.

---

## 5.9 Single Setpoint Ramp


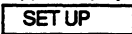








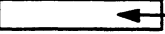





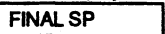



### Configuring the setpoint ramp

You can configure a single setpoint ramp to occur between the current local setpoint and a final local setpoint over a time interval of from 1 to 255 minutes. You can RUN or HOLD the ramp at any time.

### Procedure

Table 5-15 lists the procedure for configuring the Setpoint Ramp parameters. The procedure for **SP Program** is in *Section 6 – Setpoint Programming Option*.

Table 5-15 Procedure for Configuring a Setpoint Ramp

Step	Operation	Press	Action
1	Select SP RAMP Set Up Group		Until you see: Upper Display  Lower Display 
2	Select the Setpoint Ramp function		Until you see: Upper Display  Lower Display 
3	Enable Setpoint Ramp		Until you see: Upper Display  Lower Display   NOTE: You cannot change the current local setpoint if the setpoint ramp function is enabled. Make sure SP RATE and SP PROG are disabled.
4	Set the Ramp Time		Until you see: Upper Display  ← The ramp time in minutes Lower Display 
		 or 	to change the upper display value to the number of minutes in which you want the final setpoint to be reached. Setting Range = 1 to 255 minutes NOTE: Entering "0" will imply an immediate step change to the final SP.
5	Set the Final Setpoint value		Upper Display  ← The Final Setpoint value Lower Display 
6		 or 	to change the upper display value to the desired final setpoint value. Setting Range = within the setpoint limits
7	Exit Configuration		To exit configuration.

*Continued on next page*

## 5.9 Single Setpoint Ramp, Continued






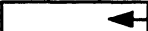








### Running the setpoint ramp

Running a Setpoint Ramp includes starting, holding, viewing the ramp time, ending the ramp and disabling it.

### Procedure

Table 5-16 lists the procedure for running the Setpoint Ramp.

Table 5-16 Procedure for Running a Setpoint Ramp

Step	Operation	Press	Action
1	Put the controller into Automatic mode		until "A" indicator is ON and you will see: Upper Display  ← H and the PV value Lower Display  ← SP and the present setpoint value
2	Set Start SP	 or 	until the <b>start setpoint value</b> you desire is indicated in the lower display: Upper Display  ← H and the PV value Lower Display  ← SP and the start setpoint value
3	Start the Ramp		You will see: Upper Display  ← R and the PV value Lower Display  ← SP and a changing setpoint value  NOTE: The value in the lower display will be increasing or decreasing toward the final setpoint value. The PV value in the upper display will also change.
4	Hold the Ramp at the current value		This holds the ramp at the current setpoint value.  Press again to continue run.  A "KEY ERROR" prompt will appear if [RUN/HOLD] key is pressed while "SP RAMP" is disabled.
5	View the remaining ramp time		Until you see: Upper Display  ← R or H and the PV value Lower Display  ← RAMP XXXM (Time remaining)

*Procedure continued on next page*

## 5.9 Single Setpoint Ramp, Continued

Procedure, continued

Table 5-16 Procedure for Running a Setpoint Ramp, continued

Step	Operation	Press	Action
6	End the Ramp		<p>When the final setpoint is reached, the "R" changes to "H" in the upper display and the controller operates at the new setpoint.</p> <p><b>ATTENTION</b> Anytime the local setpoint is different from the final setpoint value and the <b>RUN/HOLD</b> key is pressed - the ramp will start again.</p>
7	Disable the setpoint ramp function	<div style="border: 1px solid black; padding: 2px; display: inline-block;">SET UP</div>	<p>Until you see:</p> <p>Upper Display  <div style="border: 1px solid black; padding: 2px; display: inline-block;">SET UP</div></p> <p>Lower Display  <div style="border: 1px solid black; padding: 2px; display: inline-block;">SP RAMP</div></p>
		<div style="border: 1px solid black; padding: 2px; display: inline-block;">FUNCTION</div>	<p>You will see:</p> <p>Upper Display  <div style="border: 1px solid black; padding: 2px; display: inline-block;">ENABLE</div></p> <p>Lower Display  <div style="border: 1px solid black; padding: 2px; display: inline-block;">SP RAMP</div></p>
		<div style="text-align: center;">▲</div>	<p>Until you see:</p> <p>Upper Display  <div style="border: 1px solid black; padding: 2px; display: inline-block;">DISABL</div></p> <p>Lower Display  <div style="border: 1px solid black; padding: 2px; display: inline-block;">SP RAMP</div></p>
8	Return to normal operating mode	<div style="border: 1px solid black; padding: 2px; display: inline-block;">LOWER DISPLAY</div>	



## 5.10 Using Two Set of Tuning Constants

### Introduction

You can use two set of tuning constants for single output types and choose the way they are to be switched.

The sets can be:

- Keyboard selected
- Automatically switched when a predetermined Process Variable value is reached.
- Automatically switched when a predetermined Setpoint value is reached.







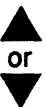

The following procedures show you how to:

- Select two sets
- Set the switch-over value
- Set tuning constant value for each set
- Switch between two sets via the keyboard (without automatic switch-over)

### Select two sets

The procedure in Table 5-17 tells you how to select two sets.

Table 5-17 Procedure for Selecting Two Set of Tuning Constants

Step	Operation	Press	Action
1	Select Control Set Up group		Until you see: Upper Display  Lower Display 
2	Select PID SETS function		Until you see: Upper Display  Available selections are listed below Lower Display   1 ONLY - 1 set of constants 2 KEYBD - 2 sets, keyboard selectable 2 PVSW - 2 sets, auto switch at PV value 2 SPSW - 2 sets, auto switch at SP value
		 or 	to select the type of PID SET.

*Continued on next page*

## 5.10 Using Two Set of Tuning Constants, Continued

### Set switch-over value

If you select 2 PVSW or 2 SPSW, you must set a value at which the sets will switch over.

The procedure in Table 5-18 shows you how to set this value.

Table 5-18 Procedure for Setting Switchover Values

Step	Operation	Press	Action
1	Select Switchover value function	<div style="border: 1px solid black; padding: 2px; display: inline-block;">FUNCTION</div> assuming you are still in Set Up group "CONTROL"	Until you see: Upper Display <div style="border: 1px solid black; width: 100px; height: 20px; margin: 5px 0;"></div> ← The switchover value Lower Display <div style="border: 1px solid black; padding: 2px; display: inline-block;">SW VALUE</div>
		▲ or ▼	to select the switch-over value in the upper display.

### Set Tuning constant values for each set

There are specific tuning constant that must be set for each set. The procedure in Table 5-19 shows you how to access these constants and change their values.

Table 5-19 Procedure for Setting Tuning Constant Values

Step	Operation	Press	Action
1	Select Tuning Set Up Group	<div style="border: 1px solid black; padding: 2px; display: inline-block;">SET UP</div>	Until you see: Upper Display <div style="border: 1px solid black; padding: 2px; display: inline-block;">SET UP</div> Lower Display <div style="border: 1px solid black; padding: 2px; display: inline-block;">TUNING</div>
2	Select the tuning constants	<div style="border: 1px solid black; padding: 2px; display: inline-block;">FUNCTION</div>	to successively display the following constants: Upper Display <div style="border: 1px solid black; width: 100px; height: 20px; margin: 5px 0;"></div> ← The tuning constant value Lower Display <div style="border: 1px solid black; width: 100px; height: 20px; margin: 5px 0;"></div> ← <ul style="list-style-type: none"> <li>PROP BD or GAIN*</li> <li>RATE*</li> <li>RSET*</li> <li>PROP BD2 or GAIN2**</li> <li>RATE 2**</li> <li>RSET2**</li> </ul>
		▲ or ▼	To change the value of any of the above listed prompts in the lower display.

\*PIDSET1 – will be used when PV or SP, whichever is selected, is greater than the switchover value.

\*\*PIDSET2 – will be used when PV or SP, whichever is selected, is less than the switchover value.

*Continued on next page*




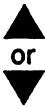
## 5.10 Using Two Set of Tuning Constants, Continued

Switch between two sets via the keyboard (without automatic switch-over)

This procedure is operational only if 2 PID SETS was configured at "CONTROL" set up group.

The procedure in Table 5-20 shows you how to switch from one set to another.

Table 5-20 Procedure for switching PID SETS from the Keyboard

Step	Operation	Press	Action
1	Access the PID set display		Until you see: Upper Display  ← The PV value Lower Display  X= 1 or 2
			to change PID SET 1 to PID SET 2 or vice versa. You can use Accutune on each set.

## 5.11 Alarm Setpoints

### Introduction

An alarm consists of a relay contact and an operator interface indication. The alarm relay is de-energized if Setpoint 1 or Setpoint 2 is exceeded.

The alarm relay is energized when the monitored value goes into the allowed region by more than the hysteresis.

The relay contacts can be wired for normally open (NO)-energized or normally closed (NC) de-energized at the rear terminals. See *Section 2 - Installation (Table 2-4)* for alarm relay contact information.





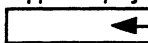

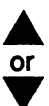

There are four alarm setpoints, two for each alarm.

The type and state (High or Low) is selected during configuration. See *Section 3 - Configuration* for details.

### Procedure for displaying the alarm setpoints

Table 5-21 lists the procedure for displaying and changing the alarm setpoints.

Table 5-21 Procedure for Displaying or Changing the Alarm Setpoints

Step	Operation	Press	Action
1	Access the Alarm Set Up group		Until you see: Upper Display  Lower Display 
2	Access the Alarm Setpoint Values		to successively display the alarm setpoints and their values. Their order of appearance is shown below. Upper Display  ← The alarm setpoint value Lower Display   A1S1 VAL = (Alarm 1, Setpoint 1 value) A1S2 VAL = (Alarm 1, Setpoint 2 value) A2S1 VAL = (Alarm 2, Setpoint 1 value) A2S2 VAL = (Alarm 2, Setpoint 2 value)
			to change any alarm setpoint value you select in the upper display.
3	Return to normal operation		

## 5.12 Three Position Step Control Algorithm

### Introduction

The Three Position Step Control algorithm allows the control of a valve (or other actuator) with an electric motor driven by two controller output relays; one to move the motor upscale, the other to move it downscale, without a feedback slidewire linked to the motor shaft. Accutune does not function with this algorithm.

### Estimated motor position

The Three Position Step control algorithm provides an output display (“OUT”) which is an estimated motor position since the motor is not using any feedback.

Although this output indication is only accurate to a few percent, it is corrected each time the controller drives the motor to one of its stops (0% or 100%).

It avoids all the control problems associated with the feedback slidewire (wear, dirt, noise).

When operating in this algorithm, the estimated “OUT” display is shown to the nearest percent (i.e. no decimal).

### Accurate motor position


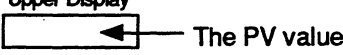
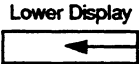
In the event that an accurate and repeatable indication in motor position is required, Position Proportional model’s slidewire input can be used to read the motor position and display it on the lower display as “POS” while still operating in the Three Position Step control mode.

The slidewire must be calibrated for this to operate correctly.

### Displaying the motor position

Table 5-22 lists the procedure for displaying the motor position.

Table 5-22 Procedure for Displaying the 3PSTEP Motor Position

Step	Operation	Press	Action
1	Access the displays		Until you see: Upper Display  ← The PV value Lower Display  <b>POS</b> = 3PStep motor position with slidewire connected or <b>OUT</b> = Estimated 3PStep motor position when no slidewire exists

### Power up output

When the controller powers up after a power outage, the position of the motor will correspond to whatever was configured at set up group prompt “CONTROL”, function prompt “PWR OUT”, selection LAST or FAILSAFE. Refer to Subsection 4.9, Table 4-8 for definition of each selection.

## 5.13 Digital Input Option (Remote Switching)

### Introduction

The Digital Input option detects the state of external contacts for either of two inputs. On contact closure, the controller will respond according to how each digital input is configured.

Make your selection under Set Up group "OPTION", function group prompt "DIG IN1" or "DIG IN2". See *Section 3 - Configuration*.

### Action on closure

Table 5-23 lists the configuration prompt selections, the "Action on Closure", and the display indication for each selection available.

Table 5-23 Digital Input Option Action on Contact Closure

DIG IN1 or DIG IN2 Selections	Display Indication	Action on Contact Closure*
None	DI 1 2 always off*	No Digital Input selection
To MAN	"MAN" blinks plus lower display switches to output (OUT)	Puts the controller into manual mode. Contact open returns the controller to former mode unless <b>AUTO/MAN</b> key is pressed while digital input is active.
To LSP		Puts the controller into local setpoint 1. When contact opens, the controller returns to former operation, local or remote setpoint, unless the <b>SETPOINT/SELECT</b> key is pressed while digital input is active.
To 2SP	"RSP BLOCK" blinks	Puts the controller into local setpoint 2. When contact opens, the controller returns to former operation, local or remote setpoint, unless the <b>SETPOINT/SELECT</b> key is pressed while digital input is active.
To DIR	None	Selects direct controller action.
ToHOLD	"H" blinks	Suspends setpoint program or setpoint ramp. Contact open runs the program or ramp.
ToPID2	PID2 in lower display	Selects PID2
PV 2IN		Selects the PV to equal Input 2.
To RUN	"R" indicator blinks	Starts a stopped SP Program.
ToBEGN		Resets the Setpoint Program back to the beginning of the first segment in the program.
STOP I		Disables PID (I) Integral action.


\*The Digital Input Annunciator will always show the Digital Input status.

*Continued on next page*

## 5.13 Digital Input Option (Remote Switching), Continued

Action on closure  
(continued)

Table 5-23 Digital Input Option Action on Contact Closure, Continued

DIG IN1 or DIG IN2 Selections	Display Indication	Action on Contact Closure*
<b>MANFS</b>	"MAN" blinks plus lower display switches to output (OUT) and failsafe value.	Unit goes to Manual Mode, output goes to the Failsafe value.
<b>To LOCK</b>	"LOCKED" when key pressed	Disables all keys
<b>To A OUT</b>		Output goes to value set at control prompt "AUTO OUT".
<b>TIMER</b>	Timer clock (  ) and time appear in lower display.	Starts timer (momentary).
<b>AM STA</b>	IN blinks. "RSP BLOCK" blinks.	Causes switch to Auto Manual Station mode. Refer to Figure 5-2 in subsection 5.14 for auto manual station information.
<b>To TUNE</b>	"TUNE" Blinks in the upper display	Starts the Accutune process.

### Keyboard operation

If a particular mode or parameter is selected by the contact closure, using the keyboard to select the same parameter will ensure that the selected mode will be maintained after the remote digital switch is re-opened.

## 5.14 Auto/Manual Station

### Introduction


When you select "AM STA" (auto manual station) under "OPTION" setup group, function prompt "DIG IN1" or "DIG IN2" (digital input option), contact closure on the selected digital input causes the controller to switch to Auto/Manual Station mode.

### Function

As shown in Figure 5-2, State 2 is the "A/M Station mode" where the programmable logic controller (PLC) output is sent through the Auto/Manual Station. You can switch to manual and change the output at the controller. (It uses PIDSET2.)

State 1 is the "Backup PID mode" which is triggered by opening the Digital Input. (It uses PIDSET1.)

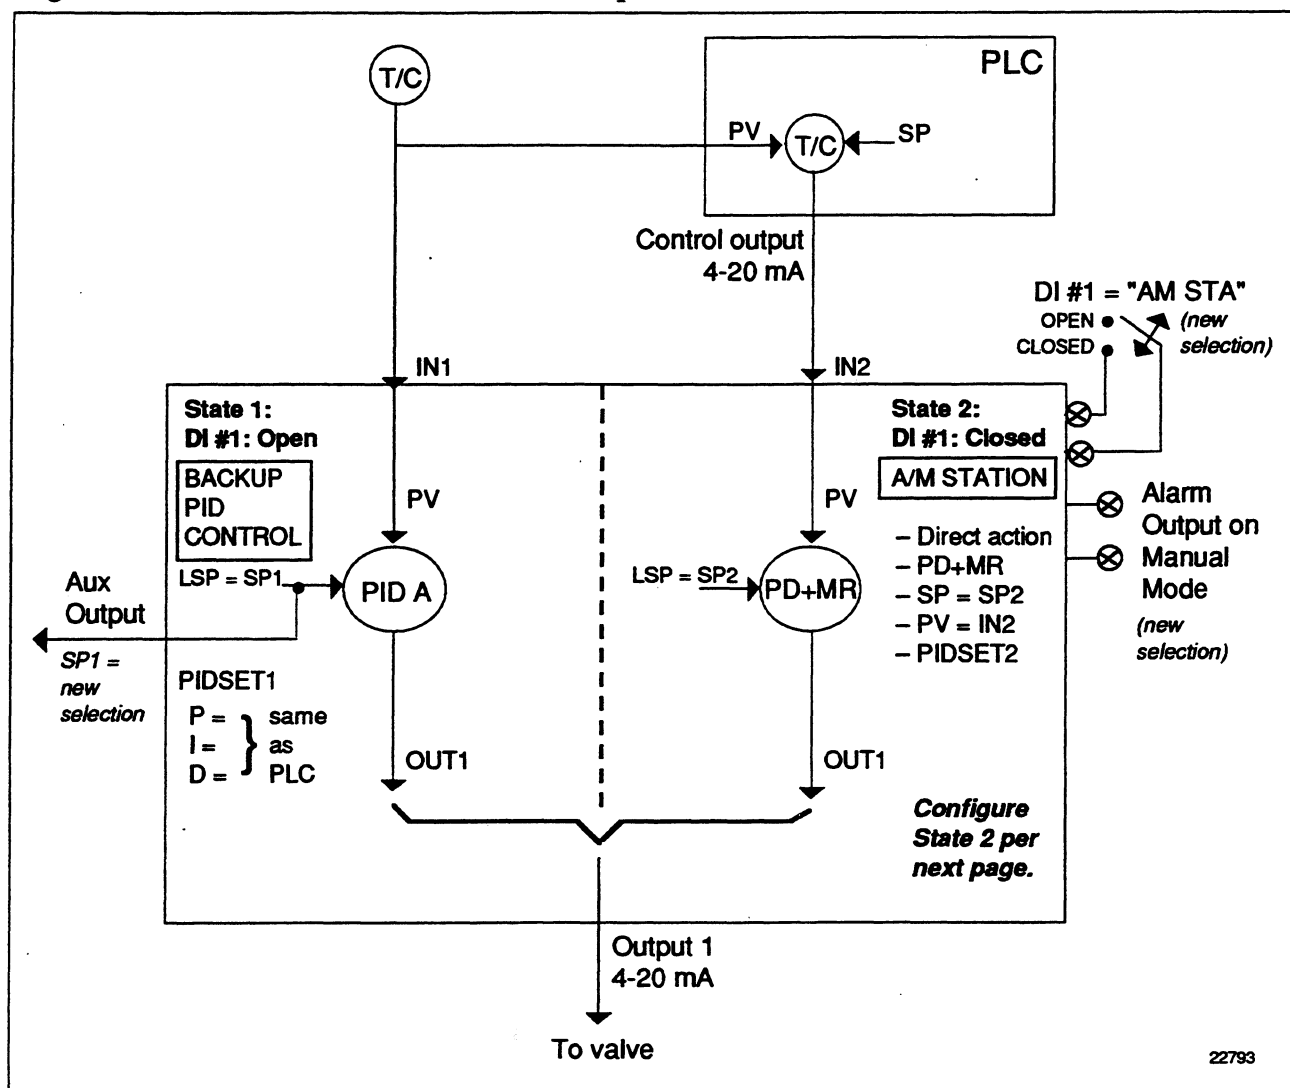Figure 5-2 Auto/Manual Station and Backup Control Feature



Continued on next page



## 5.14 Auto/Manual Station, Continued

---

### Description

The “AM STA” selection of digital input creates a repeater station when the digital input is closed. This is accomplished by a multi-selection from the digital input menu.

- “ACTION” is forced as “DIRECT”.
- “CONT ALG” is forced as “PD+MR”.
- Active setpoint is forced to LSP2.
- The PV is switched to “PV 2IN”.
- The tuning parameters used are the second set of parameters.

When the switch is open the unit becomes a normal controller with “CONT ALG” of “PID A”, using tuning parameters set 1, LSP1, PV as IN1 and “DIRECT” or “REVERSE” as selected by customer configuration.

Input 1 is typically the PV of some upper controller and Input 2 is typically that controller’s output.

If the upper control fails, the upper device or some watch dog opens the digital input switch and UDC 3000 back-up PID A control is active.

When the upper control reactivates, the digital input switch is closed and the Auto/Manual Station becomes a repeater station and allows the upper control output signal to pass through.

---

### Configuration

There are some things to consider when configuring the controller.

The PV range stays as the IN1 range, even while IN2 is the PV when the switch is closed, therefore:

- The IN2 HI must be less than or equal to the IN1 HI.  
(Suggest:  $IN2\ HI = 100.0$ )
- The IN2 LO must be greater than or equal to the IN1 LO.  
(Suggest:  $IN2\ LO = 0.0$ )
- The TUNING GAIN2 must be equal to  $(IN1\ HI - IN1\ LO) / (IN2\ HI - IN2\ LO)$ .

---





*Continued on next page*

## 5.14 Auto/Manual Station, Continued

Configuration  
(continued)

Refer to Table 5-24 and set up the controller in the order shown.

Table 5-24 Auto/Manual Station Mode Configuration Procedure

Step	Press  to Select Setup Group	Press  to Select Function Prompts	Press   Enter Value or Selection	Remarks
1	Control	PID SETS	2 KEYBD	Select other control parameters as needed by the application.
		SP SOURCE	2 LOCAL	
		SP TRACK	NONE	
2	Algorithm	CONT ALG	PD+MR	This allows setting of the Manual Reset value.
3	Tuning	MAN RSET	50	Manual Reset of 0 with the Setpoint of 0 also works but only if the PLC controller is re-initialized when it is not in control.
4	Algorithm	CONT ALG	PID A	Defines Back-up Control Algorithm.
5	Tuning	RSET2MIN	50.00	<p>Note 1. Set the Gain 2 equal to</p> $\frac{\text{Input 1 Span}}{\text{Input 2 Span}}$ <p>If "PB" is selected under "Control" setup group, function prompt "PBorGAIN", set the PROP BD2 to</p> $100 \times \frac{\text{Input 2 Span}}{\text{Input 1 Span}}$
		GAIN2	See Note 1	
		RATE2MIN	0.00	
6	Options	DIG IN1 or DIG IN2	AM STA	

### CAUTION

#### DO NOT SELECT

- In the CONTROL setup list, do not select SP TRACK as PV or RSP.
- In the SP RAMP setup list, do not select SP RATE as ENABLE.
- In the ALGORITHM setup list, do not select CONT ALG as PID B, ON-OFF, or 3PSTEP.
- In the Display menu when PIDSET# is displayed, DO NOT change the selection.

Continued on next page

## 5.14 Auto/Manual Station, Continued

---

### Operation

Set the Local Setpoint 2 to 50% of the Input 2 range.

These features work with the Auto/Manual Station.

- In the SP RAMP setup list, SP PROG (acts on SP1 for backup operation).
- In the SP RAMP setup list, SP RAMP (acts on SP1 for backup operation).
- In the CONTROL setup list, ACTION as DIRECT or REVERSE for the backup PID A operation.

The PD+MR Action is forced to be DIRECT as required for the pass through of the output signal.

---

## 5.15 Fuzzy Overshoot Suppression

---

### Introduction

Fuzzy Overshoot Suppression minimizes overshoot after a setpoint change or a process disturbance. This is especially useful in processes which experience load changes or where even a small overshoot beyond the setpoint may result in damage or lost product.

---

### How it works

The fuzzy logic observes the speed and direction of the PV signal as it approaches the setpoint and temporarily modifies the internal controller response action as necessary to avoid an overshoot. There is no change to the PID algorithm, and the fuzzy logic does not alter the PID tuning parameters. This feature can be independently Enabled or Disabled as required by the application to work with “TUNE” On-Demand tuning or the “SP” tuning algorithm.

---

### Configuration

To configure this item, refer to Section 3 - Configuration:

- Set Up Group “ACCUTUNE”
  - Function Prompt “FUZZY”
  - Select “ENABLE” or “DISABLE” (▲ or ▼)
-

## 5.16 Accutune

### Introduction

There are two types of Accutune from which to choose:

- **(TUNE) Demand Tuning** - Tuning is done on demand by:
  - pressing the **Lower Display** and **▲** keys simultaneously, or
  - by selecting prompt "TUNE RUN" in the lower display, or
  - via Digital Input.
- **(SP) Setpoint Tuning** - SP tuning will continually adjust the Gain or Proportional Band (P), Reset (I), and Rate (D) tuning constants in response to setpoint changes.

### Configuration

To configure this item, refer to Section 3 - Configuration:

- Set Up Group "ACCUTUNE"
- Function Prompt "ACCUTUNE"
- Select "DISABLE", "TUNE", OR "SP" (▲ or ▼)

If "SP" Selected:

- Enter the Setpoint Change Value, Function Prompt "SP CHANG"
- Verify or change the Process Gain Value, Function Prompt "KPG"
- Verify Criteria, Function Prompt "CRITERIA"

### Rules and regulations

Table 5-25 is a list of rules and regulations for Accutune.

Table 5-25 Rules and Regulations for Accutune

"TUNE"	"SP"	Applicable Rule or regulation
X		TUNE (On Demand) tuning will work for all Control Algorithms except "On/Off".
X		TUNE (On Demand) tuning works for Integrating Processes.
	X	SP tuning will work only for algorithms PID-A or PID-B selections, i.e. it will NOT work with ON/OFF, THREE POSITION STEP, or PD+MR control algorithms.
	X	SP tuning can tune on all Local or Computer setpoints <i>except ramping setpoints</i> , i.e. cannot be done during SP Ramp or SP Program or when using Remote Setpoint.
X	X	Tuning is done in Automatic mode.
X	X	Tuning can be monitored or re-configured using communications option.
X	X	Tuning can be enabled via Digital Inputs.
X	X	Tuning can be aborted by going to Manual mode or disabling via configuration.

*Continued on next page*

## 5.16 Accutune™, Continued

### Tuning Indicators

1. "TUNE" or "SP" Tuning - when tuning is in progress, a large "T" appears in the upper display and disappears as soon as tuning is completed.
2. The lower display prompt "TUNE\_OFF" will change to "TUNE\_RUN".

### How TUNE (Demand) tuning works

TUNE tuning provides virtually foolproof, trouble-free on-demand tuning in the UDC3000 controller. No knowledge of the process is required at start-up. The operator simply enters the desired setpoint and initiates the tuning.

The UDC controller immediately starts controlling to the setpoint while it identifies the process, calculates the tuning constants and enters them into the Tuning group, and begins PID control with the correct tuning parameters. This works with any process, including integrating type processes, and allows retuning at a fixed setpoint.

The tuning sequence will cycle the controller's output two full cycles between 0% and 100 % (or configured output limits) while allowing only a very small Process Variable change above and below the SP during each cycle.

The algorithm then calculates new tuning parameters and enters them into the tuning group. "T" appears in the upper display

### Starting TUNE (Demand) tuning

After "TUNE" has been enabled, use the procedure in Table 5-26 to start tuning

Table 5-26 Procedure for Starting TUNE (Demand) Tuning

Step	Action
1	Set the Setpoint to the desired value.
2	Switch to "Automatic" mode - <input type="button" value="Manual/Auto"/> key.
3	Initiate Tuning by: <ul style="list-style-type: none"><li>• pressing the <input type="button" value="▲"/> key when the Lower Display prompt = "TUNE-OFF",</li><li>• pressing the <input type="button" value="Lower Display"/> and <input type="button" value="▲"/> keys simultaneously, or</li><li>• using the Digital Input (if configured).</li></ul>

### Aborting Tuning

If it is necessary to stop or abort the tuning process, press the  key and the controller will return to Manual mode.

You can also disable "TUNE" in the Accutune set up group.

*Continued on next page*

## 5.16 Accutune™, Continued

### TUNE for Duplex (Heat/Cool)

“TUNE” can be done for applications using Duplex (Heat/Cool) control. During tuning, Accutune II requires SP 1 will cause a Heating demand, and then the calculated tuning parameters will be automatically entered as PID SET 1. Likewise, it requires tuning at Local SP 2 will cause a Cooling demand, and the cooling parameters will be entered as PID SET 2.

The tuning sequence will cycle the controller’s output two full cycles between the high output limit and 50% for HEAT or between 50% and the low output limit for COOL while allowing only a small process variable change above and below the setpoint during each cycle.

### Configuring TUNE for Duplex (Heat/Cool)

To configure this item, refer to Section 3 - Configuration:

- Set Up Group “ACCUTUNE”
- Function Prompt “ACCUTUNE”
- Select “TUNE” (▲ or ▼)

### Using TUNE at Start-up for Duplex (Heat/Cool)

After “TUNE” has been enabled, use the procedure in Table 5-27 to use “TUNE” at Start-up for Duplex (Heat/Cool) control.

Table 5-27 Procedure for Using TUNE at Start-up for Duplex

Step	Action
1	<p><b>Heat Zone:</b></p> <p>a. Adjust the <b>Local SP1</b> to a value within the Heat Zone.</p> <p>b. Insure that the UDC is in <i>Automatic</i> mode.</p> <p>c. Press the <b>Lower Display</b> and <b>▲</b> keys simultaneously to initiate Heat tuning.</p> <p>The output will cycle between 50% and 100% (or high output limit).</p> <p>A large “T” appears in the upper display until tuning is completed and final Heat parameters are entered for <b>PID Set 1</b> in the Tuning group.</p>
2	<p><b>Cool Zone:</b></p> <p>a. Adjust the <b>Local SP2</b> to a value within the Cool Zone.</p> <p>b. Insure that the UDC is in <i>Automatic</i> mode.</p> <p>c. Press the <b>Lower Display</b> and <b>▲</b> keys simultaneously to initiate Cool tuning.</p> <p>The output will cycle between 0% and 50% (or low output limit).</p> <p>A large “T” appears in the upper display until tuning is completed and final Cool parameters are entered for <b>PID Set 2</b> in the Tuning group.</p>

*Continued on next page*

## 5.16 Accutune™, Continued

**How “SP” Tuning works** “SP” Tuning will continually adjust the Gain or Proportional Band (P), Reset (I), and Rate (D) tuning constants in response to setpoint changes. SP Tune handles all Local and Computer Setpoint changes. It uses time domain analysis, and the rule based expert system techniques to identify the two most dominant process lags plus any dead time. It then automatically readjusts the PID parameters as necessary. It does this while controlling to setpoint in automatic (closed loop) control mode. These calculated PID values can be changed, if desired, by disabling SP Tune and entering different values. Tuning can be aborted by pushing **Manual** key to return to manual mode. Two criteria are available — “Normal” and “Fast” through configuration.

**Setpoint changes** During start-up, or whenever the setpoint changes beyond the “SP Change” value, SP Tune employs time domain analysis to tune the process at any desired setpoint without any prior initialization or process knowledge.

### Using SP tuning at Start-up

After “SP” has been enabled, use the procedure in Table 5-28 to use “SP” tuning at Start-up.

Table 5-28 Procedure for Using SP Tuning at Start-up

Step	Action
1	Put the controller into manual mode- <b>Manual/Auto</b> key.
2	Let the PV stabilize.
3	Adjust the Setpoint to the desired value.
4	Put the controller into automatic mode- <b>Manual/Auto</b> key.  The controller will switch to automatic mode and the process will start to move toward the setpoint and will line out with the proper tuning constants.  A large “T” appears on the left side of the upper display to indicate that (SP) tuning is in progress.

*Continued on next page*



## 5.16 Accutune™, Continued

### SP Tuning for Duplex (Heat/Cool)

“SP” tuning can be done for applications using Duplex (Heat/Cool) control.

### Configuring SP Tuning for Duplex (Heat/Cool)

To configure this item, refer to Section 3 - Configuration:

- Set Up Group “ACCUTUNE”
- Function Prompt “ACCUTUNE”
- Select “SP” (▲ or ▼)
- Enter the Setpoint Change Value, Function Prompt “SP CHANG”
- Verify the Process Gain Value to be 1.0, Function Prompt “KPG”
- Verify Criteria selected is “FAST”, Function Prompt “CRITERIA”

### Using SP tuning at Start-up for Duplex (Heat/Cool)

After “SP” has been enabled, use the procedure in Table 5-29 to use “SP” tuning at Start-up for Duplex (Heat/Cool) control.

Table 5-29 Procedure for Using SP Tuning at Start-up for Duplex

Step	Action
1	Put the controller into manual mode- <input type="button" value="Manual/Auto"/> key.
2	<p><b>Heat Zone:</b></p> <p>a. Adjust the output to a value ABOVE 50% and at least 5% lower than the normal Heating Setpoint value.</p> <p>b. Let the PV stabilize.</p> <p>c. Press the <input type="button" value="Manual/Auto"/> key to start tuning for Heat Zone.</p> <p>The controller will switch to automatic mode and the process will start to move toward the setpoint and will line out with the proper HEAT tuning constants.</p> <p>A large “T” appears on the left side of the upper display to indicate that (SP) tuning is in progress.</p> <p>When the “T” disappears, tuning is completed and final values are entered for PID Set 1 parameters in the Tuning group.</p>
3	<p><b>Cool Zone:</b></p> <p>a. Adjust the output to a value BELOW 50% and at least 5% above the normal Cooling Setpoint value.</p> <p>b. Let the PV stabilize.</p> <p>c. Press the <input type="button" value="Manual/Auto"/> key to start tuning for Cool Zone.</p> <p>The controller will switch to automatic mode and the process will start to move toward the setpoint and will line out with the proper COOL tuning constants.</p> <p>A large “T” appears on the left side of the upper display to indicate that (SP) tuning is in progress.</p> <p>When the “T” disappears, tuning is completed and final values are entered for PID Set 2 parameters in the Tuning group.</p>

Continued on next page

## 5.16 Accutune™, Continued

---

### SP tuning (after Start-up)

SP tune will occur whenever the controller is in automatic mode and a setpoint change occurs which is greater than the previously configured minimum setpoint change value.

The controller will delay using any setpoint changes for 30 seconds to enable it to calculate whether to “SP” tune or not. But, if the controller is toggled between LSP1 and LSP2 or if any other key (such as LOWER/DISPLAY) is pressed, the setpoint change is immediate.

A large “T” is displayed in the upper display whenever tuning is in progress. During this time, no changes to the configuration parameters, including the setpoint, are permitted.

---

### Aborting SP Tuning

If it is necessary to stop or abort the tuning:

- press the **Manual/Auto** key to return to Manual mode. This will cause an immediate abort of tuning.
  - Disable “SP” in the Accutune Set Up group at function prompt “ACCUTUNE”
- 

### Re-Tuning

The controller will evaluate current tuning as SP changes occur. When re-tuning is required, the controller operates in automatic mode and identifies new tuning constants.

At that point, the “T” disappears and tuning values are entered and used until re-tuning occurs again.

---

*Continued on next page*

## 5.16 Accutune™, Continued

### Error code accessing

When an error is detected in the Accutune process, the message “AT ABORT” will appear in the lower display.

In order to determine what is causing the error:

- Select “ACCUTUNE” Set Up Group
- Access function prompt “AT ERROR” for error prompt.

Table 5-30 lists the Accutune error codes that will be displayed in the **Upper Display** and their definitions.

Table 5-30 Accutune Error Code Definitions

Code	SP ADAPT	TUNE	Code Definition	Action to Take
NONE	X	X	NO ERRORS	None
OUTLIMIT	X		SP Adapt step is greater than high output limit or less than low output limit	<ul style="list-style-type: none"> <li>• Check the output limits under Set Up group prompt “CONTROL”, function prompts “OUTHILIM” and “OUTLOLIM” in <i>Section 3 - Configuration</i>.</li> <li>• Verify the Process Gain Value , Function Prompt “KPG”</li> </ul>
IDFAIL	X		Process Identification Failure	Try to SP tune again.
ABORT	X	X	<ul style="list-style-type: none"> <li>• Manual abort has occurred</li> <li>– Accutune will abort if the <b>MAN/AUTO</b> key is pressed during tuning</li> <li>• Automatic Abort has occurred</li> <li>– Accutune will automatically abort when a PV oscillation has been detected during “SP ADAPT”,</li> </ul>	Try to tuning again.
LOW PV*	X		Occurs during a SP ADAPT when the output step calculated is too low to produce a PV value close to the desired setpoint.	NONE - After a period of about 5 minutes, the “SPADAPT” will be retried automatically with a larger output step.
RUNNING	X		Informational prompt indicating that Accutune is still active It does not affect the keyboard operation.	None
DONE		X	Indicates that Demand tuning is complete.	None



## Section 6 – Setpoint Ramp/Soak Programming Option

### 6.1 Overview

#### What is programming?

The term “programming” is used here to identify the process for selecting and entering the individual ramp and soak segment data needed to generate the required setpoint versus time profile (also called a program).

A segment is a ramp or soak function which together make up a setpoint program. Setpoint Ramp/Soak Programming lets you configure 6 ramp and 6 soak segments to be stored for use as one program or several small programs. You designate the beginning and end segments to determine where the program is to start and stop.

#### Review program data and configuration

While the procedure for programming is straightforward, and aided by prompts, we suggest that you read “*Program Contents*” in this section as well as “*Section 3 - Configuration*” before doing the setpoint programming.

#### Fill out the worksheet

Draw a Ramp/Soak Profile on the worksheet provided and fill in the information for each segment. This will give you a record of how the program was developed.

#### What’s in this section

The table below lists the topics that are covered in this section.

	Topic	See Page
6.1	Overview	123
6.2	Program Contents	124
6.3	Drawing a Ramp/Soak Profile	126
	Example	126
	Program Record Sheet	127
6.4	Entering the Setpoint Program Data	128
	Introduction	128
	General Procedure	128
	Alarms on Setpoint Programs	128
	Prompt Hierarchy and Selections	129
6.5	Run/Monitor the Program	131
	Introduction	131
	Run/Monitor Functions	131
	Set the Local Setpoint	131
	Run State	131
	Hold State	131
	External Hold	131
	External Program Reset	132
	Viewing the Present Segment Number and Time	132
	Viewing cycles	132
	End Program	133
	Power-up State	133

## 6.2 Program Contents

---

<b>What you will configure</b>	Basically, you will configure all the data that is relevant to each ramp and soak segment for a given setpoint versus time profile. The controller will prompt you through the sequence of segments and associated functions.
<b>Ramp segments</b>	<p>A ramp segment is the time it will take to change the setpoint to the next setpoint value in the program.</p> <p>Ramps are odd number segments. Segment #1 will be the initial ramp time. Ramp time is determined in either:</p> <p>TIME* - Hours:Minutes      Range = 0-99hrs:59 min.</p> <p>or</p> <p>RATE* - EU/MIN or EU/HR      Range = 0 to 999</p> <p>* This selection of time or rate is made at prompt "RAMP UNIT".</p> <p>Set this prompt before entering any Ramp.</p> <p><b>ATTENTION</b> When Ramp Unit is configured for TIME, entering "0" will imply an immediate step change in setpoint to the next soak.</p>
<b>Soak segments</b>	<p>A soak segment is a combination of soak setpoint (value) and a soak duration (time).</p> <p>Soaks are even number segments.</p> <p>Segment 2 will be the initial soak value and soak time.</p> <p>The soak setpoint range value must be within the setpoint high and low range limits in engineering units.</p> <p>SOAK TIME is the duration of the soak and is determined in:</p> <p>TIME - Hours:Minutes      RANGE = 0-99hrs:59 min.</p>
<b>Start segment number</b>	This designates the number of the first segment. Range = 1 to 11
<b>End segment number</b>	This designates the number of the last segment. It must be a soak segment (even number). Range = 2 to 12
<b>Recycle number</b>	This number allows the program to recycle a specified number of times from beginning to end. Range = 0 to 99

---

*Continued on next page*

## 6.2 Program Contents, Continued

---

### Guaranteed Soak

Each soak segment can have a deviation value of from 0 to  $\pm 99$  which guarantees the value for that segment.

**Guaranteed** soak segment values  $>0$  guarantee that the segments process variable is within the  $\pm$  deviation for the configured soak time. Whenever the  $\pm$  deviation is exceeded, soak timing is frozen.

There are no guaranteed soaks whenever the deviation value is configured to 0, i.e., soak segments start timing soak duration as soon as the soak setpoint is first reached, regardless of where the process variable remains relative to the soak segment.

The value is the number in engineering units, above or below the setpoint, outside of which the timer halts. The range is 0 to +99.00.

The decimal location corresponds to input 1 decimal selection.

---

### Program state

This selection determines the program state after completion.

The selections are:

DISABL = Program is disabled

HOLD = Program on hold

---

### Program termination state

This function determines the status of the controller upon completion.

The selections are:

LAST SP = controls to last setpoint and last control mode

F SAFE = Manual mode, Failsafe Output

**ATTENTION** If power is lost during a program, upon power-up the controller will be in hold and the setpoint value will be the setpoint value prior to the beginning of the setpoint program. The program is placed in hold at the beginning of the first segment in the program.

---

### Ramp unit

This determines the engineering units for the ramp segments.

The selections are:

TIME = Hours:Minutes

RATE = EU/MIN or EU/HR

**ATTENTION** This selection cannot be changed while a program is in operation.

---

### ATTENTION

Accutune will not function during Setpoint programming.

---


## 6.3 Drawing a Ramp/Soak Profile

### Ramp/Soak Profile example

Before you do the actual configuration, we recommend that you draw a Ramp/Soak profile in the space provided on the "Program Record Sheet" (Figure 6-2) and fill in the associated information.

An example of a Ramp/Soak Profile is shown in Figure 6-1.

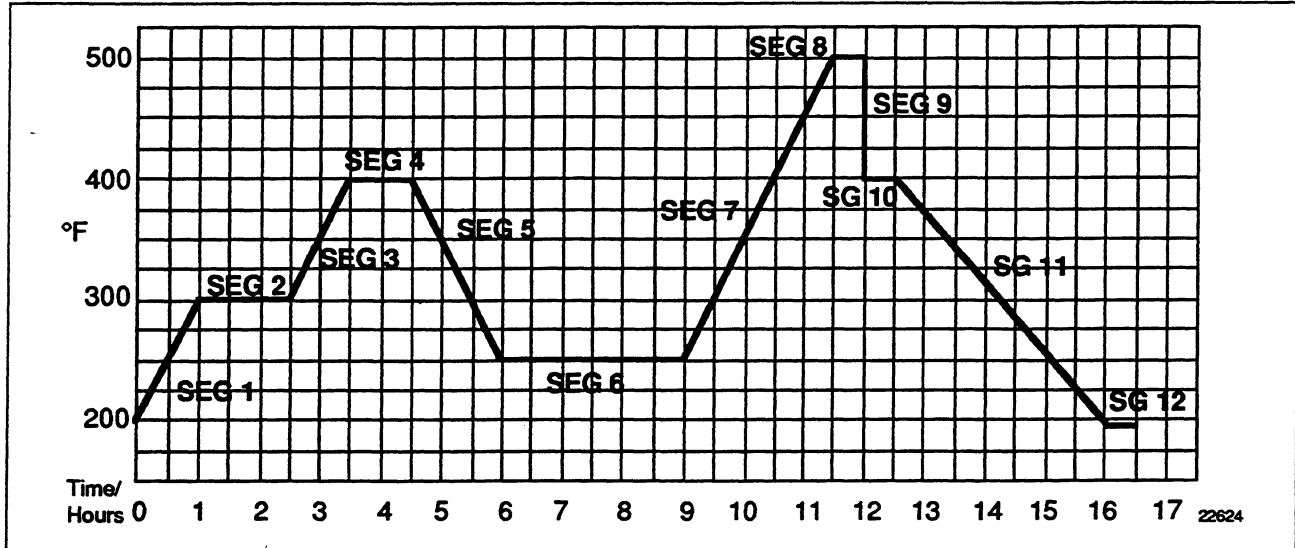Figure 6-1 Ramp/Soak Profile Example



Prompt	Function	Segment	Value	Prompt	Function	Segment	Value
STRT SEG	Start Seg.		1	SEG7RAMP	Ramp Time	7	2hrs:30min.
END SEG	End Seg.		12	SEG8 SP	Soak SP	8	500
RECYCLES	Number of Recycles		2	SEG8TIME	Soak Time	8	0hr.:30 min.
SOAK DEV	Deviation Value		0	SEG9RAMP	Ramp Time	9	0
SEG1RAMP	Ramp Time	1	1 hr.	SG10 SP	Soak SP	10	400
SEG2 SP	Soak SP	2	300	SG10 TIME	Soak Time	10	0hr.:30 min.
SEG2TIME	Soak Time	2	1hr.:30 min.	SG11RAMP	Ramp Time	11	3hrs:30min.
SEG3RAMP	Ramp Time	3	1hr.	SG12 SP	Soak SP	12	200
SEG4 SP	Soak SP	4	400	SG12TIME	Soak Time	12	0hr.:30 min.
SEG4TIME	Soak Time	4	1 hr.	STATE	Controller State at end		HOLD
SEG5RAMP	Ramp Time	5	1hr.:30 min.	PROG END	Controller Status		LAST SP
SEG6 SP	Soak SP	6	250	RAMP UNIT	Engr. Unit for Ramp		TIME
SEG6TIME	Soak Time	6	3hrs.:0min.				

Continued on next page



## 6.3 Drawing a Ramp/Soak Profile, Continued

**Program Record Sheet** Draw your ramp/soak profile on the record sheet shown in Figure 6-2 and fill in the associated information in the blocks provided. This will give you a permanent record of your program and will assist you when entering the Setpoint data.

Figure 6-2 Program Record Sheet

Prompt	Function	Segment	Value	Prompt	Function	Segment	Value
STRT SEG	Start Seg.			SEG7RAMP	Ramp Time	7	
END SEG	End Seg.			SEG8 SP	Soak SP	8	
RECYCLES	Number of Recycles			SEG8TIME	Soak Time	8	
SOAK DEV	Deviation Value			SEG9RAMP	Ramp Time	9	
SEG1RAMP	Ramp Time	1		SG10 SP	Soak SP	10	
SEG2 SP	Soak SP	2		SG10 TIME	Soak Time	10	
SEG2TIME	Soak Time	2		SG11RAMP	Ramp Time	11	
SEG3RAMP	Ramp Time	3		SG12 SP	Soak SP	12	
SEG4 SP	Soak SP	4		SG12TIME	Soak Time	12	
SEG4TIME	Soak Time	4		STATE	Program Controller State		
SEG5RAMP	Ramp Time	5		PROG END	Controller Status		
SEG6 SP	Soak SP	6		RAMP UNIT	Engr. Unit for Ramp		
SEG6TIME	Soak Time	6					






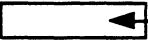




## 6.4 Entering the Setpoint Program Data

### Introduction

The procedure listed in table 6-1 tells you what keys to press and what prompts you will see when entering the setpoint program data. Follow the prompt hierarchy listed in table 6-2 when selecting the functions for setpoint programming.

**ATTENTION** Make sure SP RAMP and SP RATE are disabled first.

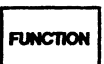Table 6-1 Setpoint Program Data Entry Procedure

Step	Action	Press	Result
1	Select SP PROG Group	 until you see	Upper Display  Lower Display 
2	Select the functions		This accesses the function prompts and enables Setpoint Programming.  Upper Display  ← The current value for each prompt is shown  Lower Display  ← The individual function prompts within the setpoint program group are shown.  Successive presses of the [FUNCTION] key will sequentially display all the functions and their values or selections. Follow the prompt hierarchy shown in table 6-2.
3	Change the value or selection of a function prompt	 or 	This changes the value or selection in the upper display. If the display blinks, you are trying to select an unacceptable value.
4	Enter Value or selection into memory		This enters the value or selection and goes to another prompt.  Repeat steps 3 and 4 for each function you want to change.
5	Exit configuration		This exits from the configuration mode.

### Alarms on the Setpoint Program

You can configure an event to go ON or OFF at the beginning or end of any segment. Refer to *Section 3 - Configuration* under "Alarms Parameters Group" for details.

*Continued on next page*

## 6.4 Entering the Setpoint Program Data, Continued

### Prompt Hierarchy

Table 6-2 lists all the function prompts for Setpoint Program data configuration in the order of their appearance.

Follow the procedure in table 6-1 to transfer the data from your setpoint Ramp/Soak profile into the controller.

All parameters may be changed while the program is disabled or in HOLD.

Table 6-2 Prompt Hierarchy and Available Selections

Prompt	Definition	Value or Selection (use ▲ or ▼)
<b>SP RAMP</b>	Setpoint Ramp selection	<i>Selections:</i> DISABLE <b>SP RAMP must be disabled to allow Setpoint Programming.</b>
<b>SP RATE</b>	Setpoint Rate of Change	<i>Selections:</i> DISABLE <b>SP RATE must be disabled to allow Setpoint Programming.</b>
<b>SP PROG</b>	Setpoint Ramp/Soak Programming	<i>Selections:</i> ENABLE DISABLE <b>SP PROG must be enabled to view the remaining prompts.</b>
<b>STRT SEG</b>	Start Segment Number	<i>Enter Value:</i> 1 to 11
<b>END SEG</b>	End Segment Number	<i>Enter Value:</i> 2 to 12 Always end in a soak Segment (2,4,.....12)
<b>RECYCLES</b>	Number of Program Recycles	<i>Enter Value:</i> 0 to 99 recycles
<b>SOAK DEV</b>	Guaranteed Soak Deviation Value	<i>Enter Value:</i> 0 to +99.00 The number selected will be 0 to 99± from setpoint.
<b>SEG1RAMP</b> or <b>SEG1RATE</b>	Segment #1 Ramp Time Segment #1 Ramp Rate	<i>Enter Value:</i> Ramp Time = 0-99hrs:0-59min, or Ramp Rate = Engineering units/min or Engineering units/hr <b>Select TIME, EU/MIN, or EU/HR at prompt "RAMP UNIT".</b> <b>All ramps will use the same selection.</b>
<b>SEG2 SP</b>	Segment #2 Soak Setpoint Value	<i>Enter Value:</i> Within the Setpoint limits
<b>SEG2TIME</b>	Segment #2 Soak Duration	<i>Enter Value:</i> 0-99hrs:0-59min
<b>SEG3RAMP</b> or <b>SEG3RATE</b>	Segment #3 Ramp Time Segment #3 Ramp Rate	<i>Enter Value:</i> Ramp Time = 0-99hrs:0-59min, or Ramp Rate = EU/MIN or EU/HR
<b>SEG4 SP</b>	Segment #4 Soak Setpoint Value	<i>Enter Value:</i> Within the Setpoint limits
<b>SEG4TIME</b>	Segment #4 Soak Duration	<i>Enter Value:</i> 0-99hrs:0-59min

Continued on next page

## 6.4 Entering the Setpoint Program Data, Continued

Prompt Hierarchy  
(continued)

Table 6-2 Prompt Hierarchy and Available Selections, continued

Prompt	Definition	Value or Selection (use ▲ or ▼)
<b>SEG5RAMP</b> or <b>SEG5RATE</b>	Segment #5 Ramp Time Segment #5 Ramp Rate	<i>Enter Value:</i> Ramp Time = 0-99hrs:0-59min, or Ramp Rate = EU/MIN or EU/HR
<b>SEG6 SP</b>	Segment #6 Soak Setpoint Value	<i>Enter Value:</i> Within the Setpoint limits
<b>SEG6TIME</b>	Segment #6 Soak Duration	<i>Enter Value:</i> 0-99hrs:0-59min
<b>SEG7RAMP</b> or <b>SEG7RATE</b>	Segment #7 Ramp Time Segment #7 Ramp Rate	<i>Enter Value:</i> Ramp Time = 0-99hrs:0-59min, or Ramp Rate = EU/MIN or EU/HR
<b>SEG8 SP</b>	Segment #8 Soak Setpoint Value	<i>Enter Value:</i> Within the Setpoint limits
<b>SEG8TIME</b>	Segment #8 Soak Duration	<i>Enter Value:</i> 0-99hrs:0-59min
<b>SEG9RAMP</b> or <b>SEG9RATE</b>	Segment #9 Ramp Time Segment #9 Ramp Rate	<i>Enter Value:</i> Ramp Time = 0-99hrs:0-59min, or Ramp Rate = EU/MIN or EU/HR
<b>SG10 SP</b>	Segment #10 Soak Setpoint Value	<i>Enter Value:</i> Within the Setpoint limits
<b>SG10TIME</b>	Segment #10 Soak Duration	<i>Enter Value:</i> 0-99hrs:0-59min
<b>SG11RAMP</b> or <b>SG11RATE</b>	Segment #11 Ramp Time Segment #11 Ramp Rate	<i>Enter Value:</i> Ramp Time = 0-99hrs:0-59min, or Ramp Rate = EU/MIN or EU/HR
<b>SG12 SP</b>	Segment #12 Soak Setpoint Value	<i>Enter Value:</i> Within the Setpoint limits
<b>SG12TIME</b>	Segment #12 Soak Duration	<i>Enter Value:</i> 0-99hrs:0-59min
<b>STATE</b>	Program state at program end	<i>Selections:</i> DISABLE HOLD(hold mode)
<b>PROG END</b>	Program Termination State	<i>Selections:</i> LAST SP - Hold at last setpoint in the program F SAFE - Manual mode/Failsafe output
<b>RAMPUNIT</b>	Engineering units for ramp segments	<i>Selections:</i> TIME EU/MIN EU/HR

## 6.5 Run/Monitor the Program


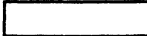



### Introduction

Make sure all the “SP PROG” function prompts under the Set Up group “SP RAMP” have been configured with the required data. An “H” will appear in the upper display indicating that the program is in the HOLD state.

### Run/Monitor functions

Table 6-3 lists all the functions required to run and monitor the program.

Table 6-3 Run/Monitor Functions





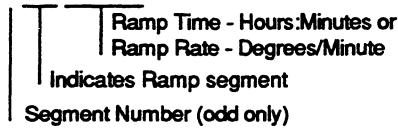
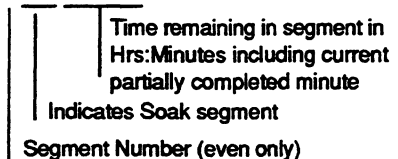

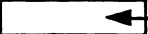
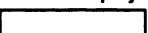

Function	Press	Result
Set the Local Setpoint		You will see Upper Display  Lower Display  <b>Local Setpoint Value</b>
	▲ or ▼	To set the Local Setpoint value to where you want the program to start out.
Run State		Initiates the setpoint program. An “R” appears in the upper display indicating that the program is running.
Hold State		Holds the setpoint program. An “H” appears in the upper display indicating that the program is in the HOLD state. The setpoint holds at the current setpoint.
External Hold		If Remote Switching (Digital Input Option) is present on your controller, contact closure places the controller in the HOLD state, if the setpoint program is running. The “H” in the upper display will blink. <b>ATTENTION</b> The keyboard takes priority over external switch for the RUN/HOLD function. Contact reopening runs program.
Changing a Segment while in Hold	▲ or ▼	These keys will operate and allow you to change the segment number while in HOLD. If a different segment is selected, it will be started at the beginning when placed in RUN. If the original segment is brought back, it will continue from the point placed in HOLD. NOTE: changing a segment number may affect the alarms/events.

*Continued on next page*

## 6.5 Run/Monitor the Program, Continued

Run/Monitor functions  
(continued)

Table 6-3 Run/Monitor Functions, continued

Function	Press	Result
External Program Reset		If Remote Switching (Digital Input Option) is present on your controller, contact closure resets the SP Program back to the start of the first segment. Program cycle number is not affected. Reopening the contact has no effect.
		restarts the Setpoint Program
Viewing the present ramp or soak segment number and time	 until you see	<p>Upper Display  "R" and the PV value</p> <p>Lower Display </p> <p>For Ramp segments: # RA XX.XX   Ramp Time - Hours:Minutes or  Ramp Rate - Degrees/Minute  Indicates Ramp segment  Segment Number (odd only)</p> <p>For Soak segments: # SK XX.XX   Time remaining in segment in  Hrs:Minutes including current  partially completed minute  Indicates Soak segment  Segment Number (even only)</p>
Viewing the number of cycles left in the program	 until you see	<p>Upper Display  "R" and the PV value</p> <p>Lower Display </p> <p><b>RECYC XX</b>    Remaining Cycles 0 to 99  This number includes the current partially completed cycle.</p>

Continued on next page

## 6.5 Run/Monitor the Program, Continued

### Run/Monitor functions (continued)

Table 6-3 Run/Monitor Functions, continued

Function	Press	Result
End Program		<p>When the final segment is completed, the "R" in the upper display either changes to "H" if configured for HOLD state, or disappears if configured for disable of setpoint programming.</p> <p>The controller operates at the last setpoint in the program in automatic or will be in manual mode at the failsafe output.</p>

### Power-up state

The program will be placed in HOLD mode at the beginning of the program at the local Setpoint value prior to the beginning of the program.





## Section 7 – Input Calibration

### 7.1 Overview

#### Introduction

This section describes the field calibration procedures for Input 1 and Input 2.

Every UDC 3000 controller contains all input actuation ranges fully factory calibrated and ready for configuration to range by the user.

However these procedures can be implemented if the factory calibration of the desired range is not within specifications.

Note that the field calibration will be lost if a change in input type configuration is implemented at a later time. The original factory calibration data remains available for later use after a field calibration is done.

#### What's in this section

This section contains the following topics:

	Topic	See Page
7.1	Overview	135
7.2	Minimum and maximum range values	136
7.3	Preliminary Information <ul style="list-style-type: none"><li>• Disconnect the field wiring</li><li>• Equipment needed</li></ul>	137 137 138
7.4	Input 1 Set Up Wiring <ul style="list-style-type: none"><li>• Thermocouple inputs using an ice bath</li><li>• Thermocouple inputs using a precision resistor</li><li>• RTD (Resistance Thermometer Device) inputs</li><li>• Radiamatic, Millivolts, or Volts except 0-10 Volts inputs</li><li>• 0 to 10 Volts input</li><li>• 4-20 Milliamps input</li></ul>	139 139 140 141 142 143 144
7.5	Input 1 Calibration Procedure	145
7.6	Input 2 Set Up Wiring <ul style="list-style-type: none"><li>• 4-20 Milliamps input</li><li>• 1 to 5 Volts input</li></ul>	147 147 148
7.7	Input 2 Calibration Procedure	149



### **WARNING—SHOCK HAZARD**



**INPUT CALIBRATION MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE CALIBRATION.**

## 7.2 Minimum and Maximum Range Values

**Select the range values** You should calibrate the controller for the minimum (0%) and Maximum (100%) range values of your particular sensor.  
 If you have a two input controller, calibrate each input separately.  
 Select the Voltage or Resistance equivalent for 0% and 100% range values from Table 7-1. Use these value when calibrating your controller.

Table 7-1 Voltage and Resistance Equivalents for 0% and 100% Range Values

Sensor Type	PV Input Range		Range Values	
	°F	°C	0%	100%
B Thermocouple	0 to 3300	-18 to 1815	-0.100 mV	13.763 mV
E Thermocouple	-454 to 1832	-270 to 1000	-9.835 mV	76.358 mV
E (low) Thermocouple	-200 to 1100	-129 to 593	-6.471 mV	44.547 mV
J Thermocouple	0 to 1600	-18 to 871	-0.885 mV	50.059 mV
J (low) Thermocouple	20 to 770	-7 to 410	-0.334 mV	22.397 mV
K Thermocouple	0 to 2400	-18 to 1316	-0.692 mV	52.939 mV
K (low) Thermocouple	-20 to 1000	-29 to 538	-1.114 mV	22.251 mV
NINIMoly T/C	32 to 2500	0 to 1371	-0.001 mV	71.330 mV
NINIMoly (low) T/C	32 to 1260	0 to 682	-0.001 mV	31.820 mV
Nicrosil Nislil T/C	0 to 2372	-18 to 1300	-0.461 mV	47.502 mV
R Thermocouple	0 to 3100	-18 to 1704	-0.089 mV	20.275 mV
S Thermocouple	0 to 3100	-18 to 1704	-0.092 mV	17.993 mV
T Thermocouple	-300 to 700	-184 to 371	-5.341 mV	19.095 mV
T (low) Thermocouple	-200 to 500	-129 to 260	-4.149 mV	12.572 mV
W5W26 T/C	0 to 4200	-18 to 2316	-0.234 mV	37.066 mV
W5W26 (low) T/C	0 to 2240	-18 to 1227	-0.234 mV	22.277 mV
RTD (IEC=0.00385)				
100 Ohms	-300 to 1200	-184 to 649	25.18 Ω	329.16 Ω
100 Ohms (low)	0 to 300	-18 to 149	93.03 Ω	156.90 Ω
500 Ohms	-300 to 1200	-184 to 649	125.90 Ω	1645.80 Ω
Radiamatic (RH)	1400 to 3400	760 to 1871	0.99 mV	57.12 mV
Milliamps	4 to 20 mA		4 mA	20 mA
Millivolts	0 to 10 mV		0 mV	10 mV
	10 to 50 mV		10 mV	50 mV
Volts	1 to 5 Volts		1 Volt	5 Volts
	0 to 10 Volts		0 Volts	10 Volts

## 7.3 Preliminary Information

### Calibration steps

Use the following steps when calibrating an input.


Step	Action
1	Find the minimum and maximum range values for your PV input range from Table 7-1.
2	Disconnect the field wiring and find out what equipment you will need to calibrate. DO NOT remove external resistor assemblies (if present).
3	Wire the calibrating device to your controller according to the Set Up wiring instructions for your particular input.
4	Follow the calibration procedure given for Input #1 or Input #2.

### Disconnect the field wiring

Depending on which input (#1 or #2) you are going to calibrate, tag and disconnect any field wiring connected to the input terminals on the rear of the controller.

Figure 7-1 shows the wiring terminal designations for Input #1 and Input #2.

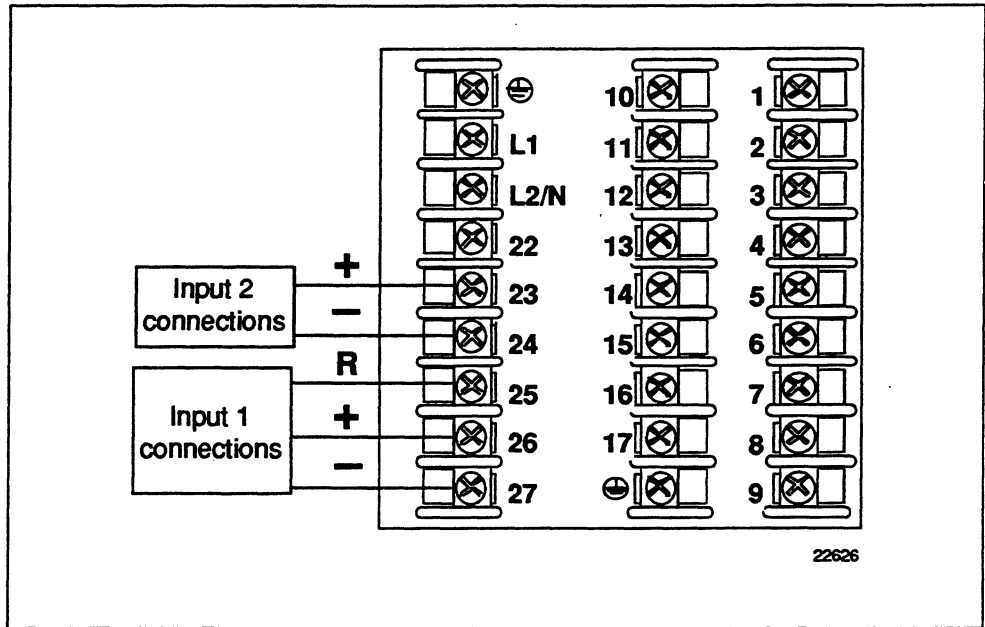Figure 7-1 Input #1 and #2 Wiring Terminals



*Continued on next page*

## 7.3 Preliminary Information, Continued

### Equipment needed

Table 7-2 lists the equipment you will need to calibrate the specific types of inputs that are listed in the table. You will need a screwdriver to connect these devices to your controller.

Table 7-2 Equipment Needed

Type of Input	Equipment Needed
<i>Thermocouple Inputs (Ice Bath)</i>	<ul style="list-style-type: none"> <li>• A calibrating device with <math>\pm 0.02\%</math> accuracy for use as a signal source such as a millivolt source.</li> <li>• Thermocouple extension wire that corresponds with the type of thermocouple that will be used with the controller input.</li> <li>• Two insulated copper leads for connecting the thermocouple extension wire from the ice baths to the precision calibrator.</li> <li>• Two containers of crushed ice.</li> </ul>
<i>Thermocouple Inputs (Precision Resistor)</i>	<ul style="list-style-type: none"> <li>• A calibrating device with <math>\pm 0.02\%</math> accuracy for use as a signal source such as a millivolt source.</li> <li>• Two insulated copper leads for connecting the calibrator to the controller.</li> <li>• A precision 500 ohm resistor <math>\pm 0.1\%</math> connected across input #1 terminals 25(R) and 27(-).</li> </ul>
<i>RTD (Resistance Thermometer Device)</i>	<ul style="list-style-type: none"> <li>• A decade box, with <math>\pm 0.02\%</math> accuracy, capable of providing stepped resistance values over a minimum range of 0 to 1400 Ohms with a resolution of 0.1 ohm.</li> <li>• Three insulated copper leads for connecting the decade box to the controller.</li> </ul>
<i>Milliampere, Millivolt, Volts, and Radiomatic</i>	<ul style="list-style-type: none"> <li>• A calibrating device with <math>\pm 0.02\%</math> accuracy for use as a signal source.</li> <li>• Two insulated copper leads for connecting the calibrator to the controller.</li> <li>• Place current source at zero before switching ON.</li> <li>• Do not switch current sources OFF/ON while connected to the UDC 3000 input.</li> </ul>

## 7.4 Input #1 Set Up Wiring


### Thermocouple inputs using an ice bath

Refer to Figure 7-2 and wire the controller according to the procedure given in Table 7-3.

Table 7-3 Set Up Wiring Procedure for Thermocouple Inputs Using An Ice Bath

Step	Action
1	Connect the copper leads to the calibrator.
2	Connect a length of thermocouple extension wire to the end of each copper lead and insert the junction points into the ice bath.
3	Connect the thermocouple extension wires to the terminals for Input #1. See Figure 7-2.

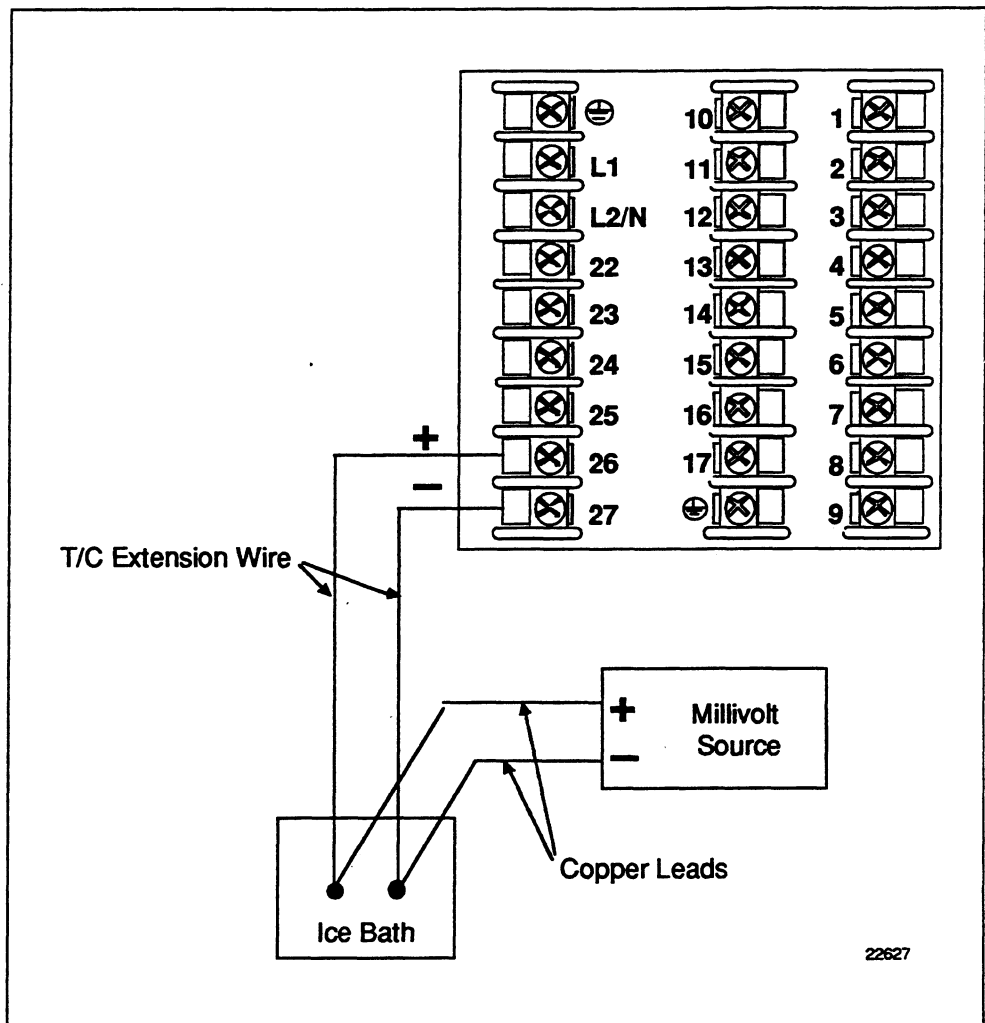Figure 7-2 Wiring Connections for Thermocouple Inputs Using an Ice Bath



*Continued on next page*

## 7.4 Input #1 Set Up Wiring, Continued


**Thermocouple inputs using a precision resistor**

Refer to Figure 7-3 and wire the controller according to the procedure given in Table 7-4.

**Table 7-4 Set Up Wiring Procedure for Thermocouple Inputs Using a Precision Resistor**

Step	Action
1	Connect the copper leads to the calibrator.
2	Disconnect the cold junction resistor.
3	Install a 500 Ohm precision resistor across terminal 25 (R) and terminal 27 (-). See Figure 7-3.
4	Subtract the millivolt value for 77°F (25°C) from the zero and span value for your range (see Table 7-1 for zero and span values) and use the adjusted value when calibrating.

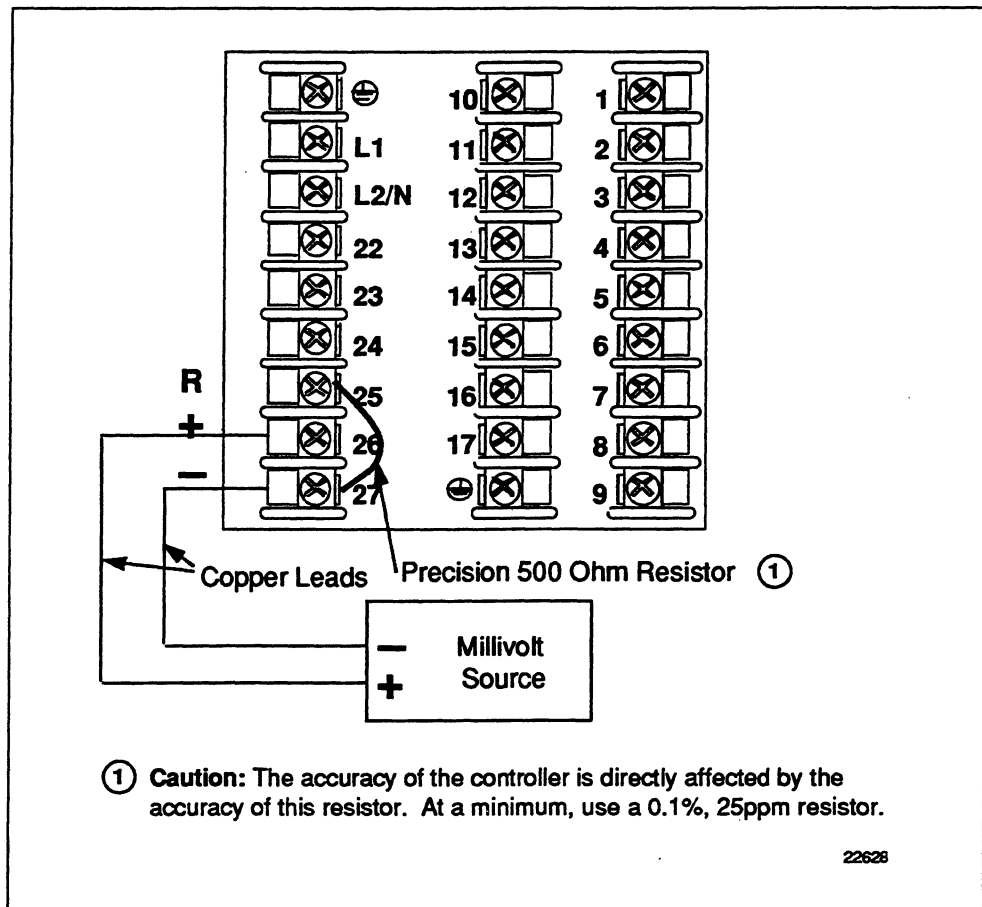**Figure 7-3 Wiring Connections for Thermocouple Inputs Using a Precision Resistor**




*Continued on next page*

## 7.4 Input #1 Set Up Wiring, Continued

### RTD Inputs

Use the copper leads and connect the calibrator to the rear terminals of Input #1. See Figure 7-4.

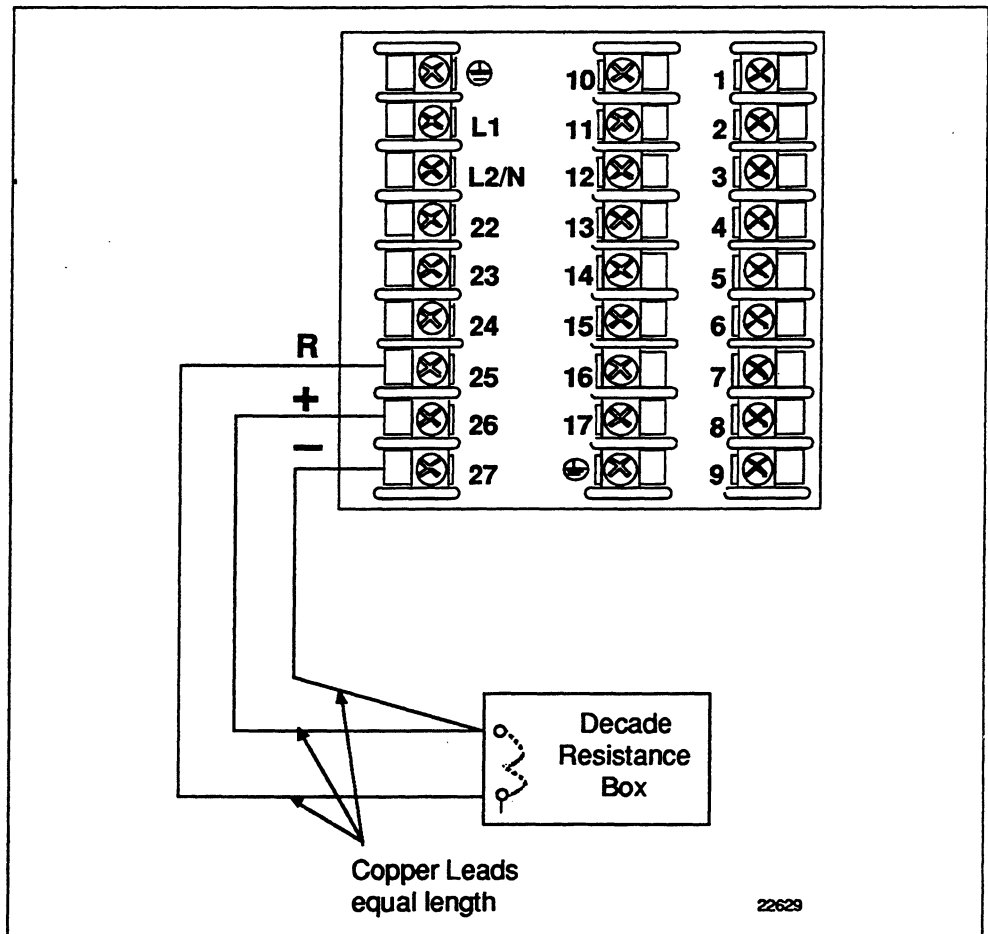Figure 7-4 Wiring Connections for RTD (Resistance Thermometer Device)




*Continued on next page*

## 7.4 Input #1 Set Up Wiring, *Continued*

**Radiomatic, Millivolts, or Volts (except 0 to 10 Volts) Inputs**

Use the copper leads and connect the calibrator to the rear terminals of Input #1. See Figure 7-5.

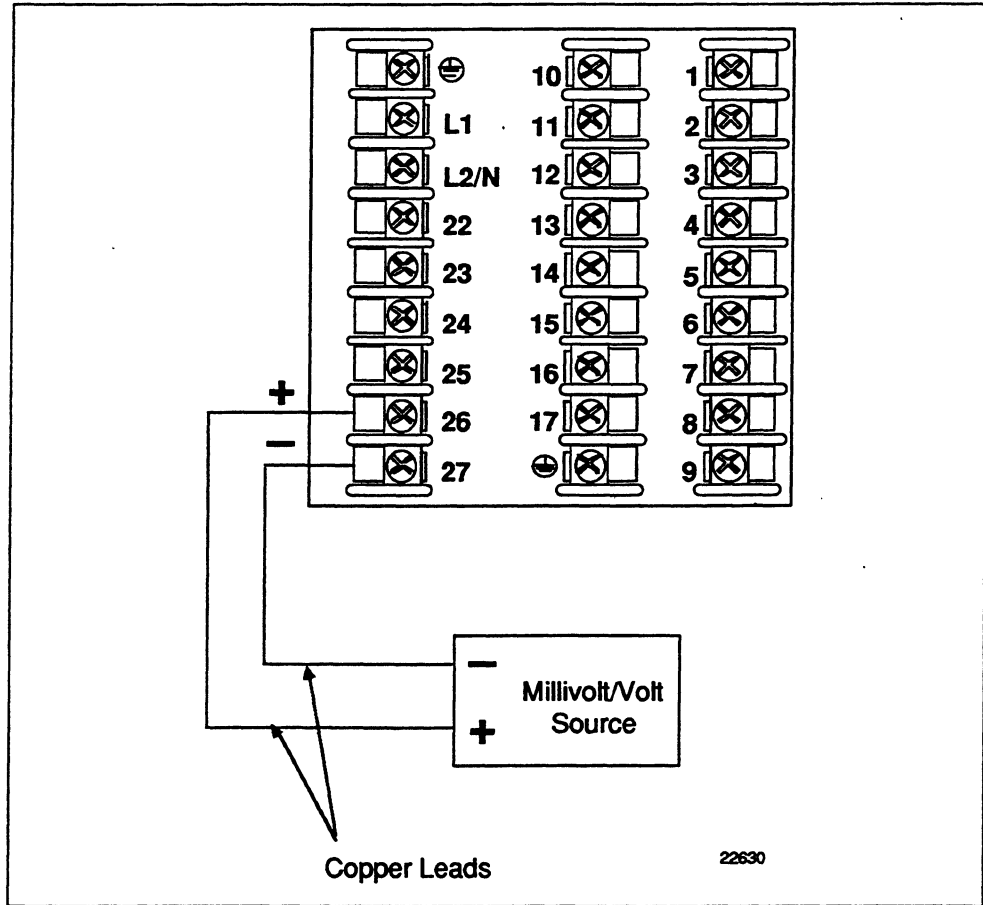Figure 7-5 Wiring Connections for Radiomatic, Millivolts, or Volts (except 0 to 10 Volts)



*Continued on next page*




## 7.4 Input #1 Set Up Wiring, Continued

### 0 to 10 Volt Inputs

Use the copper leads and connect the calibrator to the rear terminals of Input #1. See Figure 7-6.

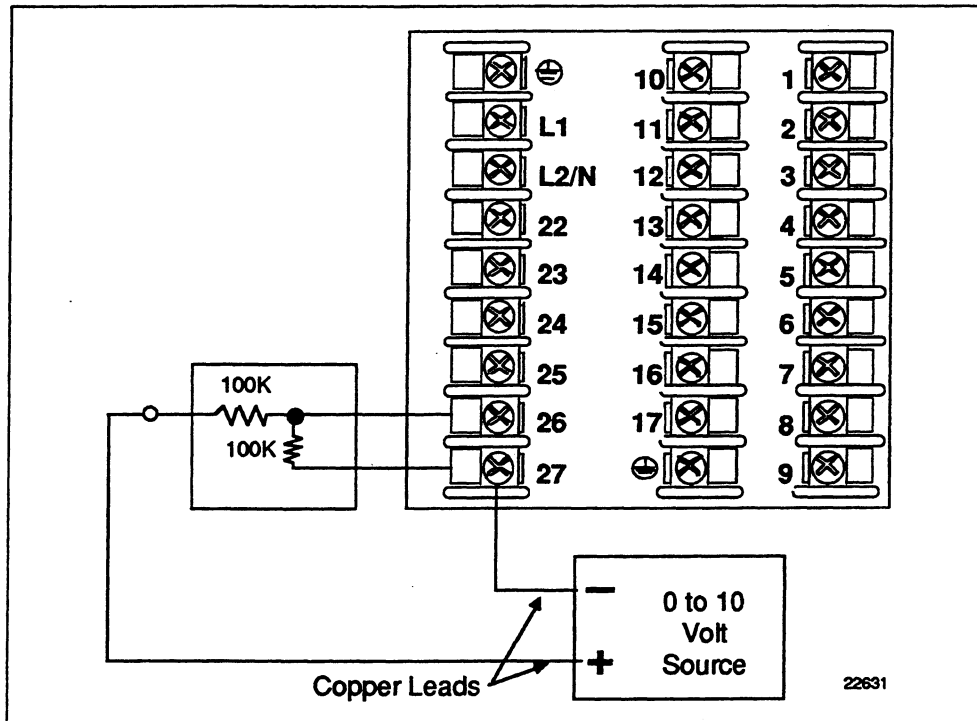Figure 7-6 Wiring Connections for 0 to 10 Volt inputs




*Continued on next page*

## 7.4 Input #1 Set Up Wiring, Continued

### 4 to 20 mA Inputs

Use the copper leads and connect the calibrator to the rear terminals of Input #1. See Figure 7-7.

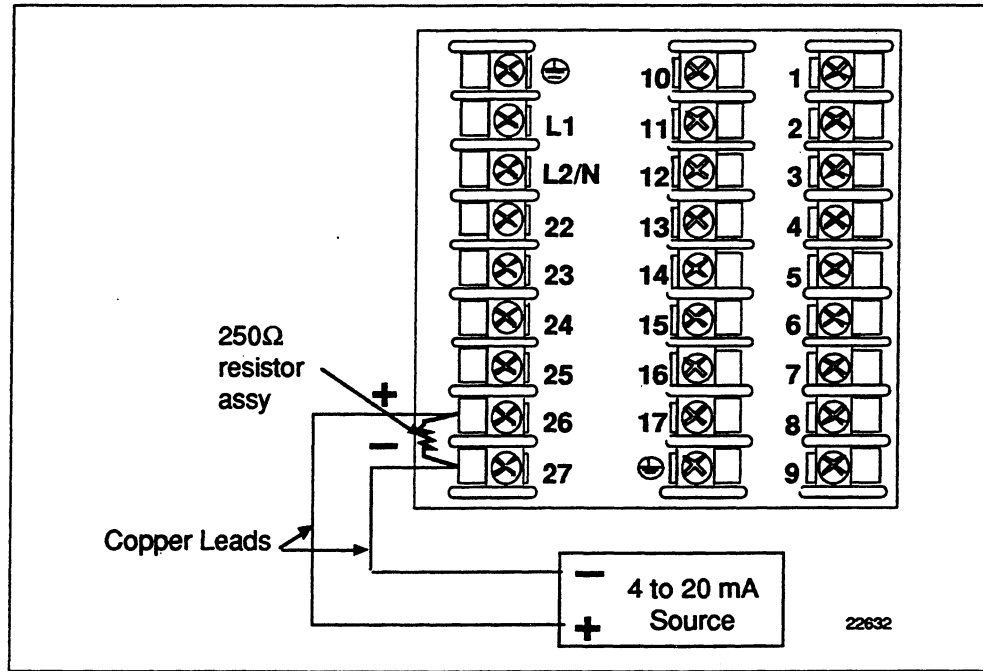Figure 7-7 Wiring Connections for 4 to 20 mA inputs



## 7.5 Input #1 Calibration Procedure

### Introduction

Apply power and allow the controller to warm up for 15 minutes before you calibrate.

Please read “*Set Up Wiring*” before beginning the procedure.













Make sure you have “LOCKOUT” set to “NONE.” See *Section 3 – Configuration*.

**CAUTION** For linear inputs, avoid step changes in inputs. Vary smoothly from initial value to final 100% value.

### Procedure

The Calibration procedure for Input #1 is listed in table 7-5.

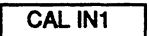



Table 7-5 Input #1 Calibration Procedure

Step	Description	Press	Action
1	Enter Calibration Mode	 until you see	Upper Display   Lower Display 
			You will see: Upper Display   Lower Display 
			The calibration sequence is enabled and you will see: Upper Display   Lower Display   At the completion of the sequence, the selection automatically reverts to disable.
2	Calibrate 0%		You will see: Upper Display   Lower Display   Adjust your calibration device to an output signal equal to the 0% range value for your particular input sensor. See Table 7-1 for Voltage or Resistance equivalents. Wait 30 seconds, then go to the next step.

*Continued on next page*

## 7.5 Input #1 Calibration Procedure, Continued

Table 7-5 Input #1 Calibration Procedure, continued


Step	Description	Press	Action						
3	Calibrate 100 %	<b>FUNCTION</b>	<p>You will see:</p> <p>Upper Display  </p> <p>Lower Display  </p> <p>Adjust your calibration device to an output signal equal to the 100% range value for your particular input sensor. See Table 7-1 for Voltage or Resistance equivalents.            Wait 30 seconds, and</p> <table border="1"> <thead> <tr> <th>If...</th> <th>Then...</th> </tr> </thead> <tbody> <tr> <td>you are calibrating a Thermocouple input</td> <td>Go to step 4</td> </tr> <tr> <td>you are calibrating other than a Thermocouple input</td> <td>Go to step 5</td> </tr> </tbody> </table>	If...	Then...	you are calibrating a Thermocouple input	Go to step 4	you are calibrating other than a Thermocouple input	Go to step 5
If...	Then...								
you are calibrating a Thermocouple input	Go to step 4								
you are calibrating other than a Thermocouple input	Go to step 5								
4	Check the Cold Junction Temperature <b>ATTENTION</b> The accuracy of the controller is directly affected by the accuracy of this value. Change this value only if the zero and span calibration procedures did not bring the controller within the specified accuracy requirements.	<b>FUNCTION</b>	<p>The calculations for zero and span are now stored and you will see:</p> <p>Upper Display   ← The cold junction temperature at the rear terminals</p> <p>Lower Display  </p> <p>The value in the upper display is in the tenths of a degree. It is the current reading of the temperature as measured at the thermocouple terminals and recognized by the controller. You can change this value, if it is in error, using the ▲ or ▼ key.</p> <p><b>ATTENTION</b> When calibrating T/C inputs using a precision resistor, calibrate the cold junction as 77°F (25°C).</p>						
5	Exit the Calibration Mode	<b>FUNCTION</b>	The controller will store the calibration constants and exit calibration mode.						

## 7.6 Input #2 Set Up Wiring

### 4 to 20 mA Input

Use the copper leads and connect the calibrator to the rear terminals of Input #2. See Figure 7-8.

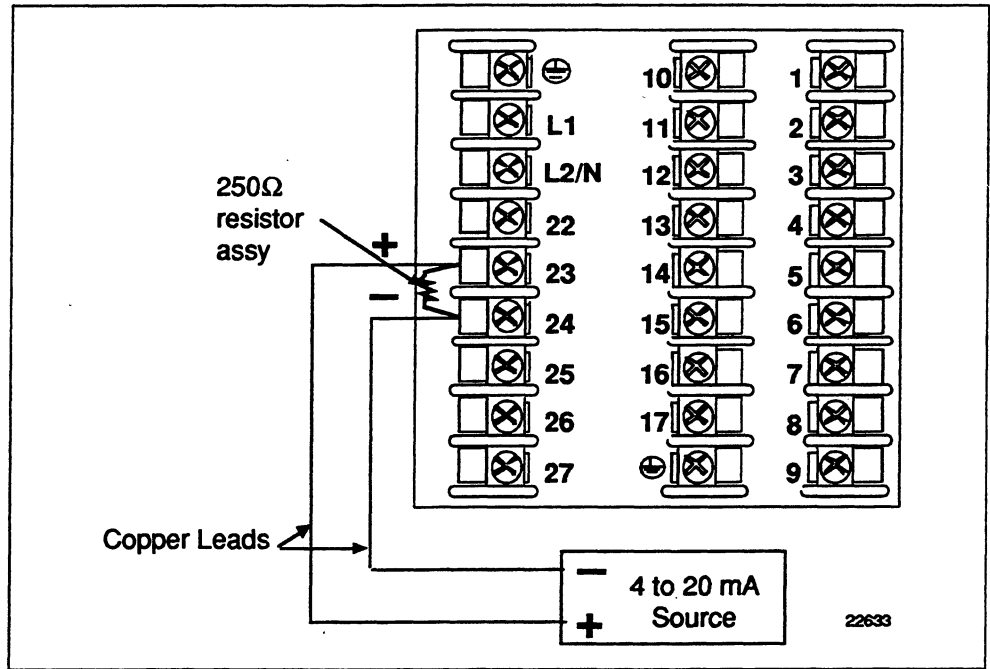Figure 7-8 Wiring Connections for 4 to 20 mA input – Input #2




*Continued on next page*

## 7.6 Input #2 Set Up Wiring, Continued

### 1 to 5 Volt Inputs

Use the copper leads and connect the calibrator to the rear terminals of Input #2. See Figure 7-9.

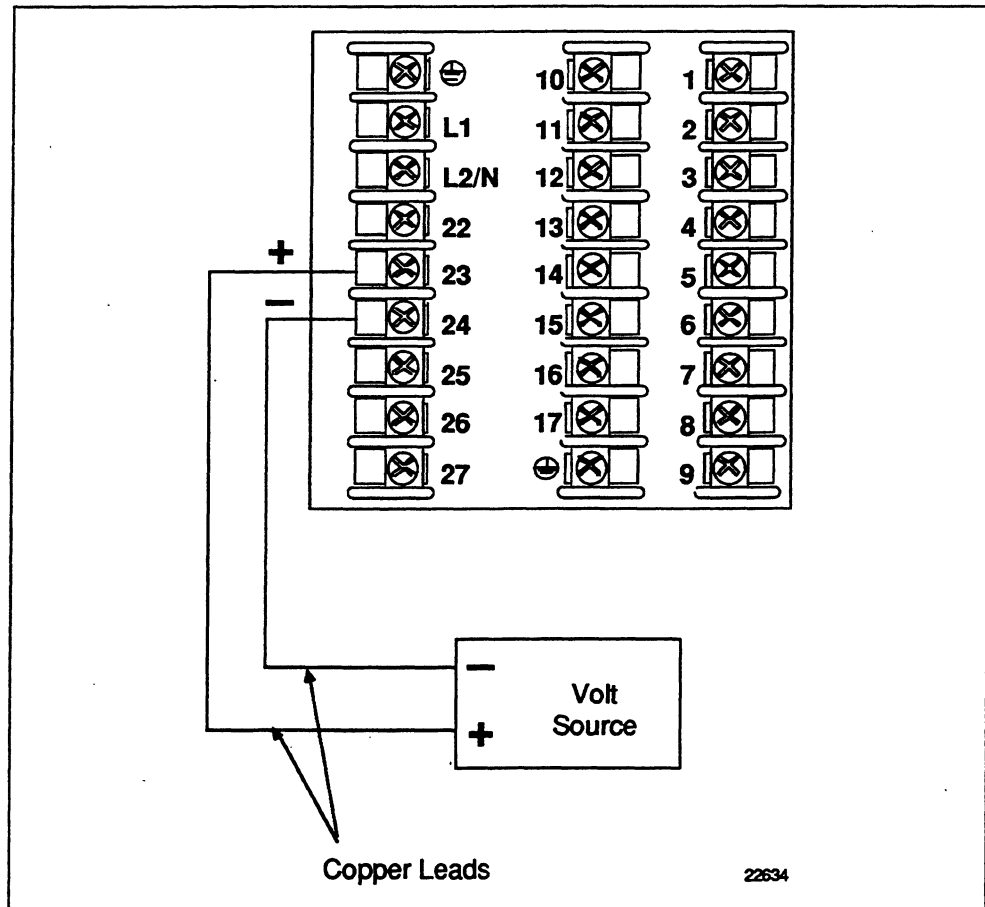Figure 7-9 Wiring Connections for 1 to 5 Volt input – Input 2



## 7.7 Input #2 Calibration Procedure

### Introduction

Apply power and allow the controller to warm up for 15 minutes before you calibrate.






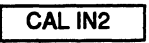






Please read “*Set Up Wiring*” before beginning the procedure.

Make sure you have “LOCKOUT” set to “NONE.” See *Section 3 – Configuration*.

### Procedure

The Calibration procedure for Input #2 is listed in table 7-6.

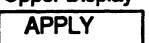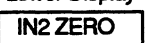Table 7-6 Input #2 Calibration Procedure

Step	Description	Press	Action
1	Enter Calibration Mode	 until you see	Upper Display   Lower Display 
			You will see: Upper Display   Lower Display 
			You will see: Upper Display   Lower Display 
2	Calibrate 0%		You will see Upper Display   Lower Display   Adjust your calibration device to an output signal equal to the 0% range value for your particular input sensor. See Table 7-1 for Voltage or Resistance equivalents. Wait 30 seconds, then go to the next step.

*Continued on next page*

## 7.7 Input #2 Calibration Procedure, Continued

Table 7-6 Input #2 Calibration Procedure, continued

Step	Description	Press	Action
3	Calibrate 100 %	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">FUNCTION</div>	<p>You will see Upper Display <div style="border: 1px solid black; padding: 2px; display: inline-block;">APPLY</div></p> <p>Lower Display <div style="border: 1px solid black; padding: 2px; display: inline-block;">IN2 SPAN</div></p> <p>Adjust your calibration device to an output signal equal to the 100% range value for your particular input sensor. See Table 7-1 for Voltage or Resistance equivalents. Wait 30 seconds, then go to the next step.</p>
4	Exit the Calibration Mode	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">FUNCTION</div>	The controller will store the calibration constants.
		<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">LOWER DISPLAY</div> <p style="text-align: center;">or</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">SET UP</div>	To store the calibration constants and exit the calibration mode.



## Section 8 – Output Calibration

### 8.1 Overview

#### Introduction

This section describes the field calibration procedures for the following types of outputs:

- Current Output
- Position Proportional and 3 Position Step Output
- Auxiliary Output

#### What's in this section

This section contains the following topics:

	Topic	See Page
8.1	Overview	151
8.2	Current Proportional Output Calibration <ul style="list-style-type: none"><li>• Introduction</li><li>• Equipment Needed</li><li>• How to Connect the Calibrator</li><li>• Calibration Procedure</li></ul>	152 152 152 153
8.3	Position Proportional and Three Position Step Output Calibration <ul style="list-style-type: none"><li>• Position Proportional Control</li><li>• 3 Position Step Control</li><li>• Equipment Needed</li><li>• What connection to make</li><li>• Calibration Procedure</li></ul>	154 154 154 154 155
8.4	Auxiliary Output Calibration <ul style="list-style-type: none"><li>• Introduction</li><li>• Equipment Needed</li><li>• How to Connect the Calibrator</li><li>• Calibration Procedure</li></ul>	158 158 158 159



**WARNING—SHOCK HAZARD**



**OUTPUT CALIBRATION MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE CALIBRATION.**

## 8.2 Current Proportional Output Calibration

### Introduction

Calibrate the controller so that the output provides the proper amount of current over the desired range.

The controller can provide an output current range of from 0 to 21 milliamperes and can be calibrated at 4 mA for 0% of output and 20 mA for 100% of output or any other values between 0 and 21 mA.

### Equipment needed

You will need a standard shop type milliammeter, with whatever accuracy is required, capable of measuring 0 to 20 milliamps.


### Calibrator connections

Refer to Figure 8-1 and wire the controller according to the procedure given in table 8-1.

Table 8-1 Set Up Wiring Procedure Current Proportional Output

Step	Action
1	Apply power and allow the controller to warm up 15 minutes before you calibrate.
2	Tag and disconnect the field wiring, at the rear of the controller, from terminals 2(+) and 3(-). See Figure 8-1.
3	Connect a Milliammeter across these terminals.

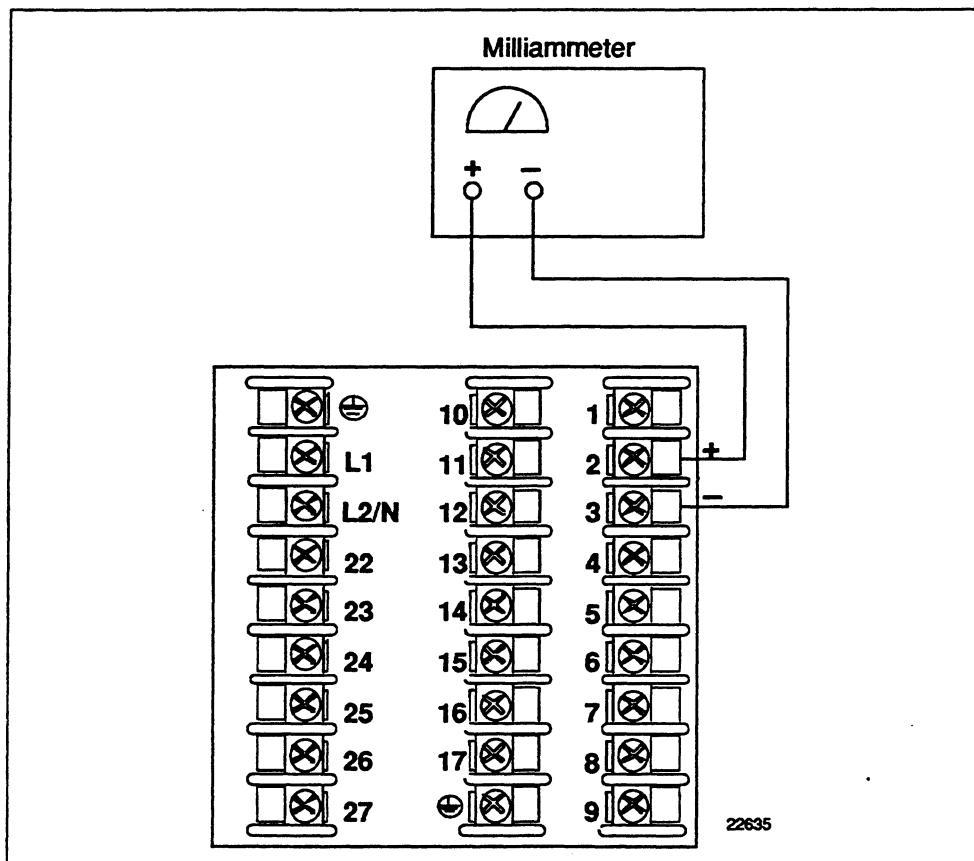Figure 8-1 Wiring Connections for Calibrating Current Proportional Output







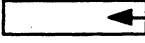











*Continued on next page*

## 8.2 Current Proportional Output, Continued
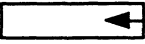
### Procedure

The procedure for calibrating the Current Proportional Output is listed in table 8-2. Make sure "LOCKOUT" in the Tuning Set Up group is set to "NONE." See *Section 3 – Configuration*.

Table 8-2 Current Proportional Output Calibration Procedure

Step	Description	Press	Action
1	Enter Calibration Mode	 until you see	Upper Display  Lower Display 
2	Calibrate 0%		You will see: Upper Display  a value between 1 and 2048 Lower Display 
		 or 	until the desired 0% output is read on the milliammeter. Use the values shown below depending on the action of your controller.  0 mA For 0 to 20 mA Direct Action* 20 mA For 0 to 20 mA Reverse Action 4 mA For 4 to 20 mA Direct Action 20 mA For 4 to 20 mA Reverse Action
3	Calibrate 100%		This stores the 0% value and, You will see: Upper Display  a value between 1 and 2048 Lower Display 
		 or 	until the desired 100% output is read on the milliammeter. Use the values shown below depending on the action of your controller.  20 mA For 0 to 20 mA Direct Action 0 mA For 0 to 20 mA Reverse Action* 20 mA For 4 to 20 mA Direct Action 4 mA For 4 to 20 mA Reverse Action
4	Exit the Calibration Mode		The controller will store the span value.
		 or 	To exit the calibration mode.  * When attempting to achieve 0 mA, always adjust the output to about 0.5 mA, and slowly decrease until the output just goes to zero. Further decrementing will not change the output current (since the circuit cannot produce negative current) but will affect the accuracy of the output by creating a dead zone where no current flows.

## 8.3 Position Proportional and Three Position Step Output Calibration

---

<b>Position Proportional control</b>	When the UDC 3000 controller has a Position Proportional control output, calibrate the controller so that the increase and decrease relays operate properly with respect to the position of the external feedback slidewire.
<b>3 Position Step control</b>	<p><i>Three Position Step Control Output models <u>with</u> Motor Position Indication</i> This model must have its output calibrated per the entire procedure to ensure the displayed output (slidewire position) agrees with the final control element position.</p> <p><i>Three Position Step Control Output models <u>without</u> Motor Position Indication</i> This model only requires that the "Motor Time" be entered as shown in the calibration procedure. FULL CALIBRATION IS NOT REQUIRED.</p>
<b>Equipment needed</b>	None
<b>Connections</b>	Apply power and allow the controller to warm up 15 minutes before you calibrate. Leave all field wiring connected to the rear terminals.
<b>Auto mode vs Manual mode</b>	There are two ways in which to calibrate Position Proportional or 3 Position Step control: AUTO mode or MANUAL mode.
<b>Rules for Auto mode vs Manual mode</b>	The Auto-mode selection must be done at least once before the manual mode will operate properly. Failure to use the Auto-mode procedure will prevent the controller from going into automatic control mode.
<b>Displayed values</b>	During the Auto-mode calibration procedure, the values being displayed are used only to indicate if the motor is still traveling. To view the actual calibration value, use the manual mode after the Auto-mode is completed. These values can be changed for purposes of tweaking the calibration.

---

*Continued on next page*

## 8.3 Position Proportional and Three Position Step Output Calibration, Continued

**Procedure**


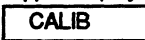






The procedure for calibrating the Position Proportional output and 3 Position Step control output is listed in table 8-3.

Make sure "LOCKOUT" in Tuning Set Up group is set to "NONE." See *Section 3 – Configuration*.

For "Three Position Step Control Output models without Motor Position Indication", do steps 1 and 2 only.

For "Position Proportional Output" and "Three Position Step Control Output models with Motor Position Indication" follow the entire calibration procedure.














**Table 8-3 Position Proportional and 3 Position Step Output Calibration Procedure**

Step	Description	Press	Action
1	Enter Calibration Mode	 until you see	Upper Display  Lower Display 
2	Set Motor Traverse Time  Note: This is the time it takes the motor to travel from 0 to 100%.		Until you see: Upper Display  a value Lower Display 
		 or 	until the proper motor stroke time is reached (see the motor specs or measure the time)  Range of setting = 5 to 1800 Seconds

*Continued on next page*

## 8.3 Position Proportional and Three Position Step Output Calibration, Continued


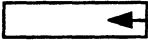



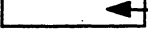


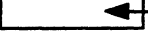





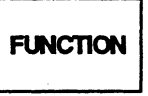


Table 8-3 Position Proportional and 3 Position Step Output Calibration Procedure, continued

Step	Description	Press	Action
3	Select Automatic or Manual Calibration		<p>until you see:</p> <p>Upper Display </p> <p>Lower Display </p> <p>You can calibrate the controller output manually or let the controller calibrate the output automatically.</p> <p>If the slidewire has never been calibrated, you must use "DO AUTO" first. In the "Automatic Calibration Mode" (DO AUTO), the controller relays automatically move the motor in the proper direction.</p> <p>If desired, however, the motor may be manually positioned to 0% and 100% positions. Disconnect the relay wires. "DO MAN".</p> <p>In the "Manual Calibration Mode" (DO MAN) the motor does not move. Instead, the existing 0% and 100% values may be changed with the ▲ or ▼ keys.</p>
		<p> or </p>	<p>to select automatic or manual calibration.</p> <p>Upper Display  <b>DO AUTO</b></p> <p>Lower Display  <b>DO MAN</b></p> <p>If you select DO AUTO, go to step 4 If you select DO MAN, go to step 6 Note: When calibration is terminated, this selection reverts to DISABL.</p>
4	<b>DO AUTO</b> Set 0% value		<p>The decrement relay is turned on to move the motor to 0% position.</p> <p>Upper Display  counts of feedback slidewire (0 to 3000)</p> <p>Lower Display </p> <p>When the motor stops, the display should stop counting, then, go on to the next step.</p>
5	Set 100% value		<p>The increment relay is turned on to move the motor to 100% position.</p> <p>Upper Display  counts of feedback slidewire (0 to 3000)</p> <p>Lower Display </p> <p>When the motor stops, the display should stop counting, then, go on to step 8.</p>

*Continued on next page*

## 8.3 Position Proportional and Three Position Step Output Calibration, Continued

Table 8-3 Position Proportional and 3 Position Step Output Calibration Procedure, continued

Step	Description	Press	Action
6	DO MAN Set 0% value		You will see: Upper Display  ← The existing zero calibration value in counts. Lower Display 
		 or 	until the desired zero value is reached in the upper display. Upper Display  ← The desired zero value Lower Display 
7	Set 100% value		The controller will store the 0% value and you will see: Upper Display  ← The existing span calibration value in counts Lower Display 
		 or 	until the desired span value is reached in the upper display. Upper Display  ← The desired span value Lower Display   For manual calibration, the motor does not move from its position prior to the start of Position Proportional calibration.
8	Exit the Calibration Mode		The controller will store the 100% value.
		 or 	To exit the calibration mode.

## 8.4 Auxiliary Output Calibration

### Introduction

Calibrate the controller so that the Auxiliary output provides the proper amount of current over the desired range. The controller can provide an auxiliary output current range of from 0 to 21 milliamperes and can be calibrated at 4 mA for 0% of output and 20 mA for 100% of output or any other values between 0 and 21 mA.

### Equipment needed

You will need a standard shop type milliammeter with whatever accuracy is required, capable of measuring 0 to 20 milliamps.


### Calibrator connections

Refer to Figure 8-2 and wire the controller according to the procedure given in table 8-4

Table 8-4 Set Up Wiring Procedure for Auxiliary Output

Step	Action
1	Apply power and allow the controller to warm up 15 minutes before you calibrate.
2	Tag and disconnect the field wiring, at the rear of the controller, from terminals 16 (+) and 17 (-). See figure 8-2.
3	Connect a Milliammeter across these terminals.

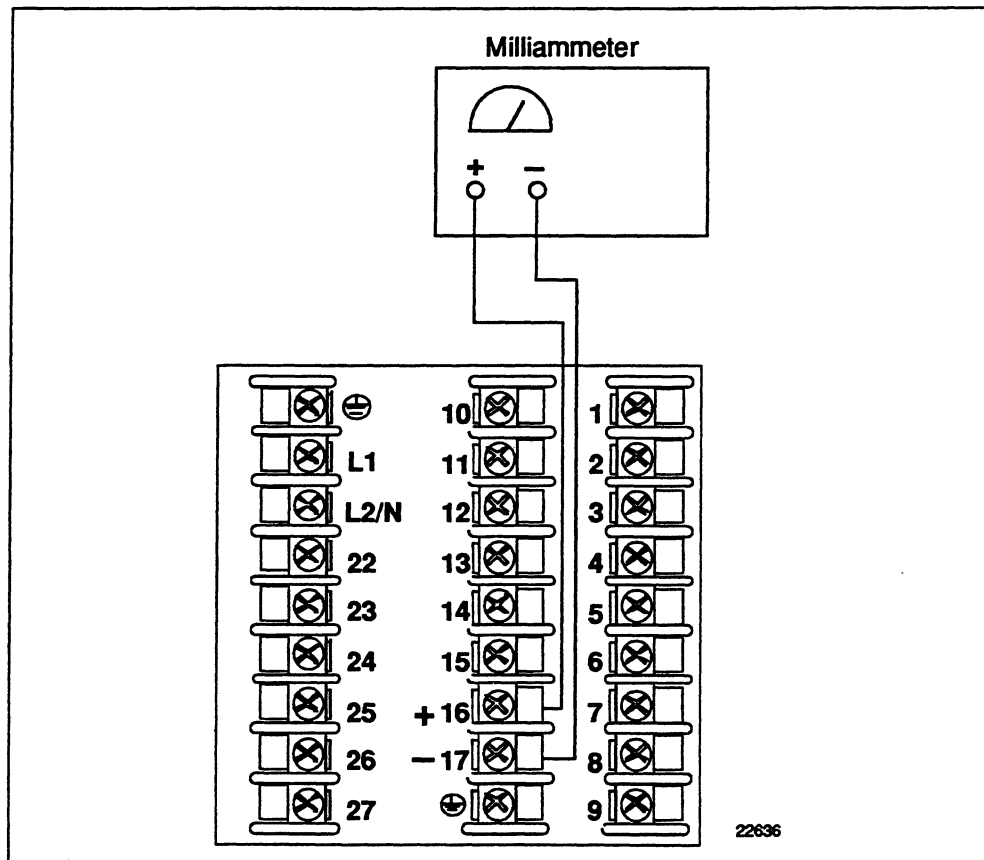Figure 8-2 Wiring Connections for Calibrating Auxiliary Output



Continued on next page


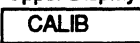
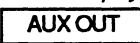

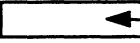













## 8.4 Auxiliary Output Calibration, Continued
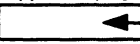
### Procedure

The procedure for calibrating the Auxiliary Output is listed in Table 8-5. Make sure "LOCKOUT" in the Tuning Set Up group is set to "NONE." See *Section 3 – Configuration*.

Table 8-5 Auxiliary Output Calibration Procedure

Step	Description	Press	Action
1	Enter Calibration Mode	 until you see	Upper Display  Lower Display 
2	Calibrate 0%		You will see: Upper Display  ← a value Lower Display 
		 or 	until the desired 0% output is read on the milliammeter. Use the values shown below depending on the action of your controller.  0 mA For 0 to 20 mA Direct Action * 20 mA For 0 to 20 mA Reverse Action 4 mA For 4 to 20 mA Direct Action 20 mA For 4 to 20 mA Reverse Action
3	Calibrate 100%		This stores the 0%value and, you will see: Upper Display  ← a value Lower Display 
		 or 	until the desired 100% output is read on the milliammeter. Use the values shown below depending on the action of your controller.  20 mA For 0 to 20 mA Direct Action 0 mA For 0 to 20 mA Reverse Action* 20 mA For 4 to 20 mA Direct Action 4 mA For 4 to 20 mA Reverse Action
4	Exit the Calibration Mode		The controller will store the span value.
		 or 	To exit the calibration mode.  * When attempting to achieve 0 mA, always adjust the output to about 0.5 mA, and slowly decrease until the output just goes to zero. Further decrementing will not change the output current (since the circuit cannot produce negative current) but will affect the accuracy of the output by creating a dead zone where no current flows.



## Section 9 – Troubleshooting / Service

### 9.1 Overview

#### Introduction

Instrument performance can be adversely affected by installation and application problems as well as hardware problems. We recommend that you investigate the problems in the following order;

- Installation related problems
- Application related problems
- Hardware and software related problems

and use the information presented in this section to solve them.

If a replacement of any part is required, follow the procedures listed under “Parts Replacement Procedures”.

#### What's in this section?

The following topics are covered in this section.

	Topic	See Page
9.1	Overview	161
9.2	Troubleshooting Aids	163
	• Overall Error Messages	163
	• Controller Failure Symptoms	164
	• Customer Support	164
	• Determining the Software Version Number	164
9.3	Power-up Tests	165
9.4	Status Tests	166
9.5	Background Tests	168
9.6	Controller Failure Symptoms	170
9.7	Troubleshooting Procedures	171
	• Power Failure	171
	• Current Proportional Output Failure	172
	• Position Proportional Output Failure	173
	• Time Proportional Output Failure	174
	• Time/Current - Current/Time Proportional Output Failure	175
	• Alarm Relay Output Failure	176
	• Keyboard Failure	177
	• Communications Failure	178
9.8	Parts Replacement Procedures	179
	• How to remove the chassis	180
	• How to replace the display/keyboard assembly	181
	• How to remove printed wiring boards from the chassis	182
	• Printed wiring board identification	183
	• 2nd input board replacement procedure	184
	• Power input board replacement procedure	185
	• Digital input board replacement procedure	186
	• Aux.Out/Comm. board replacement procedure	187
	• MCU/output board replacement procedure	188
9.9	Maintenance	189

*Continued on next page*

## 9.1 Overview, Continued

---

### Installation related problems

Read the Installation section in this manual to make sure the UDC 3000 has been properly installed. The installation section provides information on protection against electrical noise, connecting external equipment to the controller, and shielding and routing external wiring.

**ATTENTION** System noise induced into the controller will result in diagnostic error messages recurring. If the diagnostic error messages can be cleared, it indicates a “soft” failure and is probably noise related. If system noise is suspected, completely isolate the controller from all field wiring. Use calibration sources to simulate PV and check all controller functions; i.e. Gain, Rate, Reset, Output, Alarms, etc.

---

### Application related problems

Review the application of the controller; then, if necessary, direct your questions to the local sales office.

---

### Hardware and software related problems

Use the troubleshooting error message prompts and controller failure symptoms to identify typical failures which may occur in the controller. Follow the troubleshooting procedures to correct them.

---

## 9.2 Troubleshooting Aids

**Overall error messages** An error message can occur

- at power-up,
- during continuous background tests while in normal operation,
- when the Status Tests are requested.

Table 9-1 lists all the error message prompts that you could see, the reason for the failure, and under what test group the prompt could appear. Refer to Tables 9-3 (Power-up), 9-5 (Status), and 9-6 (Background) for the particular test group indicated.

Table 9-1 Error Message Prompts

Error Message (lower display)	Reason for Failure	Test Group	Refer to Table
<b>CAL TEST</b>	Calibration test failure	Power-up or Status	9-3 9-5
<b>CONF ERR</b>	Low limit greater than high limit for PV, SP, Reset, or Output	Background	9-6
<b>CONFTEST</b>	Configuration test failure	Power-up or Status	9-3 9-5
<b>E E FAIL</b>	Unable to write to non-volatile memory	Background	9-6
<b>FACT CRC</b>	Factory Calibration Cyclic Redundancy test	Status	9-5
<b>FAILSAFE</b>	Controller in Failsafe	Power-up, Background, or Status	9-3 9-5 9-6
<b>INP1FAIL</b>	Two consecutive failures of Input 1 integration	Background	9-6
<b>INP2FAIL</b>	Two consecutive failures of Input 2 integration	Background	9-6
<b>INP1 RNG</b>	Input 1 Out of Range	Background	9-6
<b>INP2 RNG</b>	Input 2 Out of Range	Background	9-6
<b>PV LIMIT</b>	PV Out of Range	Background	9-6
<b>RAM TEST</b>	RAM test failed	Power-up or Status	9-3 9-5
<b>RV LIMIT</b>	Remote Variable Out of Range	Background	9-6
<b>SW FAIL</b>	Position Proportional slidewire input failure	Background	9-6
<b>CAL MTR</b>	Position Proportional or 3 Position Step control with motor position indication, Auto Cal never performed.	Power-up and Background	9-3

*Continued on next page*

## 9.2 Troubleshooting Aids, Continued

### Controller failure symptoms

Other failures may occur that deal with the Power, Output, or Alarms. Refer to the controller failure symptom in Table 9-7 to determine what is wrong and the troubleshooting procedures to use to correct the problem.

### Check Installation

If a set of symptoms still persists, refer to *Section 2 - Installation* and ensure proper installation and proper use of the controller in the system.

### Customer support

If you cannot solve the problem using the troubleshooting procedures listed in this section; or get the **model number** and **serial number** from the label on the chassis molding, and **software version** (see Table 9-2) then:


call Customer Support Phone Number  
 1-800-423-9883      USA  
 1-800-461-0013      Canada.

If it is determined that a hardware problem exists and the controller is still within the two year warranty, a replacement controller or parts will be shipped with instructions for returning the defective unit.

### Determining the software version

Table 9-2 lists the procedure for identifying the software version number.

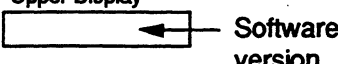Table 9-2 Procedure for Identifying the Software Version

Step	Operation	Press	Action
1	Select STATUS Set Up Group	SET UP	Until you see: Upper Display READ Lower Display STATUS
2	Read the software version	FUNCTION	Until you see: Upper Display  Lower Display VERSION Please give this number to the Customer Support person. It will indicate which version of UDC 3000 you have and help them determine a solution to your problem.

## 9.3 Power-up Tests

### What happens at power-up


When the controller is powered-up, three tests are run by the UDC 3000 software to ensure memory integrity. As the tests are run, the displays will appear as shown in Table 9-3.

Table 9-3 Power-up Tests

Lower Display	Upper Display
RAM TEST	PASSED or FAILED
CONFTEST	PASSED or FAILED
CAL TEST	PASSED or FAILED

### Test failures

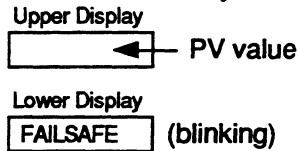If any of these three tests fail, "FAILED" will appear momentarily in the upper display, then a display test is run, after which the controller will go into manual mode and you will see:



Refer to "Status Tests" to determine which tests have failed and how to correct them.

### Position proportional or 3 position step test failures

For controller configured for Position Proportional or 3 Position step control with motor position indication and Auto-cal has never been done, a prompt "CAL MTR" will appear suggesting that the controller be calibrated.

## 9.4 Status Tests

### Introduction

When required, the results of these tests can be checked to determine the reason the controller has gone to "Failsafe".

### How to check the status tests

The procedure in Table 9-4 tells you how to display the results of the status tests. Table 9-5 lists the tests, the reason for the failure, and how to correct the problem.

Table 9-4 Procedure for Displaying the Status Tests Results

Step	Operation	Press	Action
1	Select STATUS Set Up Group	<input type="button" value="SET UP"/>	Until you see: Upper Display <input type="button" value="READ"/> Lower Display <input type="button" value="STATUS"/>
2	Read the status tests results	<input type="button" value="FUNCTION"/>	Until you see: Upper Display <input type="button" value="NO or YES"/> YES indicates a failure Lower Display <input type="button" value="FAILSAFE"/>  Successive presses of the [FUNCTION] key will display the results of the status tests in the following order: RAM TEST CONF TEST CAL TEST FACT CRC  Identify the problem and correct the failure as shown in Table 9-5.

*Continued on next page*



## 9.4 Status Tests, Continued

### Status Tests

Table 9-5 lists the Status tests, the reason for their failure, and how to correct the failure.

Table 9-5 Status Tests

Test (Lower Display)	Definition	Upper Display	Reason for Failure	How to Correct the Failure
FAILSAFE	Failsafe Fault	NO	No Failure	
		YES	Burnout configured for none and input fails. –RAM TEST failed –CONFTEST failed –CALTEST failed	1. Step through the rest of the STATUS check to identify the particular failure.  Also see Table 9-6, Background tests
RAM TEST	RAM test run at power-up	PASS	No Failure	RAM test passed.
		FAIL	RAM Failure	1. Power cycle to see if the error clears.
CONF TEST	Configuration Checksum	PASS	No Failure	Configuration checksum passed.
		FAIL	Configuration data is in error.	1. Step through STATUS tests – the controller will recalculate the checksum.  2. Check all configuration prompts for accuracy. <i>See Section 3 - Configuration</i>
CAL TEST	Working Calibration	PASS	No Failure	Working calibration checksum passed.
		FAIL	The working calibration constants in the controller are in error.	1. If the controller has not been field calibrated, see <i>Section 3 - Configuration</i> and change the input to a different type. Enter it, loop through the status tests, then return the input type to the original one.  2. If the controller has been field calibrated, recalibrate the controller.
FACT CRC	Factory calibration test	PASS	No Failure	Factory calibration cyclic redundancy test passed
		FAIL	Factory set input constants have been changed due to the change in input type.	1. Cycle through Status to clear the error.  2. Check the calibration. Make sure 0 and 100% are correct values.  3. Recalibrate if step 1 is unsatisfactory. Refer to <i>Section 7 - Input Calibration</i> .

## 9.5 Background Tests

### Introduction

The UDC 3000 performs on-going background tests to verify data and memory integrity. If there is a malfunction, an error message will be displayed (blinking) in the lower display.

### Background Tests

In the case of more than one simultaneous malfunction, only the one with the highest priority will appear in the lower display. Table 9-6 lists these background tests, the reason for their failure, and how to correct the problem.

Table 9-6 Background Tests

Lower Display	Reason for Failure	How to Correct the Problem
<b>EE FAIL</b>	Unable to write to non-volatile memory. Anytime you change a parameter and it is not accepted, you will see EE FAIL.	<ol style="list-style-type: none"> <li>1. Check the accuracy of the parameter and re-enter.</li> <li>2. Try to change something in configuration.</li> <li>3. Run through STATUS tests to re-write to EEPROM.</li> </ol>
<b>FAILSAFE</b>	<p>This error message shows whenever the controller goes into a failsafe mode of operation. This will happen if:</p> <ul style="list-style-type: none"> <li>• RAM test failed</li> <li>• Configuration test failed</li> <li>• Calibration test failed</li> <li>• Burnout configured for none and the input failed.</li> </ul>	<ol style="list-style-type: none"> <li>1. Run through STATUS check to determine the reason for the failure.</li> <li>2. Press the <b>SET UP</b> key until STATUS appears in the lower display.</li> <li>3. Press the <b>FUNCTION</b> key to see what tests pass or fail, then run through the STATUS codes a second time to see if the error cleared. Correct according to the recommendations given in Table 9-5.</li> </ol>
<b>INP1FAIL</b>	<p>Two consecutive failures of input 1 integration. i.e., cannot make analog to digital conversion. This will happen if:</p> <ul style="list-style-type: none"> <li>• Upscale or Downscale burnout is selected</li> <li>• Input not configured correctly</li> </ul>	<ol style="list-style-type: none"> <li>1. Make sure the actuation is configured correctly. See <i>Section 3 - Configuration</i>.</li> <li>2. Make sure the input is correct.</li> <li>3. Check for gross over-ranging.</li> <li>4. Replace the cold junction assembly.</li> </ol>
<b>INP2FAIL</b>	Two consecutive failures of input 2 integration. i.e., cannot make analog to digital conversion.	<ol style="list-style-type: none"> <li>1. Make sure the actuation is configured correctly. See <i>Section 3 - Configuration</i>.</li> <li>2. Make sure the input is correct.</li> <li>3. Check for gross over-ranging.</li> </ol>
<b>SW FAIL</b>	Position Proportional input slidewire failure	<ol style="list-style-type: none"> <li>1. Check motor slidewire connections.</li> <li>2. Recalibrate the slidewire motor position. see the calibration section.</li> </ol>
<b>CAL MTR</b>	Position Proportional or 3 Position Step Control with Motor Position Indication, Auto Cal never performed.	<ol style="list-style-type: none"> <li>1. Calibrate the controller for Position Proportional output. Refer to <i>Subsection 8.3 - Position Proportional and 3 Position Step Output Calibration</i>.</li> </ol>
<b>CONF ERR</b>	<ul style="list-style-type: none"> <li>• PV low limit is &gt; PV high limit</li> <li>• SP low limit is &gt; SP high limit</li> <li>• Output low limit &gt; Output high limit</li> </ul>	<ol style="list-style-type: none"> <li>1. Check the configuration for each item and reconfigure if necessary.</li> </ol>

Table continued on next page

## 9.5 Background Tests, Continued

Table 9-6 Background Tests, continued

Lower Display	Reason for Failure	How to Correct the Problem
<b>INP1 RNG</b>	Input 1 out of range. The process input is outside the range limits.	<ol style="list-style-type: none"> <li>1. Make sure the range and actuation are configured properly.</li> <li>2. Check the input source.</li> <li>3. Restore the factory calibration:               <ol style="list-style-type: none"> <li>a. Disconnect the wiring from and place a jumper across terminals 26 and 27. The controller should read room temperature if it is configured for a thermocouple input.</li> <li>b. If it does not read room temperature, see <i>Section 3-Configuration</i> and change the IN1TYP prompt in the INPUT 1 group to another type of thermocouple.</li> <li>c. After the change, press <b>FUNCTION</b> key, then the <b>LOWER DISPLAY</b> key. The controller should read the correct room temperature. If it does not, the unit has an input failure.</li> <li>d. Repeat step b. This time switch the IN1TYP back to the originally selected thermocouple.</li> <li>e. Repeat step c. The controller is restored with factory calibration.</li> <li>f. Remove the jumper and reconnect the thermocouple.</li> </ol> </li> <li>4. Field calibrate. See <i>Section 7 - Input Calibration</i>.</li> </ol>
<b>INP2 RNG</b>	Input 2 out of range. The remote input is outside the range limits.	<ol style="list-style-type: none"> <li>1. Make sure the range and actuation are configured properly.</li> <li>2. Check the input source.</li> <li>3. Field calibrate. See <i>Section 7 - Input Calibration</i>.</li> </ol>
<b>PV LIMIT</b>	PV out of range. PV = INP1 + INP1 BIAS	<ol style="list-style-type: none"> <li>1. Make sure the input signal is correct.</li> <li>2. Make sure the Bias setting is correct</li> <li>3. Recheck the calibration. Use Bias of 0.0</li> </ol>
<b>RV LIMIT</b>	The result of the formula shown below is beyond the range of the remote variable.  RV = INP2 X RATIO + BIAS	<ol style="list-style-type: none"> <li>1. Make sure the input signal is correct.</li> <li>2. Make sure the Ratio and Bias settings are correct.</li> <li>3. Recheck the calibration. Use a Ratio of 1.0 and a Bias of 0.0.</li> </ol>

## 9.6 Controller Failure Symptoms

### Introduction

In addition to the error message prompts, there are failure symptoms that can be identified by noting how the controller displays and indicators are reacting.

### Symptoms

Compare your symptoms with those shown in Table 9-7 and refer to the troubleshooting procedure indicated to correct the problem.

Table 9-7 Controller Failure Symptoms

Upper Display	Lower Display	Indicators	Controller Output	Probable Cause	Trouble-shooting Procedure
Blank	Blank	Off	None	Power Failure	1
OK	Displayed Output disagrees with Controller Output	OK	Controller Output disagrees with Displayed Output	Current Proportional Output	2
OK		OK		Position Proportional Output	3
OK		OK		Time Proportional Output	4
OK		OK		Current/Time Proportional Output	5
OK	OK	OK	External Alarm function does not operate properly	Malfunction in alarm output	6
Display does not function when a key is pressed				Keyboard Malfunction	7
Controller fails to go into "Slave" operation during communications				Communications Failure	8

### Other symptoms

If a set of symptoms or prompts other than the one you started with appears while troubleshooting, re-evaluate the symptoms. This may lead to a different troubleshooting procedure.

If the symptom still persists, refer to the installation section in this manual to ensure proper installation and proper use of the controller in your system.

## 9.7 Troubleshooting Procedures

### Introduction

The troubleshooting procedures are listed in numerical order as they appear in Table 9-7. Each procedure lists what to do if you have that particular failure and how to do it or where to find the data needed to accomplish the task.



### WARNING—SHOCK HAZARD



**TROUBLESHOOTING MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE SERVICING.**

### Equipment needed

You will need the following equipment in order to troubleshoot the symptoms listed in the tables that follow:

- DC Milliammeter – mA<sub>dc</sub>
- Calibration sources – T/C, mV, Volt, etc.
- Voltmeter

### Procedure #1

Table 9-8 explains how to troubleshoot power failure symptoms.

Table 9-8 Troubleshooting Power Failure Symptoms

Step	What to do	How to do it
1	Check the AC line voltage.	Use a Voltmeter to measure the AC voltage across terminals L1 and L2 on the rear terminal panel of the controller.  Check the earth ground connection.
2	Make sure the chassis plugs into the rear of the case properly.	Withdraw the chassis and visually inspect the controller board and the inside of the case.
3	Check the system for Brown-outs, heavy load switching, etc.; and conformance to installation instructions.	Refer to <i>Section 2 - Installation</i> .
4	Change PS/Input board.	Refer to Table 9-20.
5	Change MCU/Output board.	Refer to Table 9-23.

*Continued on next page*

## 9.7 Troubleshooting Procedures, Continued

### Procedure #2

Table 9-9 explains how to troubleshoot Current Proportional Output failure symptoms.

Table 9-9 Troubleshooting Current Proportional Output Failure

Step	What to do	How to do it
1	Make sure the controller is configured for Current output.	Make Set Up group prompt "ALGORITHM". Function prompt "OUT ALG" = selection "CURRNT" Refer to <i>Section 3 - Configuration</i> .
2	Check the field wiring.	Output impedance must be less than or equal to 1000 Ohms.
3	Make sure all the configurable tuning constants, limits, and configuration data stored in the controller are correct. Reconfigure, if necessary.	Refer to <i>Section 3 - Configuration</i> to check all this data and how to reconfigure.
4	Check the output.	Put the controller into Manual mode and change the output from 0 to 100% (4-20 mA). Use a DC milliammeter at the rear terminals to verify the output.
5	Recalibrate the Current Proportional Output.	Refer to <i>Section 8 - Output Calibration</i> for details.
6	Change MCU/Output board.	Refer to Table 9-23.

*Continued on next page*

## 9.7 Troubleshooting Procedures, Continued

### Procedure #3

Table 9-10 explains how to troubleshoot Position Proportional Output failure symptoms.

Table 9-10 Troubleshooting Position Proportional Output Failure

Step	What to do	How to do it
1	Make sure the controller is configured for Position Proportional output.	Make Set Up group prompt "ALGORITHM". Function prompt "OUT ALG" = selection "POSITN" Refer to <i>Section 3 - Configuration</i> .
2	Check the field wiring.	Refer to <i>Section 2 - Installation</i> for Position Proportional Wiring information.
3	Check the output.	Put the controller into Manual mode and change the output from 0 to 100%.
4	Check whether the motor drives in both directions. If it does go to step 6.	See the Position Proportional calibration procedure in the Calibration Section for motor slidewire calibration.
5	Check whether the motor drives in either direction. If the motor drives in one direction, check the slidewire. If the motor does not drive in either direction, check the motor.	Refer to the Motor instructions.
6	Check the output voltage to the slidewire.	Should equal from 1.3 to 1.0 volts. See wiring in the installation section for terminal designations. The feedback slidewire output voltage must vary with the valve position.
7	Make sure the output relays are actuating properly.	Put the controller into Manual mode. Vary the output above and below the present value. Observe "OUT" indicator on the operator interface. If they are not working properly, check the field wiring, then go to step 5. If they are, go to step 8.
8	Recalibrate the controller.	Refer to <i>Section 8 - Output Calibration</i> .
9	Change MCU/Output board.	Refer to Table 9-23.

*Continued on next page*

## 9.7 Troubleshooting Procedures, Continued

### Procedure #4

Table 9-11 explains how to troubleshoot Time Proportional Output failure.

Table 9-11 Troubleshooting Time Proportional Output Failure

Step	What to do	How to do it
1	Make sure the controller is configured for Time Proportional output.	Make Set Up group prompt "ALGORTHM". Function prompt "OUT ALG" = selection "TIME" or "TIME D" Refer to <i>Section 3 - Configuration</i> .
2	Check the field wiring.	Make sure the NO or NC contact wiring is correct at the rear terminals. Refer to <i>Section 2 - Installation</i> for details.
3	Make sure all the configurable tuning constants, limits, and configuration data stored in the controller are correct. Reconfigure, if necessary.	Refer to <i>Section 3- Configuration</i> to check all this data and how to reconfigure.
4	Check the output.	Put the controller into Manual mode. Vary the output above and below the present value. Observe "OUT" indicator on the operator interface.
5	Change MCU/Output board.	Refer to Table 9-23.

*Continued on next page*



## 9.7 Troubleshooting Procedures, Continued

### Procedure #5

Table 9-12 explains how to troubleshoot Current/Time or Time/Current Proportional Output failure.

Table 9-12 Troubleshooting Time/Current or Current/Time Proportional Output Failure

Step	What to do	How to do it
1	Make sure the controller is configured for Time/Current or Current/Time Proportional output.	Make Set Up group prompt "ALGORTHM". Function prompt "OUT ALG" = selection "TI CUR" or "CUR TI" Refer to <i>Section 3 - Configuration</i> .
2	Check the field wiring.	Make sure the NO or NC contact wiring is correct at the rear terminals. Refer to <i>Section 2 - Installation</i> for details.
3	Make sure all the configurable tuning constants, limits, and configuration data stored in the controller are correct. Reconfigure, if necessary.	Refer to <i>Section 3 - Configuration</i> to check all this data and how to reconfigure.
4	Check the relay output.	Put the controller into Manual mode. Vary the output above and below the present value. Observe "OUT" indicator on the operator interface.
5	Check the Current Proportional Output.	Put the controller into Manual mode and change the output from 0 to 100% (4-20 mA). Use a DC milliammeter at the rear terminals to verify the output.
6	Recalibrate the controller.	Refer to <i>Section 8 - Output Calibration</i> for details.
7	Change MCU/Output board.	Refer to Table 9-23.

*Continued on next page*

## 9.7 Troubleshooting Procedures, Continued

### Procedure #6

Table 9-13 explains how to troubleshoot Alarm Relay Output failure.

Table 9-13 Troubleshooting Alarm Relay Output Failure

Step	What to do	How to do it
1	Check the alarm configuration data. If it is correct, check the field wiring.	Reconfigure if necessary. Refer to <i>Section 3 - Configuration</i> for details.
2	Check that the applicable alarm relay actuates properly depending on what you have set at prompt "ALARM TYPE". If it does, check the field wiring.	<p>If the alarm type is set for PV, place the controller in manual mode. Vary the input to raise and lower the PV around the setpoint. Listen for a click from the relay as the PV moves in either direction and note that the proper ALM1 or ALM2 is lit.</p> <p>If the alarm is set for output, put the controller into manual mode. Raise or lower the output above or below the value you have set as the alarm setpoint.</p>
3	Check the field wiring.	Make sure the NO or NC contact wiring is correct on the alarm output terminals. Refer to <i>Section 2 - Installation</i> for details.
4	Change MCU/Output board.	Refer to Table 9-23.

*Continued on next page*

## 9.7 Troubleshooting Procedures, Continued

**Procedure #7**

Table 9-14 explains how to troubleshoot a Keyboard failure.

Table 9-14 Troubleshooting a Keyboard Failure

Step	What to do	How to do it
1	Make sure the keyboard is connected properly to the MCU/output and power/input boards.	Withdraw the chassis from the case and visually inspect the connection.
2	Controller Keyboard or specific keys may be "LOCKED OUT" via the security code.	Use your 4 digit security code number to change the lockout level. Refer to <i>Section 3 – Configuration</i> .  <b>ATTENTION</b> Using "1000" as a security code number will override the 4-digit code previously entered.
3	Run the keyboard test.	Press the [SET UP] key and hold in, then press the [FUNCTION] key at the same time. The controller will run a display test. Then you will see:  <div style="text-align: center;">                     Upper Display  <span style="border: 1px solid black; padding: 2px 10px;">KEYS</span> </div> <div style="text-align: center; margin-top: 10px;">                     Lower Display  <span style="border: 1px solid black; padding: 2px 10px;">TRY ALL</span> </div> Press each key. If it works, the key name will appear in the lower display.
4	Replace the display/keyboard if any keys are shorted out.	Refer to " <i>Parts Replacement Procedures</i> " in this section.

*Continued on next page*

# 9.7 Troubleshooting Procedures, Continued

**Procedure #8**

Table 9-15 explains how to troubleshoot a Communications failure.  
 Table 9-15 Troubleshooting a Communications Failure

Step	What to do	How to do it
1	Check the field wiring and termination resistor.	Refer to the RS422/485 Manual or the Gateway Manual depending on the protocol used.
2	Make sure the Communications Printed Wiring Board is installed properly in the controller.	Withdraw the chassis from the case and inspect the board. See the exploded view (Figure 10-1) for location of the board. Return the chassis to the case.
3	<p>Determine if the Communications board is faulty by running a LOCAL LOOPBACK TEST.</p> <p>If the test fails, replace the board.</p>	<p>Run the Local Loopback Test.</p> <p>Press [SET UP] until you see:</p> <p style="padding-left: 20px;">Upper Display  <input type="text" value="SET UP"/></p> <p style="padding-left: 20px;">Lower Display  <input type="text" value="COM"/></p> <p>Press [FUNCTION] until you see:</p> <p style="padding-left: 20px;">Upper Display  <input type="text" value="DISABL"/></p> <p style="padding-left: 20px;">Lower Display  <input type="text" value="LOOPBACK"/></p> <p>Press ▲ or ▼, you will see:</p> <p style="padding-left: 20px;">Upper Display  <input type="text" value="Enable"/></p> <p style="padding-left: 20px;">Lower Display  <input type="text" value="LOOPBACK"/></p> <p>The test will run until the operator disables it here.</p>

## 9.8 Parts Replacement Procedures

---

### Introduction

These procedures tell you how to access and replace the following printed wiring boards in your controller.

- Display/Keyboard
  - MCU/Output
  - Power/Input
  - 2nd Input
  - Digital Input
  - Auxiliary Output
  - DMCS Communications
  - RS422/485 Communications
- 

### Equipment needed

To accomplish the procedures that follow, you will need the following equipment:

- Phillips Head Screwdriver
  - Flat Bladed Screwdriver
  - Small Pliers
- 

*Continued on next page*

## 9.8 Parts Replacement Procedures, Continued


### How to remove the chassis

Refer to Figure 9-1 for steps and follow the procedure listed in Table 9-16.

Table 9-16 How to Remove the Chassis

Step	Action
1	Loosen the screw on the front face.
2	Insert a flat-bladed screwdriver into the hole on the top of the case as shown in Figure 9-1 and pry chassis forward slightly until the chassis connectors separate from the back of the case.
3	Grasp the bezel and pull the chassis out of the case.

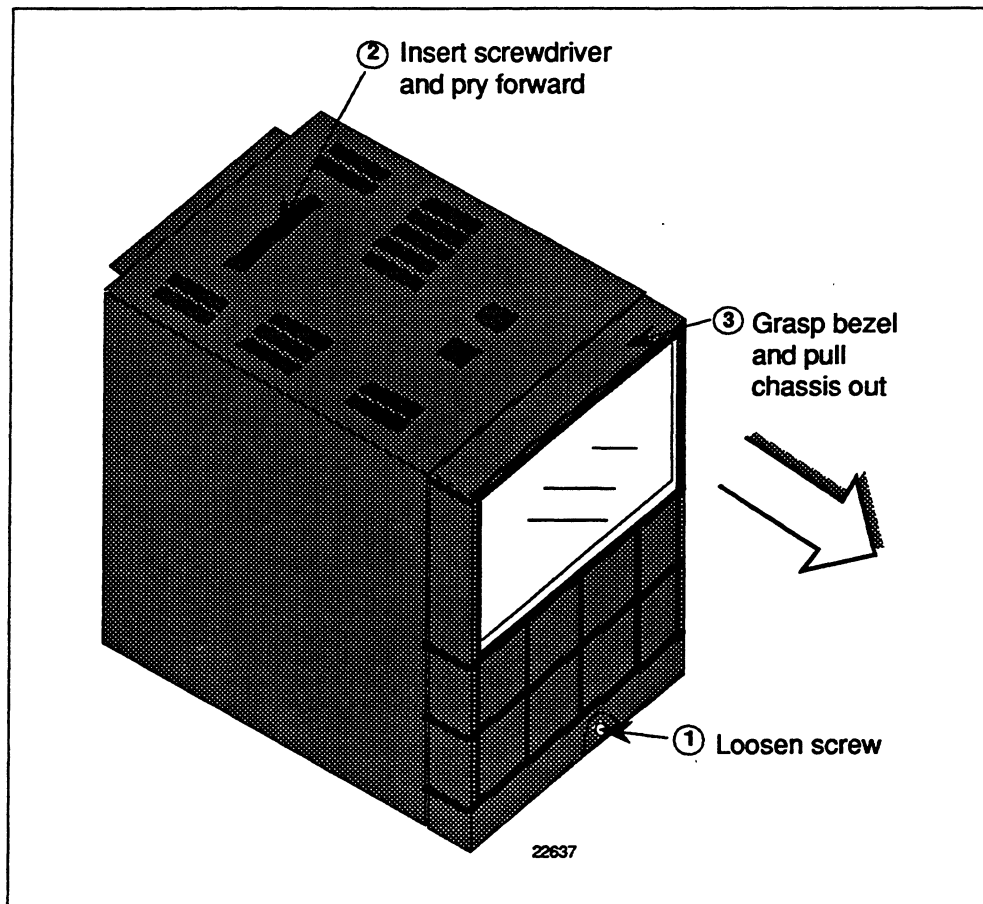Figure 9-1 Chassis Removal



*Continued on next page*

## 9.8 Parts Replacement Procedures, Continued


### How to replace the display/keyboard assembly

Refer to Figure 9-2 and follow the procedure listed in Table 9-17.

Table 9-17 Display/Keyboard Assembly Replacement Procedure

Step	Action
1	Remove the chassis from the case as shown in Figure 9-1.
2	Peel the rubber bezel and display window off the chassis assembly.
3	Separate the chassis frame at the four release points shown in Figure 9-2 and wiggle each printed wiring board out of its socket on the display/keyboard assembly. Pull out slightly.
4	Insert a small flat-bladed screwdriver into each of the display/keyboard release points (Figure 9-2) and pry out the board.
5	Install the new board, bottom end in first, and push in the top until it clicks into place.
6	Reinstall the printed wiring boards into the rear of the display board making sure that the boards click into their release points.
7	Replace the bezel and window assembly.
8	Reinstall chassis into case. Press in hard, then tighten the screw.

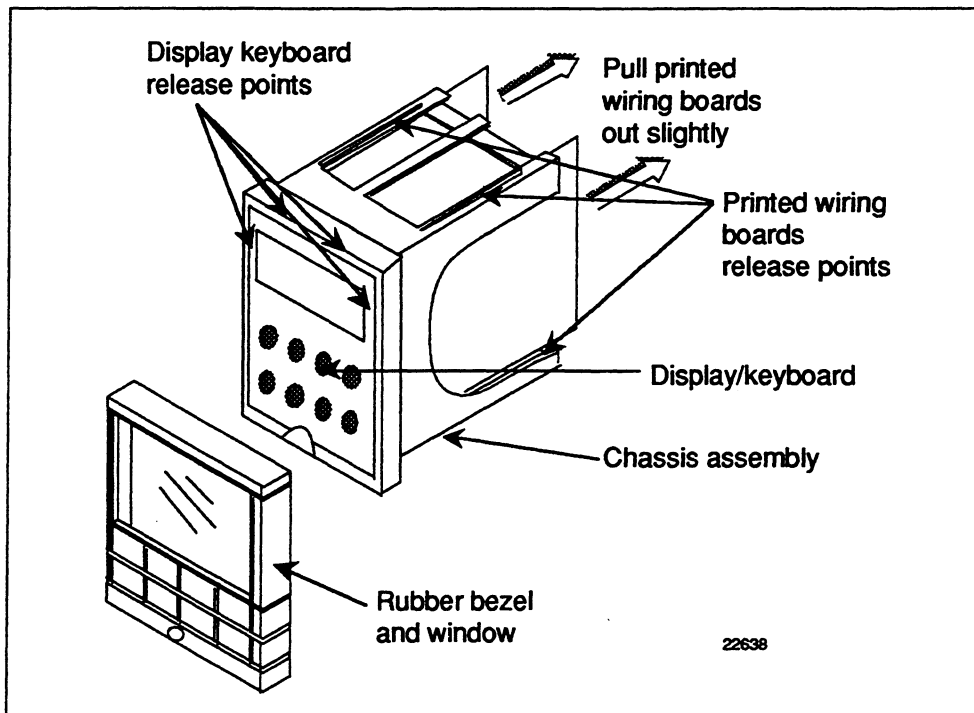Figure 9-2 Display/Keyboard Replacement



*Continued on next page*

## 9.8 Parts Replacement Procedures, Continued


**How to remove the printed wiring boards from the chassis**

To remove the printed wiring boards from the chassis, refer to Figure 9-3 and follow the procedure in Table 9-18.

Table 9-18 Printed Wiring Board Removal from Chassis

Step	Action
1	Remove the chassis from the case as shown in Figure 9-1.
2	Separate the chassis frame at the release points shown in Figure 9-3 and wiggle each printed wiring board out of its socket on the display/keyboard assembly. Pull both boards out of the chassis assembly.

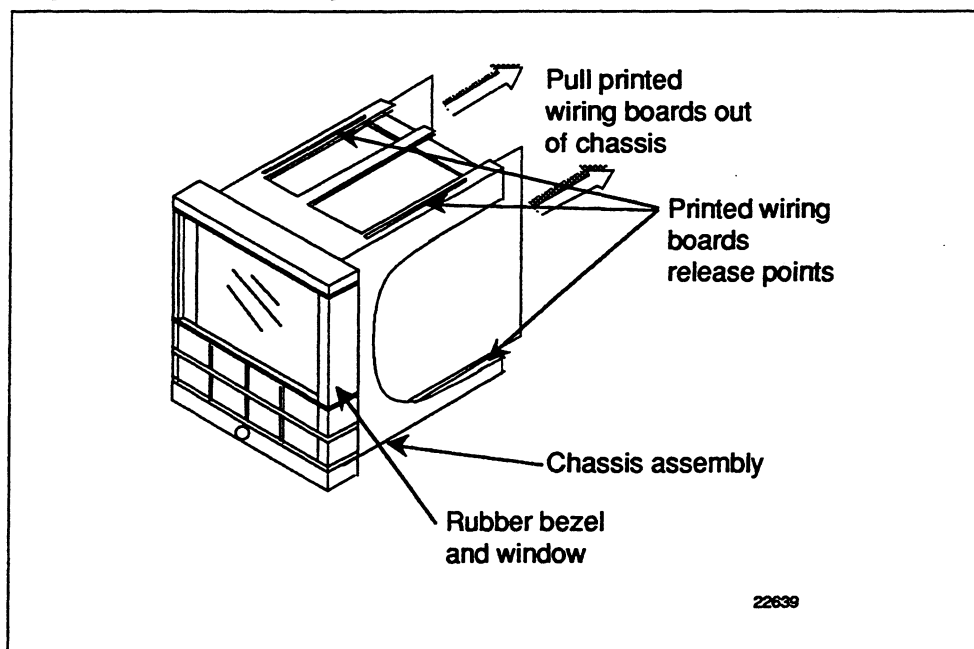Figure 9-3 Removing the Printed Wiring Boards



*Continued on next page*



## 9.8 Parts Replacement Procedures, Continued

### Printed wiring board identification


Figure 9-4 identifies each of the printed wiring boards that can be replaced. Refer to this drawing when following the replacement procedures for each of the boards, since you have to remove all of them from the chassis to replace the one you want.

In order to lay boards flat, remove the transformer lead from the Aux.Out/Communications board and the Digital Input board.

Refer to the specific procedure table to remove the desired board.

- 2nd Input Board — Table 9-19
- Power Input Board — Table 9-20
- Digital Input Board — Table 9-21
- Aux.Out/Communications Board — Table 9-22
- MCU/Output Board — Table 9-23

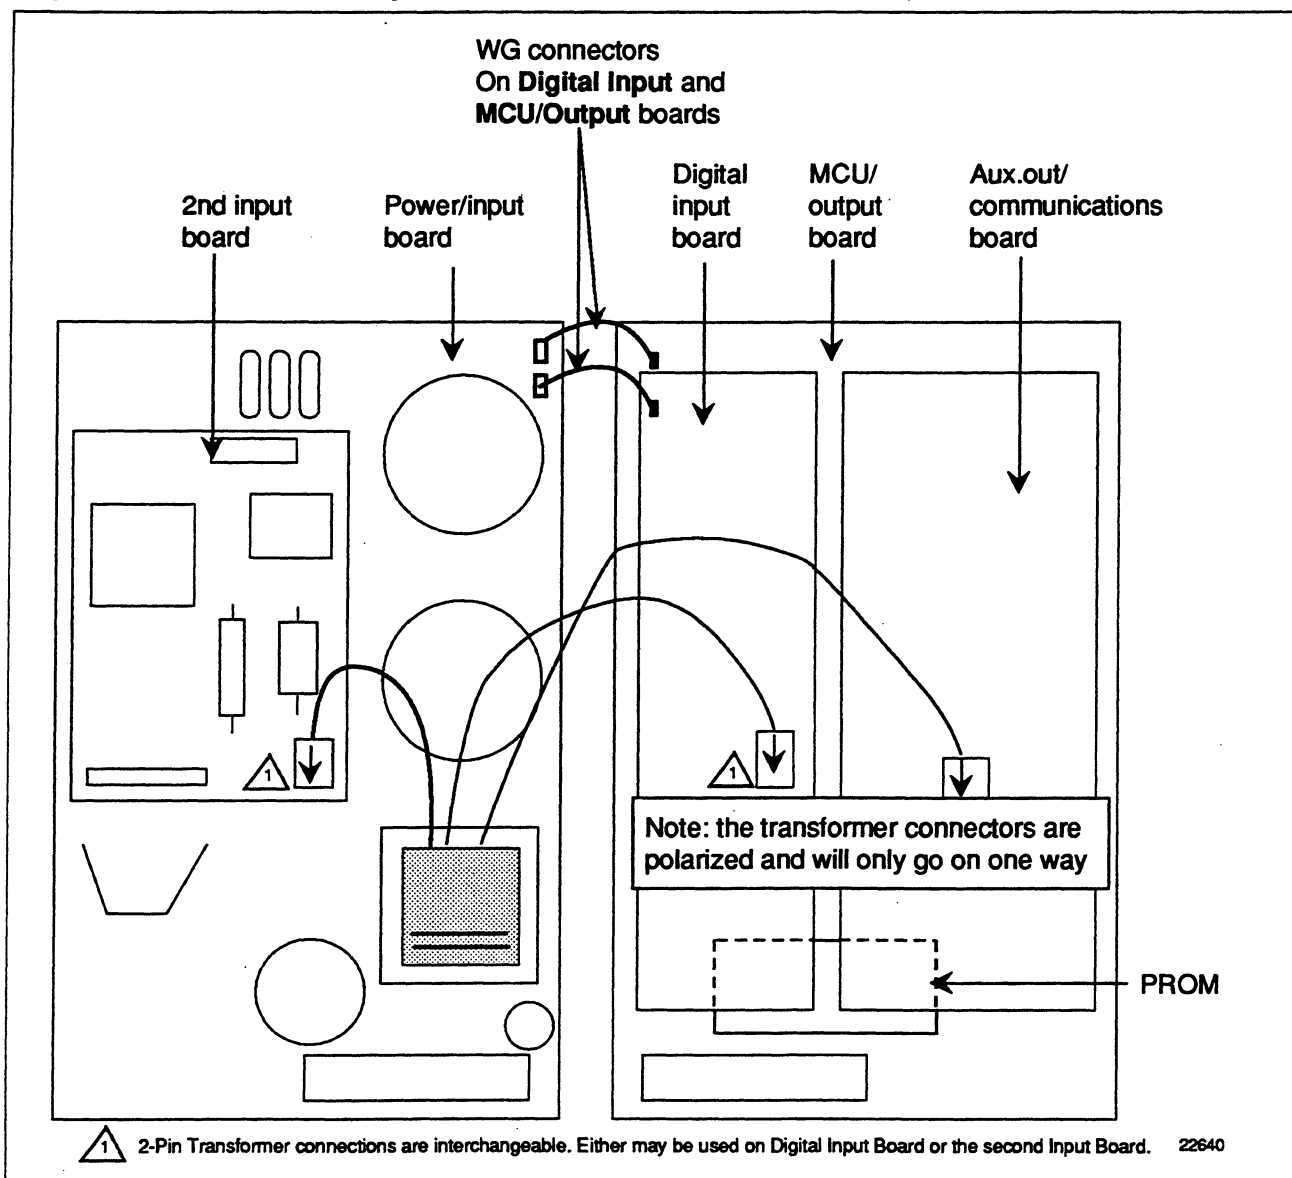Figure 9-4 Printed Wiring Board Identification



Continued on next page

## 9.8 Parts Replacement Procedures, *Continued*

### 2nd input board

Follow the procedure listed in Table 9-19 to replace the Second Input board—P/N 30756715-501.

Table 9-19 Second Input Board Replacement Procedure

Step	Action
1	Remove the chassis from the case. See Figure 9-1.
2	Remove the printed wiring boards from the chassis. See Figure 9-3.
3	Lay the boards flat and identify the 2nd Input board. See Figure 9-4.
4	Remove the transformer plug from connector J14.
5	The 2nd Input board is attached to the Power Input board by three mounting posts. Locate these posts under the power input board.
6	Use a small pliers and squeeze the ends of each post together and push it up through the board. Remove 2nd Input board.
7	Orient the new 2nd Input board onto the Power Input board and push the mounting posts down through the Power Input board until they click into place.
8	Replace the transformer plug onto connector J14.
9	Slide the printed wiring boards back into the chassis. Make sure the connections to the display/keyboard assembly are made and that the release points on the chassis snap into place on the printed wiring boards.
10	Reinstall the chassis into the case. Push in hard, then tighten screw.

*Continued on next page*

## 9.8 Parts Replacement Procedures, Continued

### Power Input board

Follow the procedure listed in Table 9-20 to replace the Power Input board—P/N 30756669-502(90 to 264Vac) or 30756669-503(24Vac/dc).

Table 9-20 Power Input Board Replacement Procedure

Step	Action
1	Remove the chassis from the case. See Figure 9-1.
2	Remove the printed wiring boards from the chassis. See Figure 9-3.
3	Lay the boards flat and identify the Power Input board. See Figure 9-4.
4	Remove the 2nd Input board, if present. See procedure in Table 9-19.
5	Remove the transformer connections to the Digital Input board and Aux.Out/Communications board, if present.
6	Remove the connector from plug WG if present (current output models only). Slide a small screwdriver under the connector and lift the release.
7	Replace the Power Input board.
8	Reinstall WG connector and transformer connections to Digital Input board and Aux.Out/Communications board, if present.
9	Reinstall the 2nd Input board. See procedure in Table 9-19.
10	Slide the printed wiring boards back into the chassis. Make sure the connections to the display/keyboard assembly are made and that the release points on the chassis snap into place on the printed wiring boards.
11	Reinstall the chassis into the case. Push in hard, then tighten screw.

*Continued on next page*

## 9.8 Parts Replacement Procedures, *Continued*

### Digital Input board

Follow the procedure listed in Table 9-21 to replace the Digital Input board—P/N 30756696-501.

Table 9-21 Digital Input Board Replacement Procedure

Step	Action
1	Remove the chassis from the case. See Figure 9-1.
2	Remove the printed wiring boards from the chassis. See Figure 9-3.
3	Lay the boards flat and identify the Digital Input board. See Figure 9-4.
4	Remove the transformer plug from connector J9.
5	The Digital Input board is attached to the MCU/output board by three mounting posts. Locate these posts under the MCU/output board.
6	Use small pliers and squeeze the ends of each post together and push it up through the board. Remove the Digital Input board.
7	Orient the new Digital Input board onto the MCU/Output board and push the mounting posts down through the MCU/Output board until they click into place.
8	Replace the transformer plug onto connector J9.
9	Slide the printed wiring boards back into the chassis. Make sure the connections to the display/keyboard assembly are made and that the release points on the chassis snap into place on the printed wiring boards.
10	Reinstall the chassis into the case. Push in hard, then tighten the screw.

*Continued on next page*

## 9.8 Parts Replacement Procedures, Continued

### Aux.Out/ communications board

Follow the procedure listed in Table 9-22 to replace the following boards:

- Auxiliary Output Board—P/N 30756687-501
- DMCS Communications Board—P/N 30756690-501
- RS422/485 Communications Board—P/N 30756693-501

Table 9-22 Aux.Out/Communications Board Replacement Procedure

Step	Action
1	Remove the chassis from the case. See Figure 9-1.
2	Remove the printed wiring boards from the chassis. See Figure 9-3.
3	Lay the boards flat and identify the Auxiliary Output or the Communications board. See Figure 9-4.
4	Remove the transformer plug from connector J8.
5	The Aux.Out/Communications board is attached to the MCU/Output board by three mounting posts. Locate these posts under the MCU/Output board.
6	Use small pliers and squeeze the ends of each post together and push it up through the board. Remove the Aux.Out/Communications board.
7	If you are replacing a Communications Board, a new PROM is supplied with the board. Locate the PROM (shown in Figure 9-4) and gently pry out the old PROM. Orient the new PROM supplied and gently press into place.
8	Orient the new Aux.Out/Communications board onto the MCU/Output board and push the mounting posts down through the MCU/Output board until they click into place.
9	Replace the transformer plug onto connector J8.
10	Slide the printed wiring boards back into the chassis. Make sure the connections to the keyboard assembly are made and that the release points on the chassis snap into place on the printed wiring boards.
11	Reinstall the chassis into the case. Push in hard, then tighten the screw.

*Continued on next page*

## 9.8 Parts Replacement Procedures, Continued

### MCU/output board

Follow the procedure listed in Table 9-23 to replace the following MCU/output boards:

- Current Output—P/N 30756718-502
- Relay Output—P/N 30756718-503

Table 9-23 MCU/Output Board Replacement Procedure

Step	Action
1	Remove the chassis from the case. See Figure 9-1.
2	Remove the printed wiring boards from the chassis. See Figure 9-3.
3	Lay the boards flat and identify the MCU/Output board. See Figure 9-4.
4	Each option board is held onto the MCU/Output board with three posts.. Locate these posts under the MCU/Output board.
5	Use small pliers and squeeze the ends of each post together and push it up through the board. Remove the option boards present.
6	Remove the transformer connections to the Digital Input board and the Aux.Out/Communications board, if present.
7	Remove the Digital Input Board, if present. See Table 9-21.
8	Remove the Aux.Out/Communications board, if present. See Table 9-22.
9	Remove the connector from plug WG. Slide a small screwdriver under the connector and lift the release.
10	Replace the MCU/Output board.
11	Reinstall the Digital Input board, if present, onto the new MCU/Output board.
12	Reinstall the Aux.Out/Communications board, if present, onto the new MCU/Output board.
13	Reinstall the WG connector and the transformer connectors to the Digital Input board and Aux.Out/Communications board, if present.
14	Slide the printed wiring boards back into the chassis. Make sure the connections to the display/keyboard assembly are made and that the release points on the chassis snap into place on the printed wiring boards.
15	Reinstall the chassis into the case. Push in hard, then tighten the screw.

## 9.9 Maintenance

### Cleaning

---

If you find it necessary to clean the elastomer bezel, use mild soapy water.

---






## Section 10 – Parts List

### 10.1 Exploded View

#### Introduction

Figure 10-1 is an exploded view of the UDC 3000 Controller. Each part is labeled with a key number. The part numbers are listed by key number in Table 10-1. There is a list of parts not shown in Table 10-2.

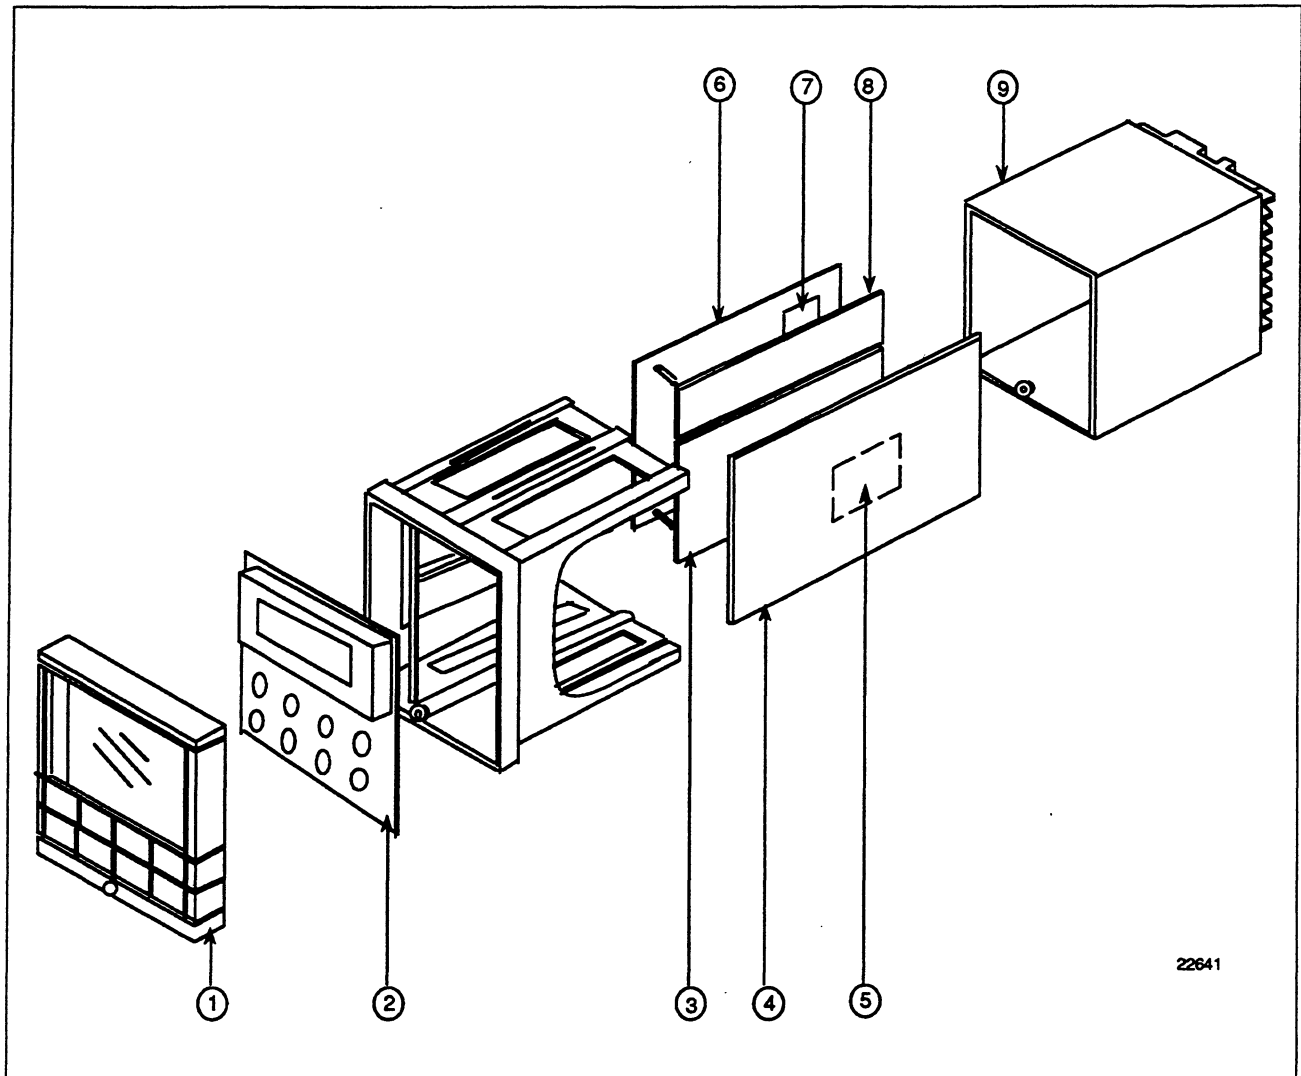Figure 10-1 UDC 3000 Exploded View



*Continued on next page*

## 10.1 Exploded View, Continued

### Parts Identification

Table 10-1 lists the part numbers for the key numbers shown in the exploded view.

Table 10-1 Parts Identification

Key Number	Part Number	Description	Quantity
1	30756667-501	Bezel Assembly - Gray	1
2	30756672-501	Display/Keyboard Printed Wiring Assembly	1
3	30756687-501 30756690-501 30756693-501	Auxiliary Output Printed Wiring Board DMCS Communications Printed Wiring Board (includes new PROM) RS422/485 Communications Printed Wiring Board (includes new PROM)	1
4	30756669-502 30756669-503	Power/Input Printed Wiring Board 90-264Vac Power/Input Printed Wiring Board 24Vac/dc	1
5	30756715-501	2nd Input Printed Wiring Board	1
6	30756718-502 30756718-503	Current Output MCU/Output Printed Wiring Board Relay Output MCU/Output printed Wiring Board	1
7	30755306-501 30756725-501 30756679-501	Relay, Electromechanical Relay, Solid State 1 Amp Open Collector Output Printed Wiring Jumper	1 per kit
8	30756696-501	Digital Input Printed Wiring Board	1
9	30756721-501	Case Assembly	1

*Continued on next page*

## 10.1 Exploded View, Continued

### Parts not shown

Table 10-2 lists the part numbers of the parts not shown in the exploded view.

Table 10-2 Parts Not Shown

Part Number	Description	Quantity
30731996-506	4-20 mA Resistor Assembly, 250 Ohms	1
30754465-501	0-10 Volt Input Resistor Assembly, 100K Pair	1
30732481-501 30732481-502	Varistor, 120V Varistor, 240V	1
30755050-001	Mounting Kit	1
30756746-501	Snubber Assembly	1
30756764-002	Rear Cover Kit	1
30755223-002 30755223-003	DIN Adapter Kit, Blue DIN Adapter Kit, Gray	1
30756774-501	Accutune Prom Upgrade	1
30756775-501	Accutune/Setpoint Programming Prom Upgrade	1
30757088-501	Cold Junction Resistor Kit	1
30756018-003	External Relay, Solid State 10 Amp	1
30756682-501	Adapter (New chassis to old case)	1
30756683-001	NEMA3 Gasket (Panel to case)	
30757215-001	NEMA4 Front Face Kit	1



## Section 11 – Appendix A – Manual Tuning

### 11.1 Overview

---

#### Introduction

When you tune a controller, there are some things to consider:

- Process Characteristics - Gain, Time Constants, etc.
- Desired response - Minimal overshoot

Basically, controller tuning consists of determining the appropriate values for the Gain (PB), Rate (Derivative), and Reset (Integral) time tuning parameters (control constants) that will give the control you want.

Depending on the characteristics of the deviation of the process variable from the setpoint, the tuning parameters interact to alter the controller's output and produce changes in the value of the process variable.

Since each parameter responds to a specific characteristic of the deviation, you may not need a combination of all three. It depends on the process characteristics and the desired control response.

---

#### Tuning technique

You can estimate a starting point and the tuning parameters required to give the desired controller response and with some experience become proficient with this method.

An alternate approach is to rely on a tuning technique. In practice, tuning techniques usually do not give exactly the type of response desired; thus, some final adjustments to the tuning parameters must be made.

However, you should at least obtain a reasonable starting point from which the desired response characteristics can be obtained.

---

#### Controller tuning procedures

There are three procedures for tuning the controller:

- Time, Position, or Current Proportional simplex control,
- Duplex Time or Current Proportional control,
- Two sets of tuning constants for single output operation.

The suggested procedures describe how to establish and store values of Gain (PB), Rate, and Reset time constants for your process. You must know the type of control and algorithm your controller has.

---

#### Tuning aids

A graphic recorder (such as Honeywell model DPR, DR4500, or VP131) connected to the process variable will make it easier to determine when the oscillations are constant and also the time for one oscillation. If a recorder is not available, you can use a stop watch to time the oscillation of the process variable displayed on the controller.


---

## 11.2 Time, Position, or Current Proportional Simplex Control

### Procedure

The procedure listed in table 11-1 gives you the steps for manually tuning a controller with Time, Position, or Current proportional simplex control.

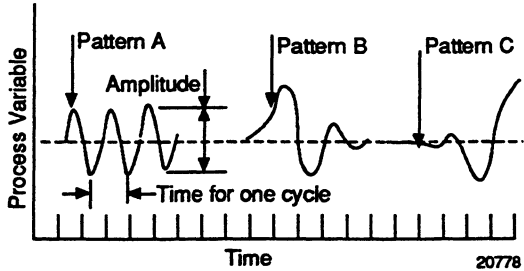Table 11-1 Manual Tuning Procedure for Simplex Control

Step	Action
1	In Manual Mode, adjust the output to bring the PV (Process Variable) near the desired value.
2	Set the Rate time to 0 minutes and set the Reset time to the maximum value (50.00 minutes) or set repeats/min to the minimum value to minimize reset action  If applicable, set the CYCLE TIME to 4 seconds and DEADBAND to 0.5.
3	Increase GAIN (decrease PB) significantly. Try a factor of 10.
4	Adjust the local setpoint to equal PV and switch to Automatic control mode.
5	Increase the setpoint by 5 or 10% and observe the process variable response.
6	If the PV oscillates, continue to step 7. If it does not oscillate, return to the original setpoint and increase GAIN (decrease PB) again by a factor of 2, and repeat step 5.
7	<p>Compare the oscillations with the figure below:</p>  <p style="text-align: right;">20778</p> <ul style="list-style-type: none"> <li>• If the oscillation matches pattern A, go to step 8.</li> <li>• If the oscillation matches pattern B, increase GAIN (decrease PB) by a factor of 2 and repeat steps 4 to 6.</li> <li>• If the oscillation matches pattern C, decrease GAIN (increase PB) by a factor of 0.8 and repeat steps 4 to 6</li> </ul> <p>The amplitude of the cycle is immaterial, but all of the elements of the loop must be within the operating range (i.e., the valve must not go full open or closed).</p>
8	Record the current value of GAIN (or PB) and measure and record the value of time for one completed oscillation of PV.

*Continued on next page*

# 11.2 Time, Position, or Current Proportional Simplex Control,

Continued

**Procedure, continued**

**Table 11-1 Manual Tuning Procedure for Simplex Control, continued**

Step	Action
9	Select the proper set of formulas from Table 11-2. Use the values of Gain (or PB) and time (in minutes) in the formulas to arrive at the controller's tuning parameters settings.
10	<p>Enter the values of GAIN (or PB), RATE, and RESET in minutes (or repeats per minute) into the UDC 3000 controller and verify that the PV response is adequate.</p> <p>Make additional trimming adjustments, if necessary, to fine tune the controller per the guidelines shown below:</p> <p>TO REDUCE OVERSHOOT Less Gain (more PB) perhaps a longer Rate time.</p> <p>TO INCREASE OVERSHOOT OR INCREASE SPEED OR RESPONSE More Gain (less PB), perhaps shorter Rate time.</p>

**Manual tuning formulas** Table 11-2 lists the formulas used in the procedure listed in Table 11-1.

**Table 11-2 Manual Tuning Formulas**

	Units	
	GAIN and RESET TIME in <u>Minutes</u> Repeat	% PROPORTIONAL BAND and RESET ACTION in <u>Repeats</u> Minutes
Proportional (P) only Use PD+MR Algorithm (i.e. No Reset)	GAIN = Measured Gain x 0.5 RESET TIME = 50.00 (minimum reset) RATE = 0	%PB = Measured PB x 2 RESET ACTION = 0.02 (repeats/minute) RATE = 0
Proportional + Reset (PI) (No Rate)	GAIN = Measured Gain x 0.5 RESET TIME = $\frac{\text{Measured Time}}{(M/R)}$ 1.2 RATE = 0	%PB = Measured PB x 2.2 RESET ACTION = $\frac{12}{\text{Measured Time}}$ (R/M) RATE = 0
Proportional + Reset + Rate (PID)	GAIN = Measured Gain x 0.6 RESET TIME = $\frac{\text{Measured Time}}{2}$ RATE = $\frac{\text{Measured Time}}{8}$	%PB = Measured PB x 1.7 RESET ACTION = $\frac{2}{\text{Measured Time}}$ RATE = $\frac{\text{Measured Time}}{8}$

## 11.3 Time Proportional Duplex or Current Proportional Duplex Control

---

### Introduction

For HEAT/COOL applications.  
Tune the controller with the output above 50% for Heat and below 50% for Cool.

---

### HEAT/COOL prompts

The "TUNING" function prompts for HEAT/COOL are:

---

#### HEAT

PB or GAIN  
RSETMIN or RSETRPM  
RATEMIN  
CYCSEC

---

#### COOL

GAIN2  
RSET2MIN or RSETRPM2  
RATE2MIN  
CYC2SEC

---

## 11.4 Two Sets of Tuning Parameters for Single Output Operation

---

### Introduction

You can use two sets of tuning constants for single output types and tune each set separately.

---

### TWO SETS prompts

The "TUNING" function prompts for two sets are:

---

#### PID SET 1

PB or GAIN  
RSETMIN or RSETRPM  
RATEMIN  
CYCSEC

---

#### PID SET 2

GAIN2  
RSET2MIN or RSETRPM2  
RATE2MIN  
CYC2SEC

---



# Section 12 - Appendix B

## How to Apply Digital Instrumentation in Severe Electrical Noise Environments

### 12.1 Overview

---

**Guideline overview**

Products that incorporate digital technology provide recognized performance advantages over conventional analog instrumentation used for process control. These advantages can result in better product uniformity and greater overall efficiency when used correctly.

There are, however, certain guidelines regarding installation and wiring which must be carefully followed in order to achieve this performance. In addition to the traditional precaution of the separation of signal and power wiring in separate conduits, other measures must be taken to minimize the effects of electromagnetic interference (EMI) and radio frequency interference (RFI) on the operation of the equipment. Otherwise, if high level, short duration, noise spikes are permitted to enter the digital equipment, the noise can be transferred into the system's logic networks and can be misinterpreted as signal data, resulting in erroneous system operation and other unpredictable responses.

---

**What's in this section**

This section contains the following information:

	<b>Topic</b>	<b>See Page</b>
12.1	Overview	199
12.2	Potential Noise Sources	200
12.3	Prevention Methods	201
12.4	Recommended Wiring Practices	202
12.5	Power Source Considerations	204
12.6	Noise Suppression at the Source	205

---

## 12.2 Potential Noise Sources

---

### Overview

Noise can enter electronic equipment via three methods of coupling, namely:

- Capacitive (or electrostatic)
  - Inductive (or magnetic)
  - Impedance.
- 

### Capacitive and inductive coupling

Capacitive and inductive coupling have the same essential effect — they couple current or voltage, without any actual connection of the two circuits. Impedance coupling requires a connection between the two circuits. Typical noise-generating sources that could affect electronic equipment through capacitive and inductive coupling include:

- Relay coils
  - Solenoids
  - AC power wires — particularly at or above 100 Vac
  - Current carrying cables
  - Thyristor field exciters
  - Radio frequency transmissions.
- 

### Impedance coupled noise

Impedance-coupled noise may enter by way of the lines used to power the digital equipment or by way of improper grounding. Most power lines, at typical industrial locations, are far from noise-free. The noise on them can be generated in many ways, but are nearly always associated with switching circuits of some nature.

These include:

- Large relays
  - Contactors
  - Motor starters
  - Business and industrial machines
  - Power tools
  - HID (high intensity discharge) lights
  - Silicon controlled rectifiers (SCRs) that are phase-angled fired.
-

## 12.3 Prevention Methods

---

### Introduction

There are three ways to prevent electrical noise from interfering with the operation of the electronic digital equipment.

- Built-in noise rejection
  - Separation of signal and power lines
  - Noise suppression at source
- 

### Built-in noise rejection

The first method is to design the digital equipment with a high degree of noise rejection built-in. This includes housing the equipment in a case that will provide shielding, liberal use of noise rejection filters and opto-isolators, and the use of noise suppressors on potential noise sources within the equipment itself. This, of course, is the responsibility of the manufacturer who usually performs extensive laboratory and field testing of newly designed digital equipment to insure the adequacy of its immunity to noise. As a minimum requirement, the equipment should be able to pass the tests outlined in the IEEE Standard 472-1974 (*Surge Withstand Capacity Tests*).

---

### Signal and power line separation

The second method is to prevent noise from getting on the signal and power lines that are connected to the equipment. This is achieved by proper separation and shielding of those lines. In some cases, separate power lines or special power line regulation or filtering may be required for satisfactory electronic digital equipment operation. It is the responsibility of the installer to follow good wiring practices.

---

### Suppression at the source

The third prevention method is to suppress the noise at its source. This is the most effective but also the most difficult because it is not easy to identify all of the potential noise sources in a typical industrial installation. Therefore, "suppression" is usually a last resort for those extreme situations where the other methods are insufficient by themselves. See *Noise Suppression at Source* which follows.

---

## 12.4 Recommended Wiring Practices

### General rules

- All wiring must conform to local codes and practices.
- Wires carrying similar types of signals (Table 12-1) may be bundled together, but bundles with different types of signals must be kept separated to prevent inductive or capacitive coupling.

### Wire bundling

Table 12-1 shows what wiring should be bundled together to prevent inductive or capacitive coupling.

Table 12-1 External Wiring

Wire Function		Bundle No.	Are Shielded Twisted Wires Recommended?
No.	Type		
1 2 3	HIGH VOLTAGE Line Power Earth Ground Line Voltage Digital I/O	1	NO
4 5	ANALOG I/O Process Variable RTD Thermocouple dc Millivolts Low level (<100V) 4-20 mA dc 1-5 Vdc	2	YES
6 7	DIGITAL I/O Low Voltage (<100V) Computer Interface	3	YES

*Continued on next page*

## 12.4 Recommended Wiring Practices, Continued

---

### Additional rules

Please observe these additional rules for wire bundling:

- For distances over five (5) feet, and when shielding is recommended, use a separate metal tray or conduit for each bundle. Where conduits or trays are not practical, use twisted wires with a metal overbraid and provide physical separation of at least one foot.
  - Tray covers must be in continuous contact with the side rails of the trays.
  - When unlike signal levels must cross, either in trays or conduits, they should cross at a 90-degree angle and at a maximum spacing. Where it is not possible to provide spacing, a grounded steel barrier or grid should be placed between the unlike levels at the crossover points.
  - Trays containing low level wiring should have solid bottoms and sides. Tray covers must be used for complete shielding. Tray cover contact with side rails must be positive and continuous to avoid high reluctance air gaps, which impair shielding. Trays for low level cables should be metal and solidly grounded.
  - Wires containing low level signals should not be routed near any of the following:
    - Contactors
    - Motors
    - Generators
    - Radio transmitters
    - Wires carrying high current that is being switched on and off.
  - Use a 12-gage (or heavier) insulated stranded wire for the ground connection. Attach it firmly to a proven good earth ground such as a metal stake driven into the ground.
  - All shields should be grounded at one end only — preferably the instrument end.
-

## 12.5 Power Source Considerations

### Operate within limits

The AC power for the digital electronic equipment must be within the voltage and frequency limits specified for that equipment. Attempts to operate outside the specified limits will result in no performance. For those installations where the supply voltage will not stay within the specified limits, a ferroresonant transformer, for voltage resolution, should be used.


### Independent AC source

For protection against noise, the AC source for the digital electronic equipment should be independent of all other loads especially when switching loads are involved. For example, it should not provide power for air-conditioning, convenience outlets, lighting, motors, or similar noise-generating devices. To obtain electrical isolation (see Figure 12-1) a separate transformer is required to supply power to the digital equipment. For additional noise and transient rejection, shielded primary and secondary windings may be required. And, if necessary, power line filters may be added to attenuate noise signals that have a higher frequency than the power line frequency.

### Transformer for digital equipment

Figure 12-1 is an illustration of a separate transformer required to supply power to digital equipment.

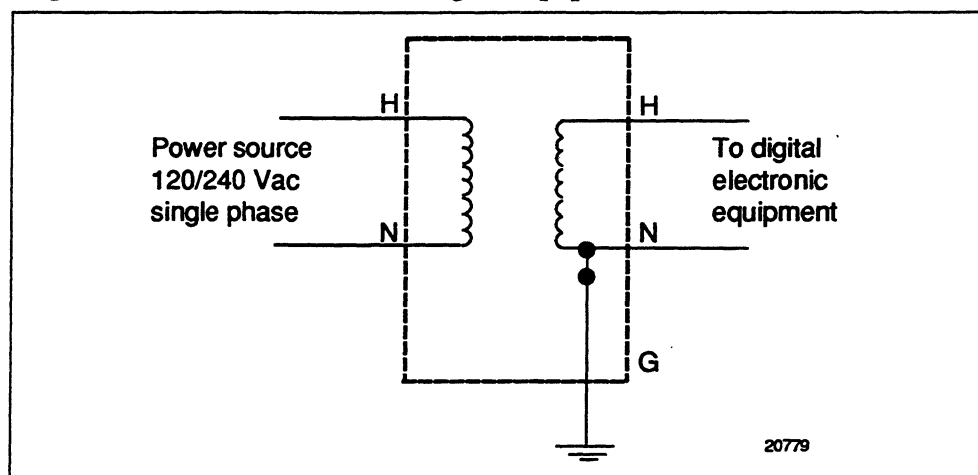Figure 12-1 Transformer for Digital Equipment



## 12.6 Noise Suppression at the Source

### Introduction

Generally speaking, when good wiring practices are used with well-designed digital electronic equipment, no further noise protection is necessary. However, in some severe electrical environments, the magnitude of the electrical noise is so great that it must be suppressed at the source. In most control cabinets, the main sources of noise are motor starters, contactors, relays, and switching gear. For this reason, many manufacturers of these devices supply "surge suppressors" which mount directly on the noise source, (for example, on the coil of a control relay or motor starter).

For those devices that do not have accessory "surge suppressors," resistance-capacitance (RC) circuits and/or voltage limiters such as metal varistors may be added when and where needed. This can be broken down into two categories, namely inductive loads (for example, a relay switch in series with a relay coil) and contacts.

### Inductive coils

Metal Oxide Varistors (MOVs) are recommended for transient suppression in inductive coils. An MOV is connected in parallel with the coil and is as close as physically possible to the coil (see Figure 12-2). MOV devices (listed in Table 12-2) are recommended for general purpose applications.

Table 12-2 lists part numbers for recommended MOV devices.

Table 12-2 MOV Devices

Part Number	30732481-501	30732481-502
Maximum AC	130V	275V
Energy Pulse Rating	10 Joules	15 Joules
Supplier (General Electric)	V130LA10A	V275LA15A


*Continued on next page*

## 12.6 Noise Suppression at the Source, Continued

Inductive coils,  
continued

Figure 12-2 is an illustration of transient suppression in inductive coils.

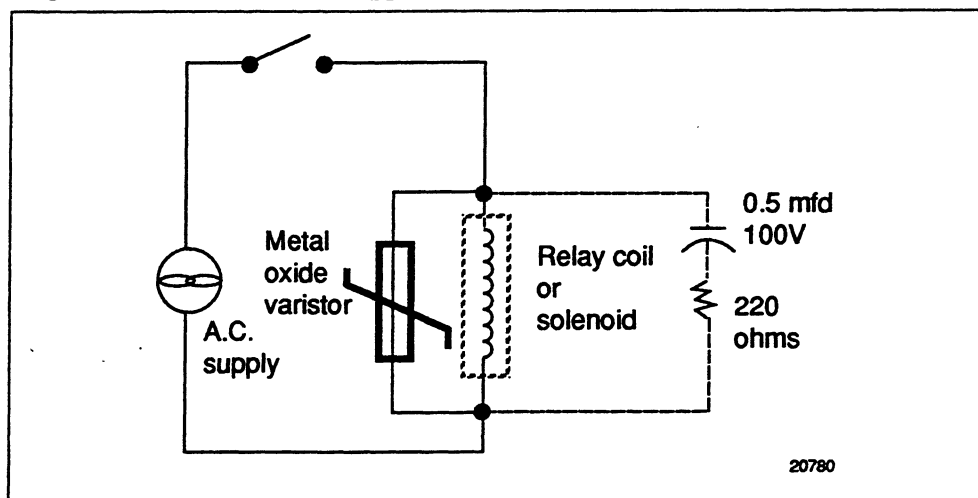Figure 12-2 Transient Suppression in Inductive Coils



Additional protection may be provided by adding an RC circuit in parallel with the MOV. This consists of a 220-ohm resistor in series with a 0.5 microfarad, 1000V capacitor. The power rating of the resistor will depend on the voltage rating of the coil (see Table 12-3).

Table 12-3 Coil Voltage vs Resistor Voltage Rating

Coil Voltage	Resistor Voltage Rating
115V	1/4 Watt
230V	1 Watt
460V	3 Watt
550V	5 Watt

*Continued on next page*



## 12.6 Noise Suppression at the Source, Continued


### Contacts

When a contact interrupts an inductive load, a certain amount of energy is stored in the load. An MOV or RC circuit in parallel with the load provides a place where this energy may be dissipated. However, if there is no MOV or RC circuit, the energy may create a visible electrical arc across the open contacts. This, in turn, results in electrical noise as well as damage to the contacts.

One way to eliminate this arc is to connect a resistor and capacitor across the contacts (see Figure 12-3). A combination of 47 ohms and 0.1 microfarads (1000 Vdc) is recommended for circuits up to 3 amps and 300 Vac. For voltages above 2000 Vac, an MOV across the contact may be added for extra protection.

Figure 12-3 is an illustration of a resistor and capacitor connected across a contact to eliminate electrical noise.

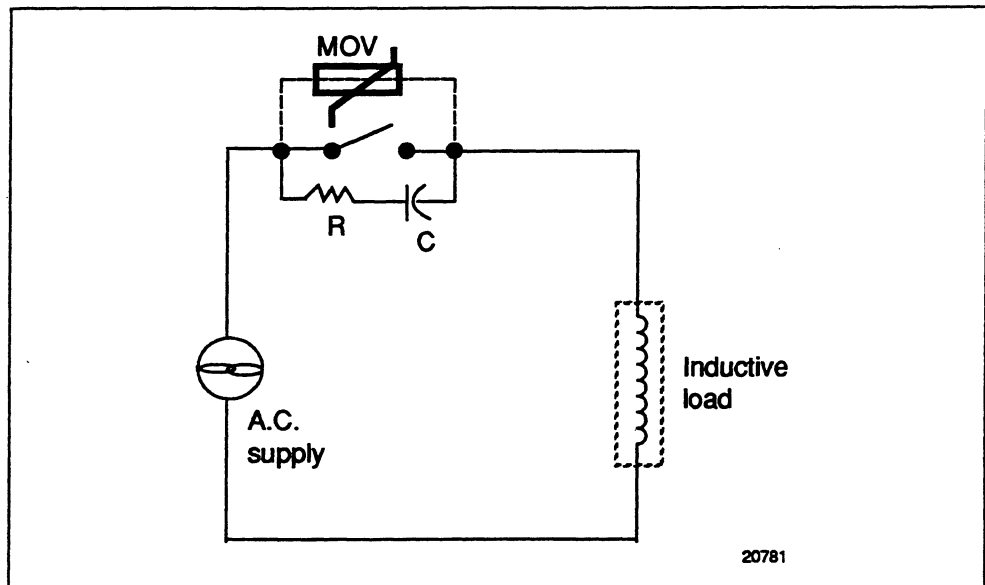Figure 12-3 Contact Noise Suppression



For large load currents, a rule of thumb is to size the capacitor so that the number of microfarads equals the number of amperes in the load current, and the resistor has the same resistance value as the load. The objective is to eliminate the visible arc.

Either discrete resistors and capacitors or packaged RC networks may be used. An RC network (47 ohms and 0.1 microfarad) is available from Honeywell as part number 30756746-001. Similar RC networks are available from Electrocube Inc. (part number RG1782-3) and from Industrial Condenser Corporation.

*Continued on next page*


## 12.6 Noise Suppression at the Source, Continued

### Contacts, continued

In DC circuits, the power dissipation under steady state condition can be eliminated by placing a diode (in series with a resistor) in parallel with the load (see Figure 12-4). The value of R should be less than or equal to the DC resistance of the inductive load.

Figure 12-4 is an illustration of DC load noise suppression.

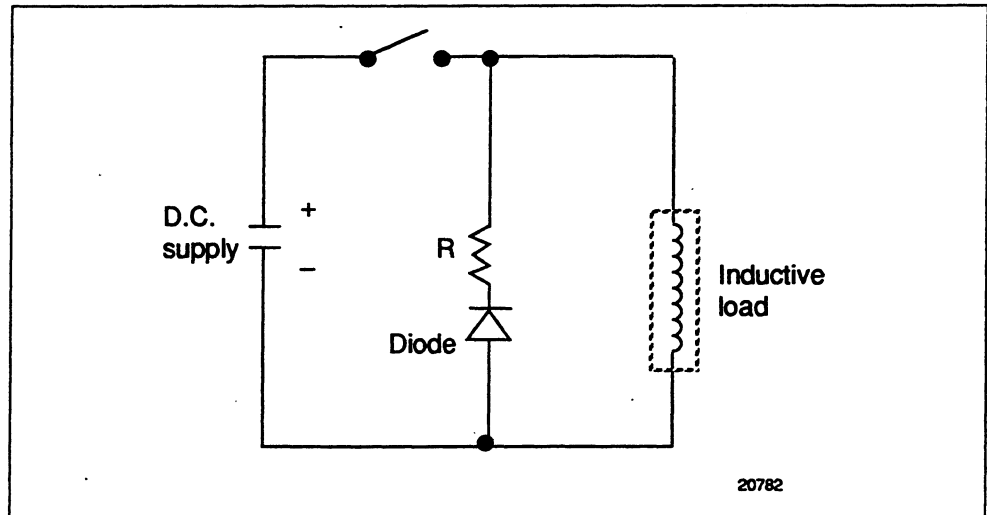Figure 12-4 DC Load Noise Suppression



# Index

---

## A

Accuracy, *6*  
Accutune, *59, 115*  
Accutune error codes, *121*  
Accutune error status, *60*  
Accutune function., *59*  
Accutune Group Function Prompts, *40*  
Accutune Set Up group, *40*  
Auto Manual Station mode: backup control feature,  
*110*  
Auto/Manual Station mode, *110*  
Automatic Mode, *94*  
Automatic switchover value, *72*  
Aux.Out/Communications Board Replacement  
Procedure, *187*  
Auxiliary output, *76*  
Auxiliary Output Board, *187*  
Auxiliary output connections, *21*  
Auxiliary output high scaling factor, *77*  
Auxiliary output low scaling factor, *77*

## B

Baud rate, *79*  
Bias, *67, 72*  
Burnout protection, *68*

## C

CALIB, *57*  
Capacitive and inductive coupling, *200*  
CE Conformity, *1, 6*  
Chassis Removal, *180*  
Cleaning, *189*  
Coil voltage vs resistor voltage, *206*  
Communication units, *80*  
Communications option connections, *23*  
Communications selection, *79*  
Communications station address, *79*  
Composite wiring diagram, *12*  
Configuration, *29*  
Configuration Prompt Definitions, *53*  
Contact Noise Suppression, *207*  
Control algorithm, *61*  
Control output direction, *74*  
Controller dropoff value, *74*  
Controller failure symptoms, *164*  
Current output /Universal output connections, *19*  
Current proportional duplex, *198*  
Cycle time, *56*  
Cycle time 2, *56*

## D

DC Load Noise Suppression, *208*  
Deadband, *75*  
Decimal point location, *65*  
Demand Tuning, *40, 115, 116*  
Diagnostic error messages, *91*  
Digital Input Board Replacement Procedure, *186*  
Digital input combinations, *78*  
Digital input selections, *77*  
Digital inputs connections, *22*  
Dimensions, *8*  
Direct acting control, *74*  
Display/keyboard assembly, *181*  
Displays and indicators, *2*  
DMCS Communications Board, *187*  
Duplex, *80, 81*

## E

Electrical considerations, *10*  
Electrical isolation, *204*  
Electrical noise, *10, 199*  
Electromagnetic interference, *199*  
Electromechanical Relay Output., *16*  
Emissivity, *68*  
End segment number, *124*  
Error code accessing, *121*  
Error messages, *163*  
External program reset, *78, 132*

## F

Failsafe output value, *75*  
Filter, *68*  
Filter for Input 2, *70*  
Function of keys, *3*  
Fuzzy Overshoot Suppression, *40, 59, 114*

## G

Gain, *55*  
Gain 2, *56*  
Grounding, *10*  
Guaranteed Soak, *125*

## H

High output limit, *74*  
Hysteresis, *75*  
Impedance coupled noise, *200*

# Index

## I,J

Input 1 actuation type, 66  
Input 1 high range value, 67  
Input 1 low range value, 67  
Input 2 high range value, 70  
Input 2 low range value, 70  
Input Calibration, 135  
Installation, 5;  
    Operating limits, 6

## K

Keys, 3

## L

Line voltage wiring, 13  
Local setpoint Change, 96  
Local setpoint source, 96  
Lockout, 57  
Loopback, 80  
Low output limit, 74  
Lower display key, 90

## M

Manual Mode, 94  
Manual reset, 56  
Manual Tuning, 195  
Manual tuning formulas, 197  
Manual tuning procedure, 196  
Manual/Auto key lockout, 57  
MAX, 57  
MCU/Output Board Replacement Procedure, 188  
Model number interpretation, 7  
Mounting: Overall dimensions, 8  
Mounting method, 9  
Mounting procedure, 9

## N

Noise, 199  
Noise rejection, 201

## O

ON/OFF, 61  
Open Collector OutputConnections, 18  
Operating limits, 6  
Operating parameters, 90  
Operation, 85  
Operator interface, 2  
Output algorithm, 63  
Output Calibration, 151  
Output change rate, 74  
Output rate down value, 74  
Output rate up value, 74  
Overshoot Suppression, 59, 114  
Overview, 1

## P,Q

Parity, 79  
Parts Identification, 192  
Parts List, 191  
PD with Manual Reset, 62  
Physical considerations, 8  
PID A, 61  
PID B, 62  
Position Proportional Backup mode, 95  
Position Proportional control output calibration, 154  
Position proportional output connections, 20  
Power Input Board Replacement Procedure, 185  
Power line frequency, 68  
Power up, 86  
Power up controller mode recall, 73  
Power up preset automatic output, 75  
Power up preset manual output, 75  
Precision Resistor, 140, 146  
Printed wiring board identification, 183  
Printed wiring board removal, 182  
Process gain, 59  
Program Record Sheet, 127  
Program state, 125  
Program termination state, 125  
Prompt hierarchy, 30  
Proportional band, 55  
Proportional band 2, 56  
Proportional band units, 75  
Protective bonding, 10

## R

Radio frequency interference, 199  
Ramp segments, 124  
Ramp unit, 125  
Ramp/Soak Profile, 123  
Ramp/Soak Profile example, 126  
Ramp/Soak Programming, 123  
Rate 2, 56  
Rate action, 55  
Rate down, 58  
Rate up, 58  
Ratio, 72  
Recycle number, 124  
Relay Output, 16  
Relay type, 64  
Remote setpoint, 72, 97  
Remote switching, 108  
Reset, 56  
Reset 2, 56  
Reset units, 75  
Reverse acting control, 74  
RS422/485 Communications Board, 187  
Run/Hold key, 57

# Index

---

## S

Second Input Board Replacement Procedure, *184*  
Security code, *57, 88*  
Setpoint high limit, *73*  
Setpoint low limit, *74*  
Setpoint Program Data Entry Procedure, *128*  
Setpoint Ramp: Configuring, *100*; Running, *101*  
Setpoint ramp final setpoint, *58*  
Setpoint ramp function, *58*  
Setpoint ramp time, *58*  
Setpoint Ramp/Soak Programming Option, *123*  
Setpoint rate, *58*  
Setpoint Select key lockout, *57*  
Setpoint selection indication, *98*  
Setpoint source, *72*  
Setpoint tracking, *73*  
Shed controller mode and output level, *80*  
Shed setpoint, *80*  
Shed time, *79*  
Shock hazard warning, *135, 151, 171*  
Signal and power line separation, *201*  
Soak segments, *124*  
Software version, *164*  
Solid State Relay Output Connections, *17*  
SP tuning, *120*  
SP Tuning, *40, 115, 118*  
SP Tuning for Duplex (Heat/Cool), *119*  
Start segment number, *124*  
Suppression at the source, *201*  
Surge suppressors, *205*  
Switch-over value, *104*

## T

Technical Assistance, *iii*  
Temperature units, *65*  
Three position step, *62*  
Three Position Step Output Calibration, *154*  
Timer, *54*  
Timer parameters, *36*  
Transformer for Digital Equipment, *204*  
Transient Suppression in Inductive Coils, *206*  
Transmitter characterization, *67*  
Troubleshooting / Service, *161*  
TUNE, *59*  
TUNE for Duplex (Heat/Cool), *117*  
Tuning criteria, *60*  
Tuning parameter sets, *71*

## U,V

UDC 3000 Exploded View, *191*

## W,X,Y,Z

WARNING—SHOCK HAZARD, *135, 151, 171*  
Wire bundling, *11, 202*  
Wiring: electrical noise precautions, *10*; wire  
bundling, *11*; Wiring the controller, *11*  
Wiring diagram, *12*  
Wiring Diagrams: Relay output, *16*



# READER COMMENTS

Honeywell's IAC Automation College welcomes your comments and suggestions to improve future editions of this and other publications.

You can communicate your thoughts to us either by mail using this form, or a toll-free telephone call.

**BY TELEPHONE:** In the U.S.A. use our toll-free number 1\*800-822-7673 (available in the 48 contiguous states except Arizona; in Arizona dial 1-602-863-5558).

**BY MAIL:** Use this form; detach, fold, tape closed, and mail to us. We would like to acknowledge your comments; please include your complete name and address.

Title of Publication: **UDC 3000 Controller Product Manual**

Publication Number: **51-52-25-07F**

Issue Date: **1/97**

Writer: **Dan O'Connor**

**COMMENTS:** \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

**RECOMMENDATIONS:** \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

NAME \_\_\_\_\_ DATE \_\_\_\_\_  
TITLE \_\_\_\_\_  
COMPANY \_\_\_\_\_  
ADDRESS \_\_\_\_\_  
CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP \_\_\_\_\_

(If returning by mail, please tape closed; Postal regulations prohibit use of staples.)

Communications concerning technical publications should be directed to:

Automation College  
Industrial Automation and Control  
Honeywell Inc.  
2820 West Kelton Lane  
Phoenix, Arizona 85023

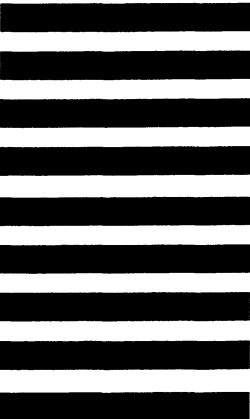
FOLD

FOLD

From: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_



NO POSTAGE  
NECESSARY  
IF MAILED  
IN THE USA



Cut Along Line

**BUSINESS REPLY MAIL**  
FIRST CLASS      PERMIT NO. 4332      PHOENIX, ARIZONA

POSTAGE WILL BE PAID BY ....

**Honeywell**

Industrial Automation and Control  
2820 West Kelton Lane  
Phoenix, Arizona 85023

Attention: Manager, Quality

FOLD

FOLD

Additional Comments:





**Honeywell**

---

**Industrial Automation and Control**  
Honeywell Inc.  
16404 North Black Canyon Highway  
Phoenix, Arizona 85023-3033

*Helping You Control Your World*